

sellEton SL-700 Floor Scale User Guide

Home » sellEton » sellEton SL-700 Floor Scale User Guide 🖫

Contents


- 1 sellEton SL-700 Floor
- Scale
- 2 Instructions
- **3 CONTACT US**
- 4 Documents / Resources
- **5 Related Posts**



sellEton SL-700 Floor Scale



Instructions

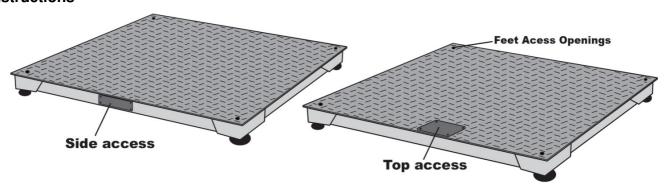

Inside Scale:

- (1) Homerun Cable
- (1) Indicator w/ U-bracket
- (1) AC Adapter
- (1) Indicator manual
- (4) Screw in Feet
- 1. Carefully open box and remove the scale
- 2. Locate access compartment (Top or Side) and remove the screws
- 3. Remove all contents from the inside compartment

NOTE: any upgrades to the order will be shipped separately, ie. indicator w/battery

- Route the homerun cable through the cable opening located inside the compartment near the underside of the scale
- 5. Close compartment latch with screws
- 6. Screw-in all 4 feet into the 4 load cells located on the underside of each corner

NOTE: Do not screw in too deep that it will touch the platform

- 7. Place scale on flat surface, if not level, lift scale slightly and adjust scale feet with a screwdriver through the feet access openings until the scale is stable
- 8. Connect the home run cable to the indicator
- 9. Plug the AC adapter to the indicator and power on the indicator
- 10. Once the indicator is powered on, the display will count down and show zero
- 11. To ensure your scale is level, place an item you know the weight of on each corner of the scale, if a corner varies, adjustments to the feet should be made
- 12. Your scale is ready for use (no calibration is needed)
- 13. If the weight is incorrect, calibration will be needed

NOTE: Please refer to your indicator manual for proper calibration steps

CONTACT US

Please call 844-735-5386 for information

For updated indicator manual, please refer to www.selletonscales.com/pages/downloads

info@selletonscales.com

844)-735-5386

www.selletonscales.com

Documents / Resources



sellEton SL-700 Floor Scale [pdf] User Guide SL-700, SL-800, Floor Scale

Manuals+,