



SellEton SL-910X Remote Display User Manual

[Home](#) » [sellEton](#) » SellEton SL-910X Remote Display User Manual 



SL-910X Remote Display
USER'S MANUAL
NOV 2023
www.selletonsscales.com


Contents

- [1 FEATURES](#)
- [2 MOUNTING](#)
- [DIMENSIONS](#)
- [3 CONNECTOR](#)
- [4 SET-UP EXAMPLE](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)


FEATURES

- Connects to your indicator to display live weight on a larger screen
- Bright LED display is readable in high and low light
- Display turns green when weight is stable and red when unstable
- 6 digit display
- Painted metal construction
- For indoor or outdoor use
- Includes two mounting brackets
- Connects to most indicators
- Ideal for use with vehicle scales, so drivers can see the weight from inside their vehicle, and proceed once the weight is green/stable
- Easy to install, connects with RS232 port

MOUNTING DIMENSIONS

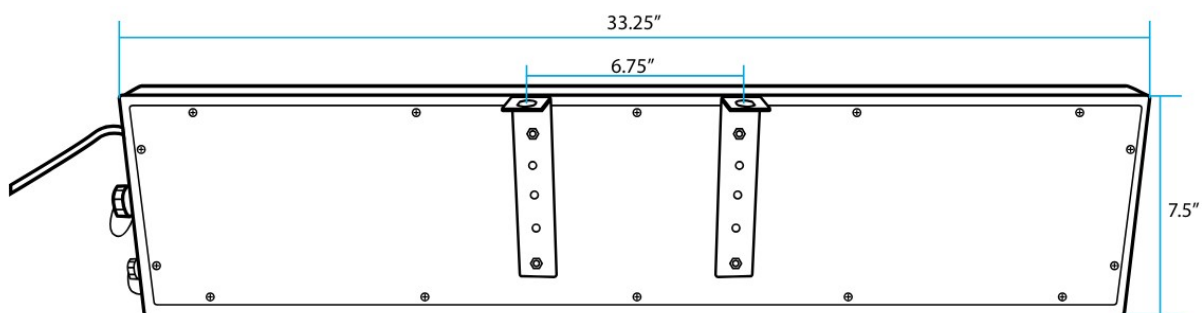

CONNECTOR

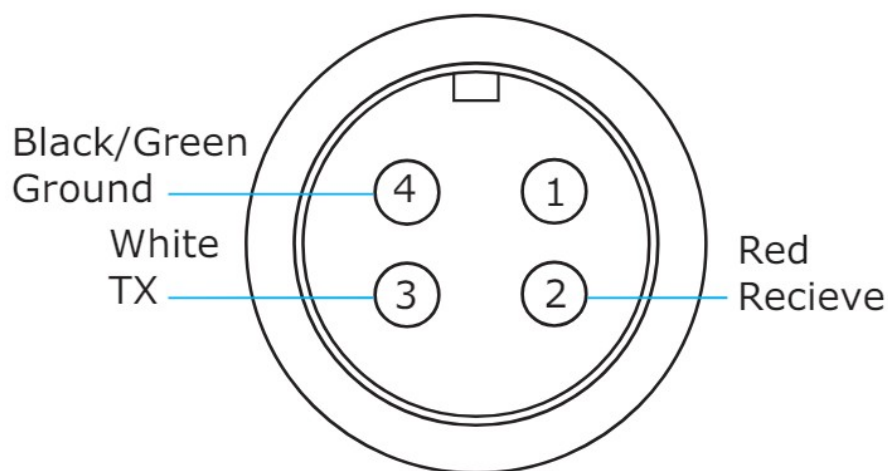

SET-UP EXAMPLE

Here is an example of how to pair your scoreboard to SellEton's most popular indicators. To set up SL-910X remote display, parameter settings need to be changed on your SL-7510 or SL-7516 indicator to allow communication between the two devices.

SL-7510 PARAMETER SETTINGS

To enter parameter settings, follow the procedure below:

1. Press and hold the HOLD and PRINT key at the same time for 2 seconds

2. Use the arrow keys to change C01 to C18
3. Press the **PRINT**  key to enter/edit the parameter setting
4. Use the arrow keys to change the settings of the below parameters
5. Press the **ACCUM** key to save and exit parameter settings

SL-7516 PARAMETER SETTINGS

To enter calibration/parameter settings, follow the procedure below:

1. Press and hold the ON/OFF and SET key at the same time for 2 seconds
2. Use the arrow keys to change C01 to C18
3. Press the **SET**  key to enter/edit the parameter setting
4. Use the arrow keys to change the settings of the below parameters
5. Press the **ON/OFF** key to save and exit parameter settings

Function	Parameter	Settings/Options
Communication Setting	C18	Set the serial interface data output method: 0 = Turn off serial interface data output 1 = Continuous sending mode, for remote display 2 = Print mode, for ticket printer 3 = Command request mode, connect computer. 4 = PC continuous sending mode, connect computer
Baud Rate	C19	0=1200 1=2400 2=4800 3=9600 (SL-910X remote display)

For more help, contact us at: [844-735-5386](tel:844-735-5386)

Remote Display Continuous Sending Mode

Note: Baud Rate must be set to 9600

Output Continuous Format																	
S T X	S W A	S W B	S W C	X	X	X	X	X	X	X	X	X	X	X	X	C R	C K S
1	2			3						4						5	6

State A			
Bits0,1,2			
0	1	2	Decimal point position
1	0	0	XXXXXX0
0	1	0	XXXXXXX
1	1	0	XXXXX.X
0	0	1	XXXX.XX
1	0	1	XXX.XXX
Bits3,4			Division
0	1		X1
1	0		X2

State B	
BitsS	function
Bits0	gross=0, net=1
Bits1	Symbol: positive=0, negative=1
Bits2	Overload (or under zero)=1
Bits3	dynamic=1
Bits4	unit: lb=0, kg=1
Bits5	Constant 1
Bits6	Constant 0

State C			
Bit2	Bit1	Bit0	unit
0	0	0	Kg or lb
0	0	1	g
0	1	0	t
Bit 3			printing=1
Bit 4			Extend display=1
Bit 5			Constant 1
Bit 6			Constant 0



Documents / Resources

	SellEton SL-910X Remote Display [pdf] User Manual SL-910X Remote Display, SL-910X, Remote Display, Display
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.