

SENA Expand Mesh Bluetooth Headset User Guide

Home » Sena » SENA Expand Mesh Bluetooth Headset User Guide The Country of the Co

Contents

- 1 SENA Expand Mesh Bluetooth Headset
- 2 Downloadable Sena Software
- **3 Product Details**
- 4 Wearing the Headset
- **5 Basic Operations**
- **6 Checking the Battery Level**
 - 6.1 Phone Pairing
 - 6.2 Using the Phone
 - **6.3 Music Control**
 - 6.4 Mesh Intercom™
- 7 Open Mesh
- 8 Enable/Disable Mic (Default: Enable)
 - 8.1 Reset Mesh
- 9 Configuration Menu
- 10 Troubleshooting
- 11 Quick Reference
- 12 Documents / Resources
 - 12.1 References
- **13 Related Posts**



 
SENA Expand Mesh Bluetooth Headset



Downloadable Sena Software

Download the Sena Outdoor App at Google Play Store or App Store.

Sena Outdoor



Download the following items at **sena.com**.





- Firmware upgrade
- Device configuration setting




· User's Guide


Follow us on Facebook, YouTube, Twitter and Instagram to check the latest information and helpful tips.


SENA Technologies, Inc.
Customer Support: sena.com

Product Details

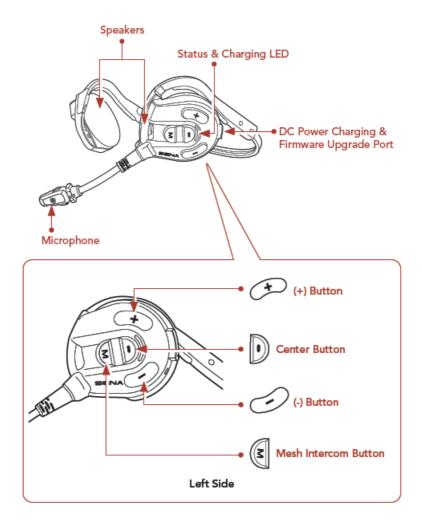

Wearing the Headset

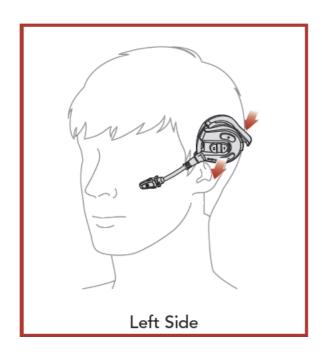

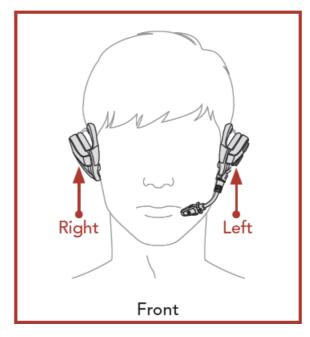

• For more information about installation, refer to the User's Guide.


Icon Legend

- TAP 1 x Tap button the specified number of times
- HOLD 10s Press and Hold button for the specified amount of time


• "Hello" Audible prompt

Basic Operations

Powering On

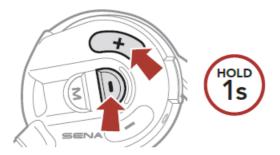

Powering Off

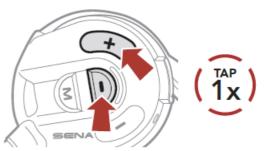


Volume Up



Volume Down



 
Checking the Battery Level



Phone Pairing



Select Expand Mesh in the list of Bluetooth devices detected.

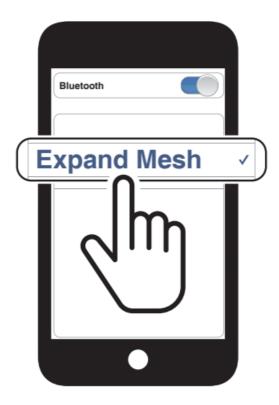

- The headset will enter the Phone Pairing mode automatically when you initially turn on the headset.
- For more information on phone pairing, refer to the User's Guide.

Using the Phone

Answer a Call



Reject a call



Music Control

End a Call



Voice Dial





Play/Pause



Track forward



Track backward





Mesh Intercom™

- Open Mesh™: communication within the same channel.
- Group Mesh™: communication within the same private group.
- For more information on Mesh Intercom, refer to the User's Guide.]

Mesh Intercom On



Mesh Intercom Off



Note: When Mesh Intercom is on, the Expand Mesh will automatically connect to nearby Expand Mesh users and the headset will be in Open Mesh (default: channel 1) initially

Open Mesh


Using the Button

1. Enter into the Channel Setting.



2. Navigate between channels.

$$(1 \rightarrow 2 \rightarrow \bullet \bullet \bullet \rightarrow 8 \rightarrow 9 \rightarrow Exit \rightarrow 1 \rightarrow \bullet \bullet \bullet)$$

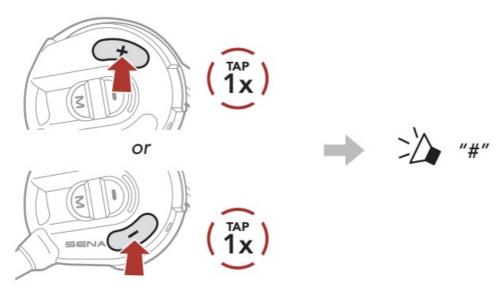

3. Save the channel.



Using the Sena Outdoor App


You can select the channel through the Sena Outdoor App.

Group Mesh

Group Mesh is a closed group intercom function that allows users to join, leave, or rejoin a group intercom conversation without pairing each headset.

1. Creating a Group Mesh

Creating a Group Mesh requires two or more Open Mesh users.

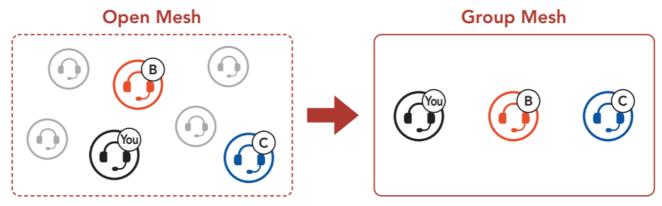

1. Users (You, B, and C) enter into Mesh Grouping to create a Group Mesh.




2. When Mesh Grouping is completed, the users (You, B and C) will hear a voice prompt on their headset as Open Mesh switches to Group Mesh.



2. Joining an Existing Group Mesh


One of the current users in an Existing Group Mesh can allow new users (one or more) in Open Mesh to join the Existing Group Mesh.

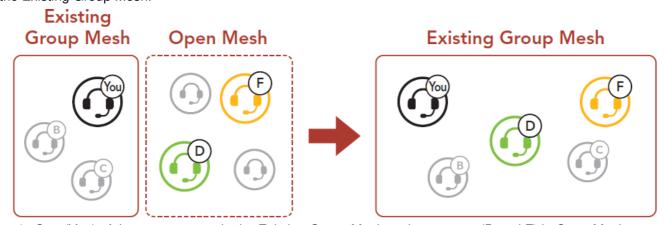

1. One (You) of the current users in the Existing Group Mesh and new users (D and F) in Open Mesh enter into Mesh Grouping to join the Existing Group Mesh.



2. When Mesh Grouping is completed, the new users (D and F) will hear a voice prompt on their headset as Open Mesh switches to Group Mesh.

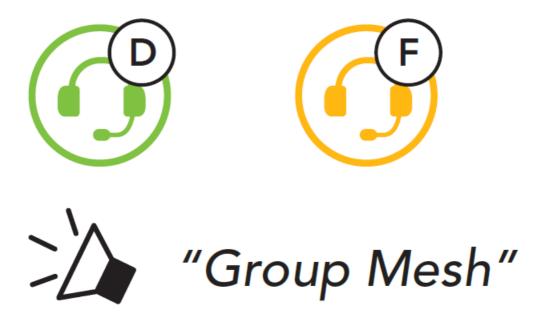

Enable/Disable Mic (Default: Enable)

Users can enable/disable the microphone when communicating in a Mesh Intercom.



Reset Mesh

If a headset in an Open Mesh or Group Mesh resets the Mesh, it will automatically return to Open Mesh (default: channel 1).




Configuration Menu

Accessing the Configuration Menu



Navigating Between Menu Options

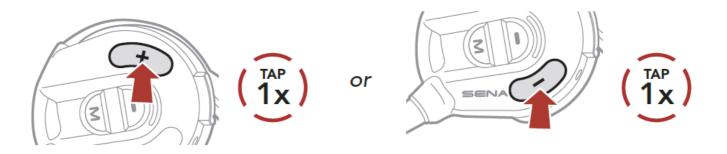


Execute Menu Options




Troubleshooting

Factory Reset

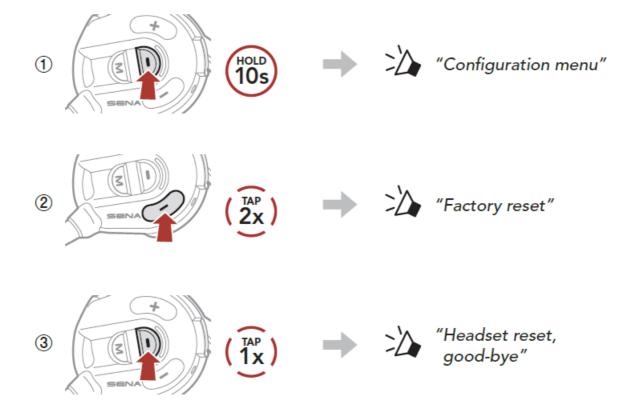



Fault Reset

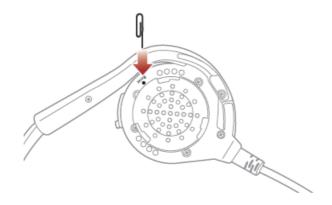


Note: Fault Reset will not restore the headset to the factory default settings.


Quick Reference

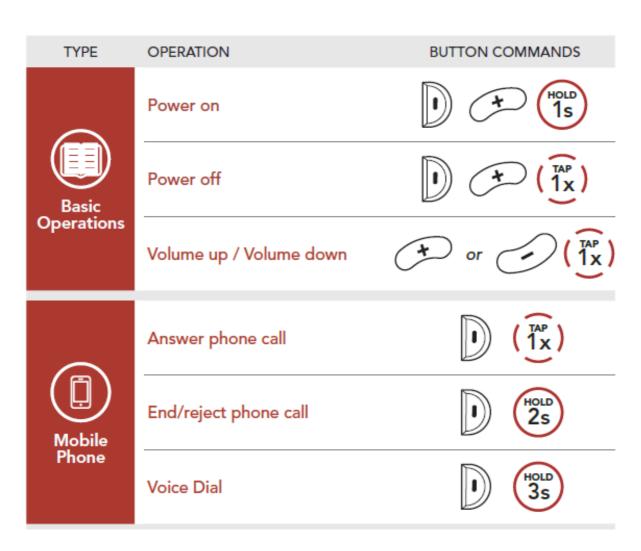


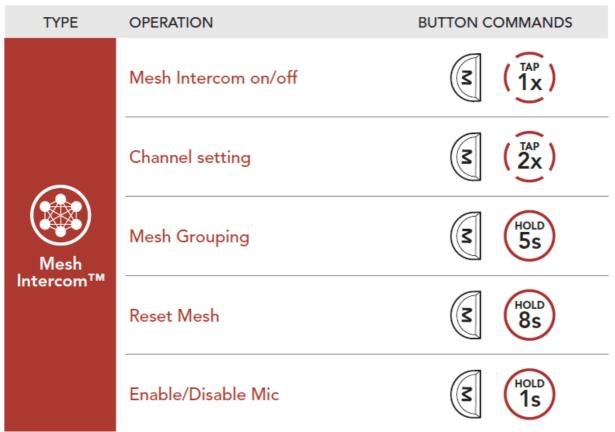

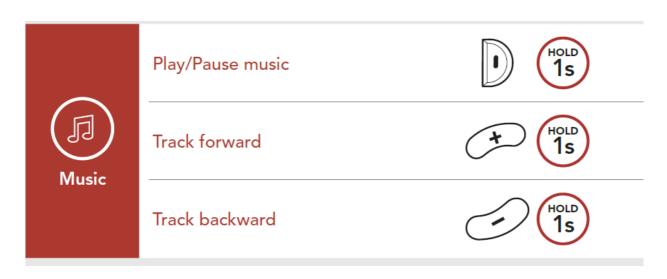

Documents / Resources

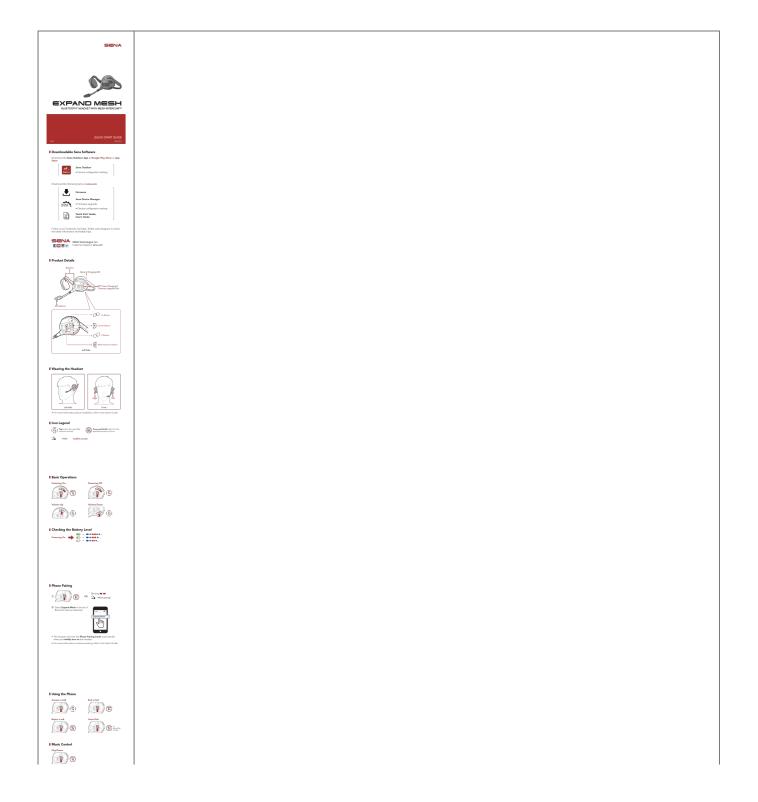

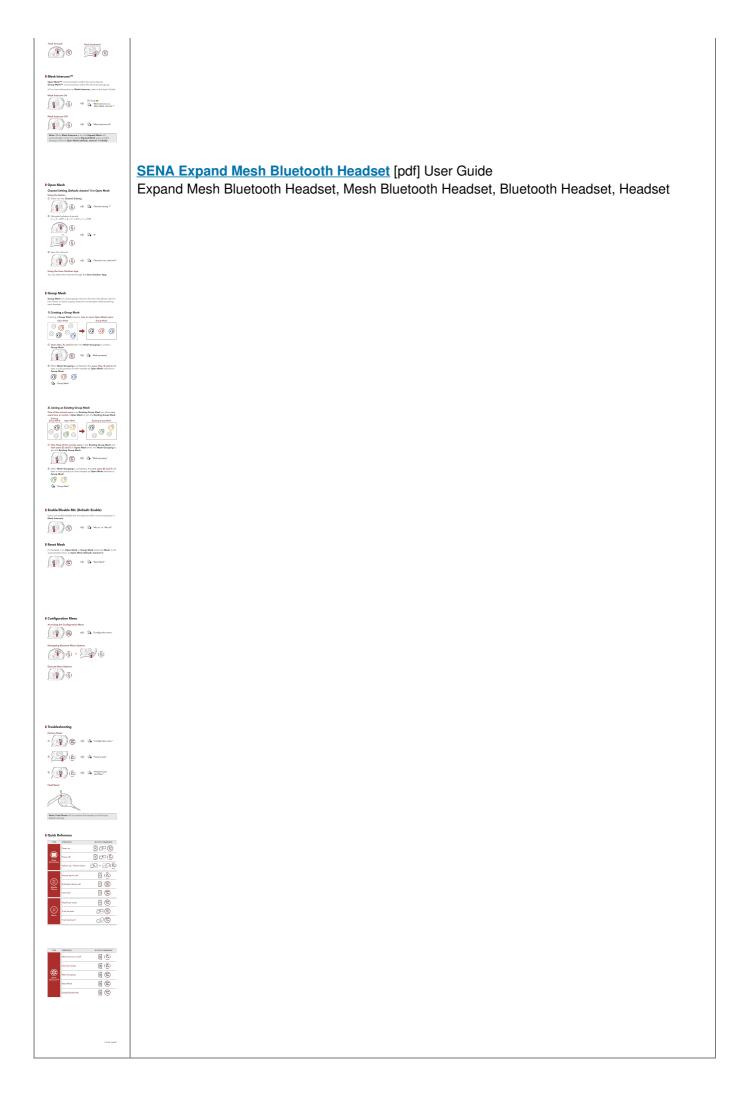

References

• End The Best Motorcycle & Action Sport Bluetooth Devices | Sena

Manuals+,