

SENA
SP164 MESH INTERCOM



SENA SP164 Mesh Intercom User Manual

[Home](#) » [Sena](#) » SENA SP164 Mesh Intercom User Manual 

Contents

- [1 SENA SP164 Mesh Intercom](#)
- [2 FEATURES](#)
- [3 Product Usage Instructions](#)
- [4 Certification and Safety Approvals FCC Compliance Statement](#)
- [5 FAQ](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

SENA

SENA SP164 Mesh Intercom



Product Specifications:

- **Model:** VIBE-UNIVERSAL
- **LED Indicators:** Red for charging, Blue for fully charged
- **Power On/Off:** via Power Button and Joystick
- **Volume Adjustment:** Joystick Up/Down
- **Bluetooth Pairing:** PIN 0000
- **Music Control:** Play/Pause, Track Forward
- **Call Handling:** Answer, End/Reject, Voice Dial
- **Mesh Intercom:** On/Off via Comm Button
- **Settings Configuration:** Long press Power Button

FEATURES



Product Usage Instructions

Power On/Off:

To power on, tap the Power Button and tap the Joystick down. To power off, repeat the same steps.

Volume Adjustment:

To adjust volume, tap the Joystick up or down as needed.

Bluetooth Pairing:

1. Power on the device.
2. Search for Bluetooth devices on your mobile phone.
3. Select 'VIBE' from the list of detected devices.
4. Enter PIN '0000' if prompted.

Legend

Long: 1.5 seconds

Charging

- **Red LED:** Charging
- **Blue LED:** Fully charged

Power On/Off

- **Power on:** Tap the Pow Button and tap the Joystick down
- **Power off:** Tap the Pow Button and tap the Joystick down

Volume Adjustment

Tap the the Joystick Up/down

Phone Pairing

- **Initially Pairing the VIBE**

The headset will automatically enter the phone pairing mode when you initially turn on the headset or in the following situation:

- **Rebooting after executing Factory Reset**

1. Tap the Pow Button and tap the Joystick down.
2. Search for Bluetooth devices on your mobile phone. Select the VIBE in the list of the devices detected on the mobile phone.
3. Enter 0000 for the PIN. Some mobile phones may not ask for the PIN.

Music Operation

- **Play or pause music:** Press the Joystick down for long.
- **Track forward:** Press the Joystick up for long.

Mobile Phone Call Making and Answering

- **Answering a call:** Tap the Joystick.
- **Ending/Reject a call:** Press the Joystick for long.
- **Voice dial:** Press the Joystick for long.

Mesh Intercom

Mesh Intercom On/Off: Tap the Comm Button

Setting

Configuration Menu: Press the Pow Button for long.

Troubleshooting: Factory Reset

If you want to restore the headset to factory default settings, use the Factory Reset in the configuration menu. The headset automatically restores the default settings and turns off.

Certification and Safety Approvals FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antennae
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. –
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Statement

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. When equipped, the distance between antenna and one's head surface is 21.5mm.

FCC Caution

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

Industry Canada(IC) Statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause interference, and

2. this device must accept any interference, including interference that may cause undesired operation of the device.

FAQ

How do I reset the device to factory settings?

To perform a factory reset:


1. Access the Configuration Menu by long-pressing the Power Button.
2. Select 'Factory Reset' option.
3. The device will automatically restore default settings and turn off.

What should I do if I encounter Bluetooth connectivity issues?

If Bluetooth connectivity problems, try the following steps:

- Ensure the device is in pairing mode.
- Check if other Bluetooth devices are causing interference.
- Restart both the headset and your mobile phone.
- If issues persist, contact customer support for further assistance.

Documents / Resources

 <p>SENA UNIVERSAL MANUAL</p> <p>Charging & Status LED</p> <p>Call Button</p> <p>Power Button</p> <p>Headset</p> <p>Microphone</p> <p>Speaker</p> <p>Volume Buttons</p> <p>Power On/Off</p> <p>Power On/Off</p> <p>Power On/Off</p>	<p>SENA SP164 Mesh Intercom [pdf] User Manual</p> <p>S7A-SP164, S7ASP164, sp164, SP164 Mesh Intercom, SP164, Mesh Intercom, Intercom</p>
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.