

SENA SRL-EXT Motorcycle MESH and Bluetooth Communication System User Guide

Home » Sena » SENA SRL-EXT Motorcycle MESH and Bluetooth Communication System User Guide 🗓









MOTORCYCLE MESH & BLUETOOTH ® COMMUNICATION SYSTEM FOR SHOEI HELMETS QUICK START GUIDE

Contents

- 1 Downloadable Sena
- **Software**
- **2 Product Details**
- 3 Installation
- 4 Mesh Intercom Antenna
- **5 Basic Operations**
- **6 Phone Pairing**
- 7 Open Mesh
- 8 Bluetooth Intercom
- 9 Last-Come, First-Served
- 10 Two-way Intercom
- 11 Configuration Menu
- 12 Troubleshooting
- 13 Quick Reference
- 14 Documents / Resources
 - 14.1 References
- **15 Related Posts**

Downloadable Sena Software

Download the SENA MOTORCYCLES App on Google Play Store or App Store.



• Device Configuration Setting

Download the following items at sena.com.




- · Firmware upgrade
- Device configuration setting



Quick Start Guide, User's Guide

Follow us on Facebook, YouTube, Twitter, and Instagram to check the latest information and helpful tips.


Product Details

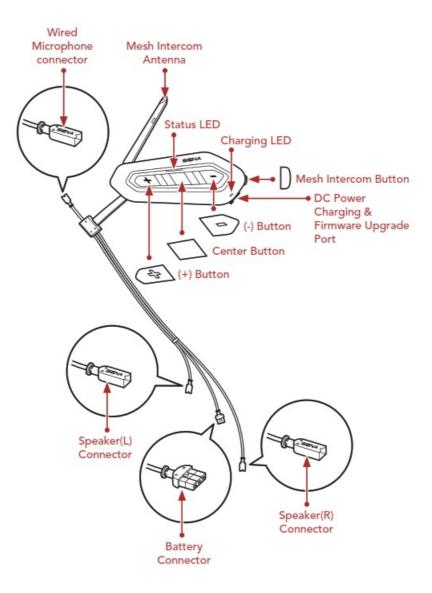


Installation

The SHOEI's RF-1400 Helmet is compatible with the SRL-EXT. The model name of the RF-1400 Helmet varies depending on the region.

 
- RF1400(US), NXR 2(EU), Z-8(JP)
- For more information about installation, refer to the User's Guide.

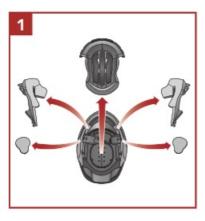

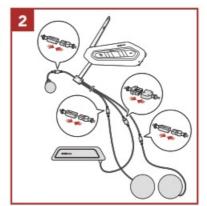
















 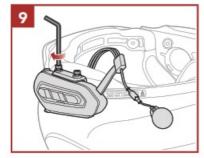


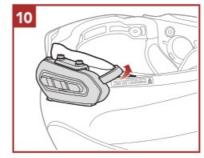

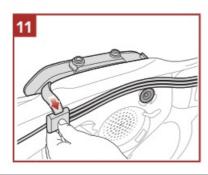










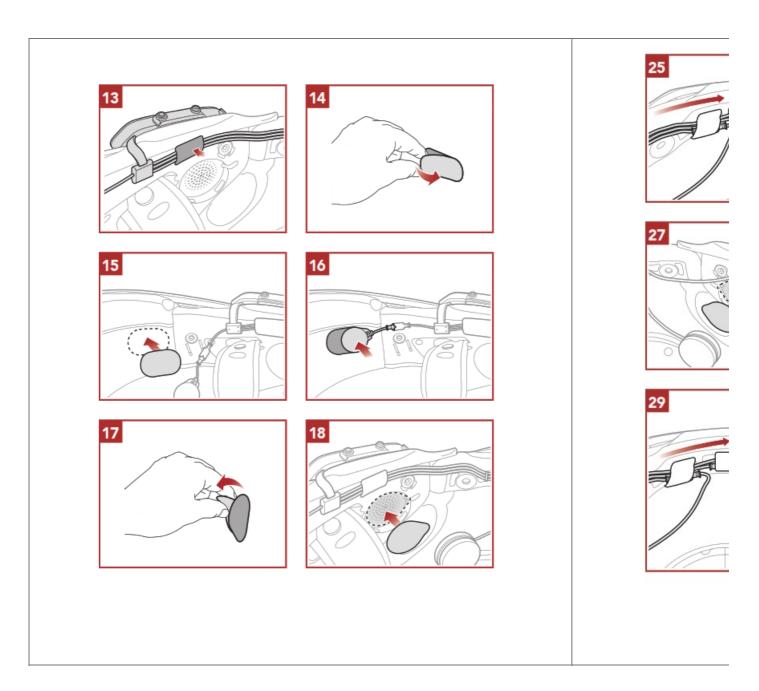

Mesh Intercom Antenna

Pull the Mesh Intercom Antenna inwards slightly to unfold it.



Icon Legend





 
Press and Hold button for the specified amount of time



"Hello" Audible prompt


Basic Operations

Powering On





Powering Off

 



Volume Up





Volume Down





Checking the Battery Level

































Phone Pairing









"Configuration menu"













"Phone pairing"

3 Select SRL-EXT in the list of Bluetooth devices detected.



• For more information on phone pairing, refer to the User's Guide.

Using the Phone


Answer a Call



 
Reject a Call



End a Call

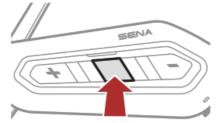





or



Music Control

Play/Pause



Track Backward



Track Forward



Mesh Intercom™

Open Mesh™: communication within the same channel. Group Mesh™: communication within the same private group.

• For more information on Mesh Intercom, refer to the User's Guide.



Mesh Intercom Off



Note: When Mesh Intercom is on, the SRL-EXT will automatically connect to nearby SRL-EXT users and the headset will be in Open Mesh (default: channel 1) initially.


Open Mesh

Channel Setting (Default: channel 1) in Open Mesh

1. Enter into the Channel Setting.



2. Navigate between channels.

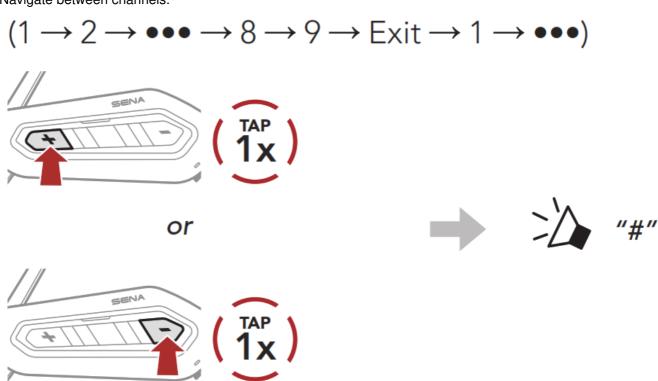

3. Save the channel.




Note: You can use the SENA MOTORCYCLES App to change the channel.

Group Mesh

Group Mesh is a closed group intercom function that allows users to join, leave, or rejoin a group intercom conversation without pairing each headset.

1. Creating a Group Mesh

Creating a Group Mesh requires two or more Open Mesh users.

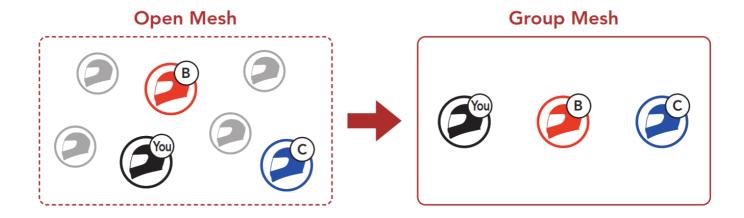

1. Users (You, B, and C) enter into Mesh Grouping to create a Group Mesh.




2. When Mesh Grouping is completed, the users (You, B and C) will hear a voice prompt on their headsets as Open Mesh switches to Group Mesh.



2) Joining an Existing Group Mesh

One of the current users in an Existing Group Mesh can allow new users (one or more) in Open Mesh to join the Existing Group Mesh.

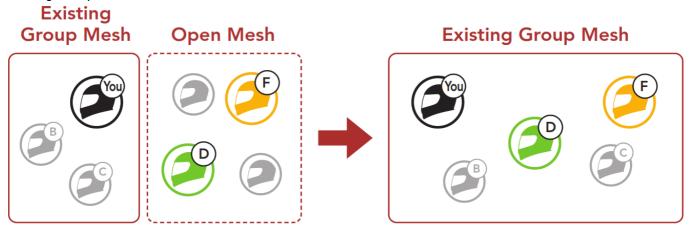

1. One (You) of the current users in the Existing Group Mesh and new users (D and F) in Open Mesh enter into Mesh Grouping to join the Existing Group Mesh.



2. When Mesh Grouping is completed, the new users (D and F) will hear a voice prompt on their headsets as Open Mesh switches to Group Mesh.



Enable/Disable Mic (Default: Enable)

Users can enable/disable the microphone when communicating in a Mesh Intercom.




Reset Mesh

If the headset in an Open Mesh or Group Mesh resets the Mesh, it will automatically return to Open Mesh (default: channel 1).



Bluetooth Intercom

Up to three other people can be paired with the headset for Bluetooth intercom conversations.

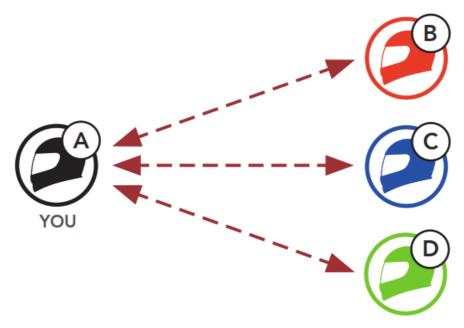

Intercom Pairing

There are two ways to pair the headset.

Using the Smart Intercom Pairing (SIP)

SIP allows you to quickly pair with your friends for intercom communication by scanning the QR code on the SENA MOTORCYCLES App without remembering the button operation.

- 1. Pair the mobile phone with the headset.
- 2. Open the SENA MOTORCYCLES App and tap (Smart Intercom Pairing Menu).
- 3. Scan the QR code displayed on your friend (B)'s a mobile phone.
 - Your friend (B) can display the QR code on the mobile phone by tapping > QR code () on the SENA MOTORCYCLES App.



4. Tap Save and check that your friend (B) is paired with you (A) correctly.

5. Tap Scan () and repeat steps 3-4 to pair with Intercom Friends (C) and (D).

Note: The Smart Intercom Pairing (SIP) is not compatible with Sena products that use Bluetooth 3.0 or below.


Using the Button



1. Users (You, B) enter into Intercom Pairing.



2. The two headsets (A and B) will be automatically paired.

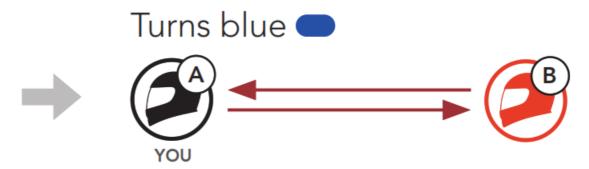

3. Repeat the steps above to pair with other headsets (C and D).

Last-Come, First-Served

If the headset has multiple paired headsets for intercom conversations, the last paired headset is set as the First Intercom Friend.

Intercom Pairing Order

Last-Come, First-Served




Two-way Intercom


Start/End Conversation with the First Intercom Friend D



Start/End Conversation with the Second Intercom Friend C

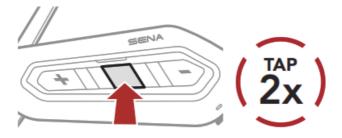

Start/End Conversation with the Third Intercom Friend B

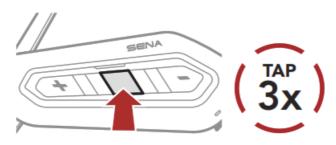

FM Radio

FM Radio On/Off



Start/Stop Scanning



Seek Forward



Seek Backward



Navigating Preset Stations



Note: You can also save the current station from the SENA MOTORCYCLES App.

Configuration Menu

Accessing the Configuration Menu

Accessing the Configuration Menu







"Configuration menu"

Navigating Between Menu Options










Execute Menu Options



Troubleshooting

Fault Reset

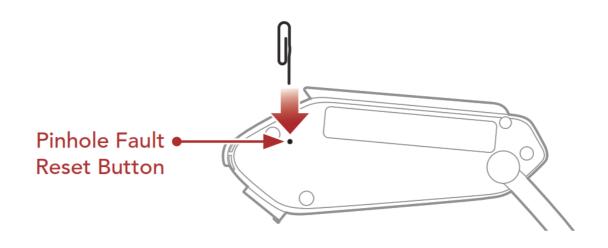

Note: Fault Reset will not restore the headset to factory default settings.


Factory Reset



Quick Reference

| TYPE | OPERATION | BUTTON COMMANDS |
|---------------------|-------------------------|-----------------|
| Basic Operations | Power on / Power off | HOLD 1s (TAP) |
| | Volume up / Volume down | or (TAP) |
| | | |

| Mobile Phone | Answer phone call | $(\widehat{1}_{x})$ |
|---------------------------------|---------------------------------------|----------------------------|
| | End phone call | HOLD 2s |
| | Reject phone call | HOLD 2s |
| Siri and Google Assistant | Activate the Siri or Google Assistant | HOLD 3s |
| Mesh Intercom™ | Mesh Intercom on/off | |
| | Channel setting | |
| | Mesh Grouping | HOLD 5s |
| | Reset Mesh | HOLD 8s |
| | Enable/Disable Mic | D HOLD 1s |
| (((•))) Intercom | Intercom pairing | HOLD 5s |
| | Start/End intercom | $\left(\frac{1}{1}\right)$ |
| Music | Play/Pause music | HOLD 1s |
| | Track forward | Table 1s |
| | Track backward | HOLD 1s |
| | | |

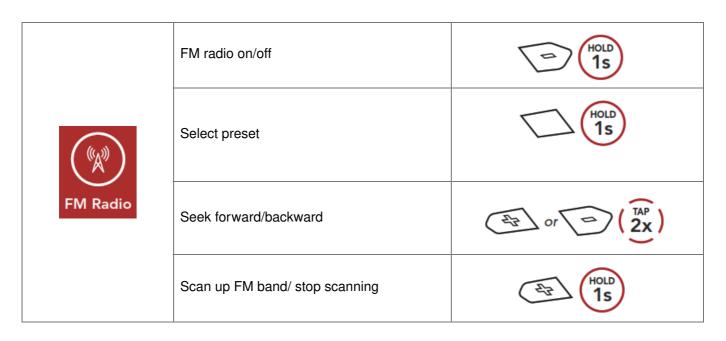

SENA Technologies, Inc. Customer Support: sena.com

Documents / Resources



SENA SRL-EXT Motorcycle MESH and Bluetooth Communication System [pdf] User Guide

Bluetooth Communication System for Shoei Helmets, SRL-EXT Motorcycle MESH and Bluetooth Communication System, SRL-EXT, Motorcycle MESH and Bluetooth Communication System, Shoei Helmets Bluetooth Communication System, Communication System, Bluetooth Communication System, Helmet Communication System, Helmet Bluetooth

References

• 5 The Best Motorcycle & Action Sport Bluetooth Devices | Sena

Manuals+,