

## SENCOR Scooter Two Replacement Mudguard with Light Owner's Manual

[Home](#) » [SENCOR](#) » SENCOR Scooter Two Replacement Mudguard with Light Owner's Manual 


### Contents

- [1 SENCOR Scooter Two Replacement Mudguard with Light](#)
- [2 Package contents:](#)
- [3 Removing the existing mudguard from Scooter Two](#)
- [4 Fitting a new mudguard on Scooter Two](#)
- [5 Specifications:](#)
- [6 FAQ:](#)
  - [6.1 Q: What should I do if my tail light is not working after installing the new mudguard?](#)
  - [6.2 Q: Can I use this mudguard with other scooter models?](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)

### SENCOR Scooter Two Replacement Mudguard with Light

#### OWNER'S MANUAL

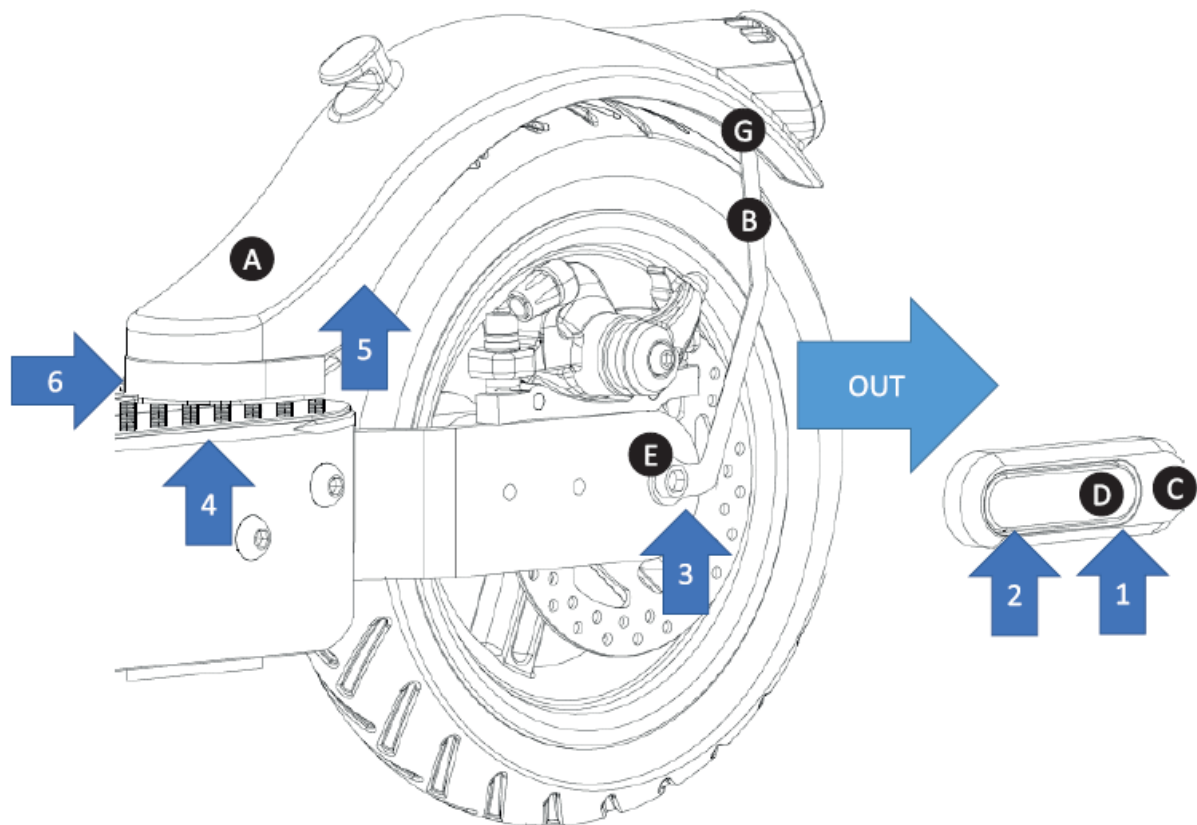

Scooter Two Replacement Mudguard with Light




## Package contents:




- A. 1x rear mudguard with tail light
- B. 1x mudguard bracket
- C. 2x side plastic cover
- D. 2x reflective sticker
- E. 2x M5 screw for attaching the mudguard bracket to the scooter frame
- F. 2x M5 screw washer
- G. 1x self-tapping screw for mounting the bracket
- I. 1x tail light extension wire (in case of replacement)
- J. 2x shrink tube for the tail light wire connector

## Removing the existing mudguard from Scooter Two

1) Remove the side plastic caps “”. First peel off the stickers “” from the plastic caps and loosen the caps’ Allen screws.

**Tip:** to peel off, gently heat the stickers with a hair dryer to loosen the adhesive and peel them off.


2) Remove the rear wheel. Loosen the rear wheel attached with Allen screws on both sides “”. After removing the Allen screws, pull the wheel in the opposite direction of travel to remove the entire wheel from the scooter body “OUT”.

3) Turn Scooter Two upside down to remove the existing rear mudguard. Loosen the 3 screws holding the mudguard to the scooter body “”. The washer “” is released during disassembly. Carefully disconnect the tail light power lead at the connector “”.

## Fitting a new mudguard on Scooter Two

1) Fasten mudguard "B" with 3x "disassembled" screws.

Do not forget to put back the washer „“. Do not tighten the screws firmly yet! Connect the tail light power lead

„“. Before connecting the connector, put one shrink tube "J" on the wire. Connect the connectors and pull through the shrink tube. Check that the tail light is working by switching on the scooter. Turn off the scooter to continue mounting the fender. Use a heat source to achieve shrinkage. Warning: Take care when working with the heat source! The radiated heat must not come close to any part of the scooter except the shrink tube covering the connector. Handle the heat in such a way as to avoid personal injury and damage to property.

2) Attach the mudguard bracket "B" to the mudguard using screw "G". Use your Phillips screwdriver to attach. After centring the mudguard bracket "B" on the holes to the scooter body, tighten the screw "G" firmly. It will not be possible to tighten the "G" screw later.

3) Insert the previously dismantled wheel into the Scooter Two body. Use the screws "E" to attach the bracket "B" to the rear wheel hub. Screw "E"|washer "F"|bracket "B"|scooter body|hub. Tighten firmly!!!

4) Tighten the mudguard screws " ".

5) Attach the caps "C" and re-stick them with the reflective sticker "D".

Make sure that the tail light and brake light are working and that the screws are tightened so that they are not loosened by driving. Keep checking that all screws are tight. Check that the rear wheel is not touching the mudguard or the tail light lead. If you have an upgraded Scooter Two with a single-sided mudguard mount, use only parts "A" and "G".

### Specifications:

- Product: EN Scooter Two Replacement Mudguard with Light
- Package Contents:
  1. 1x rear mudguard with tail light
  2. 1x mudguard bracket
  3. 2x side plastic cover
  4. 2x reflective sticker
  5. 2x M5 screw for attaching the mudguard bracket to the scooter frame
  6. 2x M5 screw washer
  7. 1x self-tapping screw for mounting the bracket
  8. 1x tail light extension wire (in case of replacement)
  9. 2x shrink tube for the tail light wire connector

---

### FAQ:


**Q: What should I do if my tail light is not working after installing the new mudguard?**

A: Check the connection of the tail light extension wire (item I) and ensure it is securely connected. Also, verify that there are no damages to the wire during installation.

**Q: Can I use this mudguard with other scooter models?**

A: This mudguard is specifically designed for Scooter Two.  
Compatibility with other models may vary, and it is recommended to consult with the manufacturer before use.

**Documents / Resources**

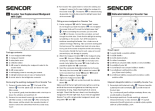	<a href="#">SENCOR Scooter Two Replacement Mudguard with Light</a> [pdf] Owner's Manual Scooter Two Replacement Mudguard with Light, Two Replacement Mudguard with Light, Replacement Mudguard with Light, Mudguard with Light, Light
---	---

**References**

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.