



SENCOR SRC100 Hello Kitty User Manual

[Home](#) » [SENCOR](#) » SENCOR SRC100 Hello Kitty User Manual 

SENCOR®
SRC 100
Hello Kitty



USER'S MANUAL
PROJECTION ALARM CLOCK RADIO

Contents

1 WARNINGS,CAUTIONS AND OTHERS

2 FUNCTION AND CONTROLS

3 GETTING STARTED

4 PROJECTION UNIT

5 SPECIFICATION

6 DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES

7 Documents / Resources

7.1 References

WARNINGS,CAUTIONS AND OTHERS

WARNING


1. No naked flame sources, such as lighted candles, should be placed on the apparatus.
2. Do not place the product in closed bookcases or racks without proper ventilation.
3. Where the mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
4. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
5. It shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus
6. Do not connect FM antenna to outside antenna.
7. The unit should not be exposed to direct sunlight, very high or low temperature, moisture, vibrations or placed in dusty environment.
8. Do not use abrasive, benzene, thinner or other solvents to clean the surface of the unit. To clean, wipe it with mild non-abrasive detergent solution and clean soft cloth.
9. Never attempt to insert wires, pins or other such objects into the vents or opening of the unit.
10. Disconnect device warning: Mains plug is used as the connection, so it should always remain ready operate.
11. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
12. Class 1 LED product.

CAUTION

Danger of explosion if battery is incorrectly replaced
Replace only with the same or equivalent type

FUNCTION AND CONTROLS

- 1.

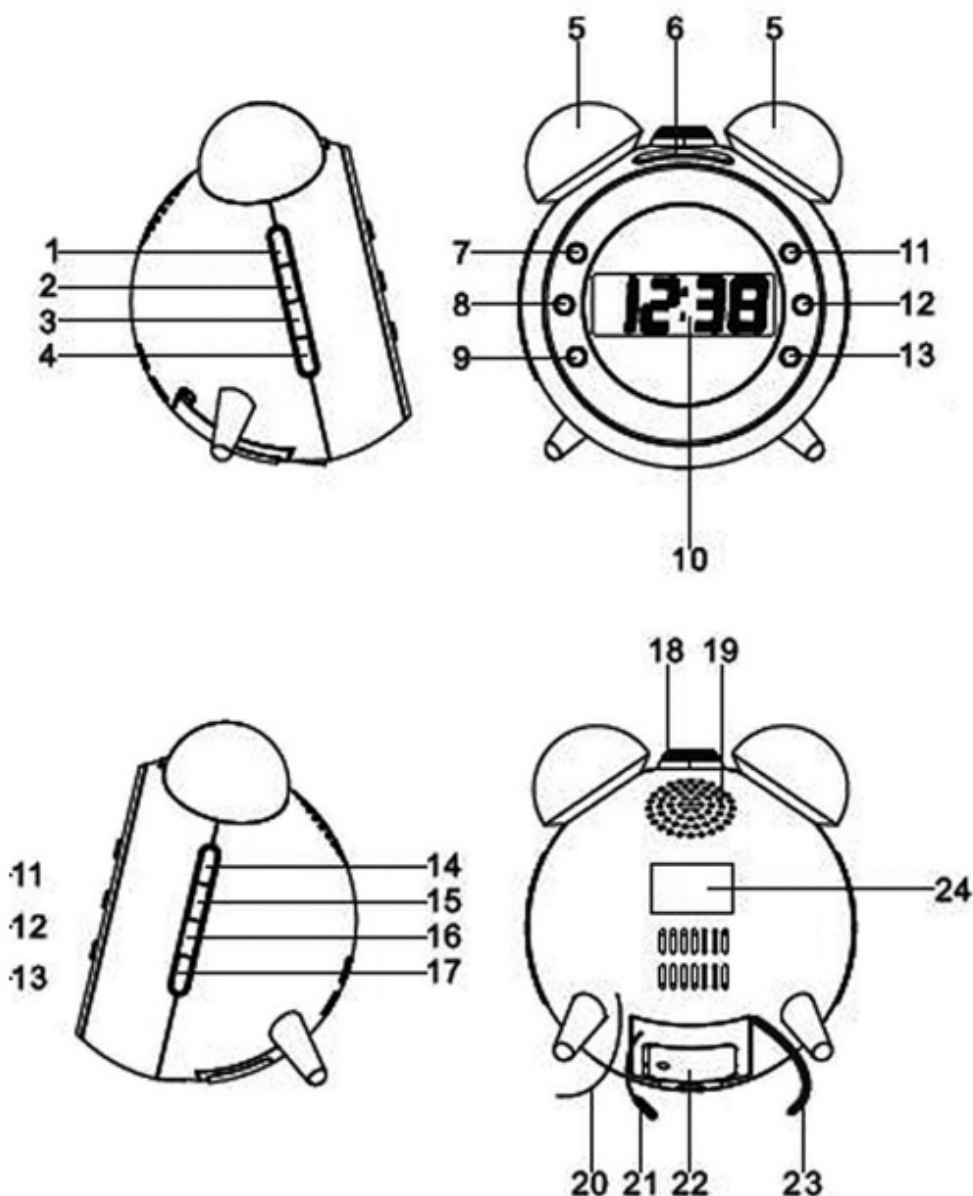

TO SET THE LIGHT INTENSITY HIGH

2. TO SET THE LIGHT INTENSITY LOW

3. LIGHT ON/OFF

4. MEMORY/MEMORY+/NAP/AUTO OFF DISPLAY

5. LAMP SHADE

6. SNOOZE/SLEEP/DIMMER

7. SET/TEMPERATURE

8. <</TUNE-/YEAR/MONTH/DAY

9. ALARM 1 ON/OFF SET

10. DISPLAY

11. ON/OFF

12. >>/TUNE+/DST/C-F

13. ALARM 2 ON/OFF SET

14. VOLUME UP/DISPLAY AUTO CHANGE ON/OFF

15. VOLUME DOWN


16. PROJECTION TIME 180° FLIP/TIME-TEMPERATURE

17. PROJECTION ON/OFF

18. FOCUS ADJUSTMENT FOR PROJECTION UNIT

19. SPEAKER
20. FM ANTENNA
21. TEMPERATURE SENSOR (IN DOOR)
22. BATTERY COMPARTMENT
23. AC POWER CORD
24. RATING LABEL (BACK OF UNIT)

LED DISPLAY

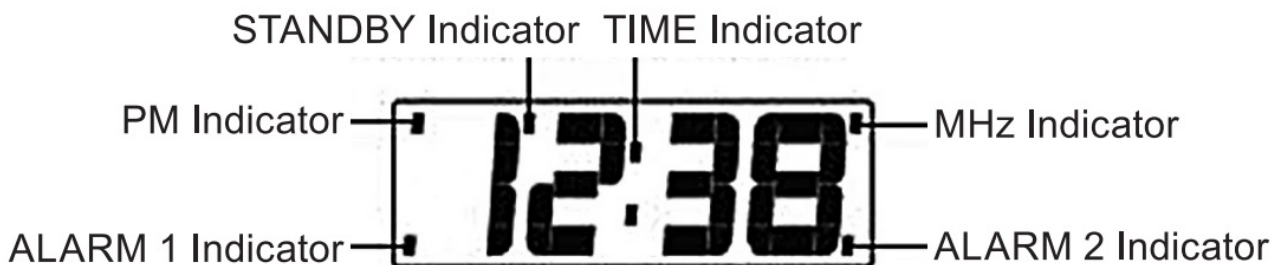

POWER CONNECTION

Plug the AC power cord to a household outlet AC source. This unit is equipped with a battery back up system, it requires a 3V CR2032 flat lithium battery (not included).

Insert the battery in the battery compartment, making certain that the positive and negative (+ and -) battery terminals are attached to the corresponding terminals on the plate in the battery compartment. If an AC power failure occurs, the clock automatically switches to the battery power supply, the clock and timer memory continue running. When the AC power resumes, the clock switches back to AC again.

GETTING STARTED

TIME AND CALENDAR MANUAL SETTING

A. Setting Time and Calendar — Press set button (7) in normal mode and keep depress over 2 seconds to enter time set mode, after enter the setting mode, press set button (7) to change the mode cycle as follows:

Normal -> Year -> Month -> Day > 12/24H -> Real time Hour > Real time Min – Normal

Action (during data adjustment)

- Press <</Tune – button (8) to adjust data backward
- Press >>/Tune + button (12) to adjust data forward
- Keep depress << or >> button for 2 seconds to enable auto forward.

B. Setting Alarm 1 and Alarm 2 — Press alarm set button (9/13) during normal mode: and keep depress over 2 seconds to enter alarm set mode, after enter the setting mode, press alarm set button (9/13) to change the mode cycle as follows:

Normal – AL 1 Hour – AL 1 min – AL 1 weekday Alarm – AL 1 wake beep -> AL1 wake radio – AL 1 radio volume > Light > Light intensity > Normal

Normal – AL 2 Hour – AL 2 Min – AL 2 weekday Alarm > AL 2 wake beep > AL2 wake radio – AL 2 radio volume -> Light > Light intensity > Normal

Select alarm weekday mode as follows:

1-5: Monday to Friday

1-7 Whole week

6- 7: Saturday & Sunday

1-1: One day of week

Action (during data adjustment):

- Press <</Tune – button (8) to adjust data backward
- Press >>/Tune + button (12) to adjust data forward.

- Keep depress << or >> button for 2 seconds to enable auto forward.

Alarm wake-up light:

The light will come on 5 minutes before the set alarm time. The light will start out at a low level and increase gradually to the set max level.

ALARM DURATION & SNOOZE FUNCTION

Alarm duration — Beep alarm or radio alarm will continue output for 30 minutes if no key press, then it will stop automatically and wait for same alarm time on next day.

Action for Snooze:

- During alarming, press Snooze button (6) will enable snooze function. Beep alarm or Radio alarm will stop.
- Snooze interval is 9 minute (not include second offset)
- Snooze will continue unless press ON/OFF button (1) to alarm off of buzzer alarm or Radio Alarm stop automatically after 30 minutes.

Display light ON/OFF function:

- Press Memory. Set/ memory+ /Display light auto ON-OFF/NAP button (4) for 3 seconds, the LED display Indicator will light on, the LED display will turn off after 15 seconds automatically. Press any button to maintain the LED display for 15 seconds.
- Press Memory. Set/Memory+ /Display light auto ON-OFF/NAP button (4) for 3 seconds, the LED display indicator will light off to cancel this function.

AUTO CHANGE DISPLAY CONTENT:

In radio off mode, press VOLUME UP/DISPLAY AUTO CHANGE ON/OFF button (14) and keep depress over 2 seconds to enter time display auto change mode. To display the Year and press again to display month/Day/ Temperature, the display returns to time display after 5 seconds.



Listening to radio

- Press the ON/OFF button (11) to return the unit on.

- Use the Tune+ or Tune- button to select the desired radio station. If you press and hold the Tune + or Tune- button for one second, then release, the unit will automatically scan to the next broadcasting station
- Press the ON/ OFF button (11) to turn the radio OFF.

To set/recall the radio presets

- Press the ON/ OFF button (11) to turn the unit ON.
- Use the Tune+ or Tune- button to select the desired radio station.
- Press the Memory/Memory+ button; "P02" will blink in the display
- Press the Memory/Memory + button again to set the preset.
- Repeat steps 2 through 4 to set more presets.
- The unit can present 10 stations totally for FM.
- When "P01- P10" is blinking, press the Tune + or Tune – button to select the present number.

Poznamka:

Ensure that the FM antenna is completely unrolled and extended for best FM reception.

Sleep operation

When listening to radio, press Snooze/Sleep/Dimmer button (6) to enter sleep mode.

You can adjust the sleep timer from 90 mins to 15 mins by pressing the Snooze/Sleep/Dimmer button (6). The unit will automatically turn off after the selected time.

NAP time function (count down timer)

During radio off mode, press MEMORY.SET/MEMORY+/NAP button (4) to turn on NAP mode. The NAP time will keep by 5 seconds, within 5 seconds and press MEMORY.SET/MEMORY-/NAP button (4) can change the duration from 90 mins – 10 mins.

The alarm buzzer will sound for 30 mins and then shut off automatically. To stop the alarm buzzer, press the ON/OFF button (11).

Press the MEMORY.SET/MEMORY+/NAP button (4) has no effect during alarm operation. Press ON/OFF button (11) to cancel NAP function.

Remark:

When using the NAP alarm did not the wake up light function

PROJECTION UNIT

- Focus setting: Adjust the projection clock brightness/focus by tuning the brightness/focus adjustment wheel unit the projected time s clearly shown on the ceiling or wall
- Adjust projected direction.
- Toflip projected image by 180°, press 180° flip button (16).
- Converted the projection time or temperature, press keep depress over 2 seconds to enter PROJECTION TIME 180 FLIP/TIME-TEMPERATURE button (16).

Note:

Projects time image on the ceiling or wall of a darkened room.

Maximum projection distance is 3-9 feet.

Select DST (daylight saving time) mode

For countries with daylight saving time (DST), the clock radio offers you DST option to adjust summer time.

In standby mode press and hold >>'TUNE+/DST button (12) for 2 seconds. The clock advances by one hour.

To exit DST mode, repeat the above operation.

Resetting

If the system does not respond or exhibits erratic or intermittent operation, you may have experienced an electrostatic discharge (ESD) or a power surge that triggered the internal microcontroller to shut down automatically. If this occurs, simply disconnect

the AC power cord and remove the system backup battery, wait for at least 3 minutes and then setup the unit again as if it is a brand new unit.

SPECIFICATION

Frequency range: 87.5 – 108MHz

Preselection: 10 channels

Battery backup: 3V (CR2032 Flat Lithium battery x 1) not included

Power supply: AC230V ~ 50 Hz

Temperature range for indoor: 0 to 50° C or 32 to 122° F

Dimensions: 140 mm x 96 mm

Weight: 350 g

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union


If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

SENCOR®
Copyright © 2012, Fast CR, a.s.
Revision

	<p>SENCOR SRC100 Hello Kitty [pdf] User Manual SRC100 Hello Kitty, SRC100, Hello Kitty, Kitty</p>
--	---

References

-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.