



SENCOR SWS 3000 Touch Button Weather Station User Manual

[Home](#) » [SENCOR](#) » SENCOR SWS 3000 Touch Button Weather Station User Manual 

SENCOR SWS 3000 Touch Button Weather Station



We thank you for the purchase of our Touch Button Weather Station. It has been designed and constructed using innovative components and techniques to enable the perfect display of time by this device. This unit is also equipped with an outdoor sensor.

Please read the instructions carefully to become familiar with the properties and functions, before you use the unit.


For the start-up of this device you require:


- 2 x "AAA",alkaline batteries for clock (not included)
- 2 x "AAA",alkaline batteries for wireless sensor (not included)

Contents

- 1 OVERVIEW
- 2 FEATURES
- 3 GETTING STARTED
- 4 TIME SET
- 5 ALARM & SNOOZE SET
- 6 TEMPERATURE & HUMIDITY
- 7 MOON PHASE
- 8 433 MHz RECEPTION CHECK
- 9 CHANNEL & SENSOR OPERATION
- 10 BACK LIGHT Selectable
- 11 POSITIONED METHOD
- 12 PRECAUTIONS
- 13 Warranty Conditions
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts

OVERVIEW

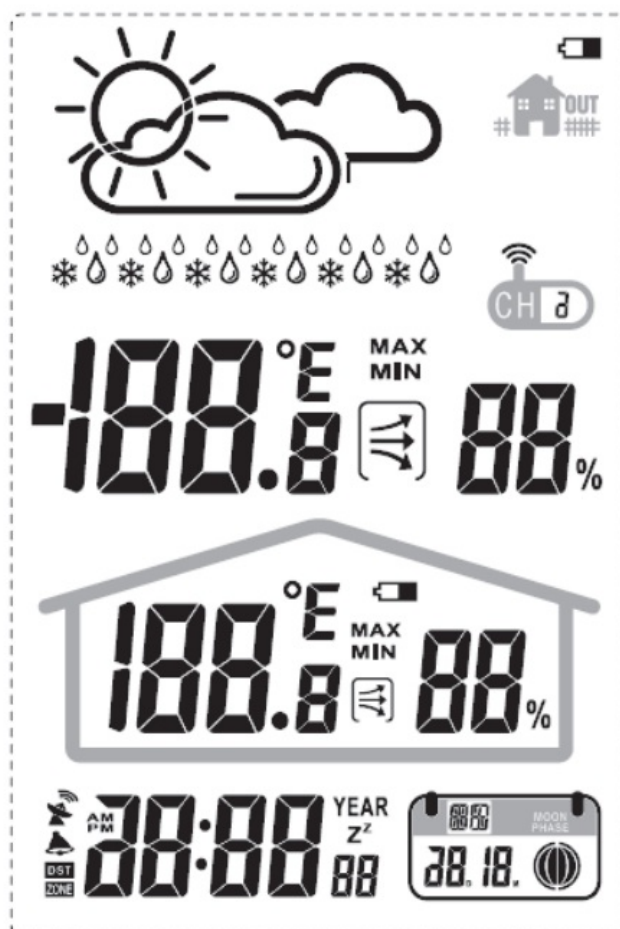

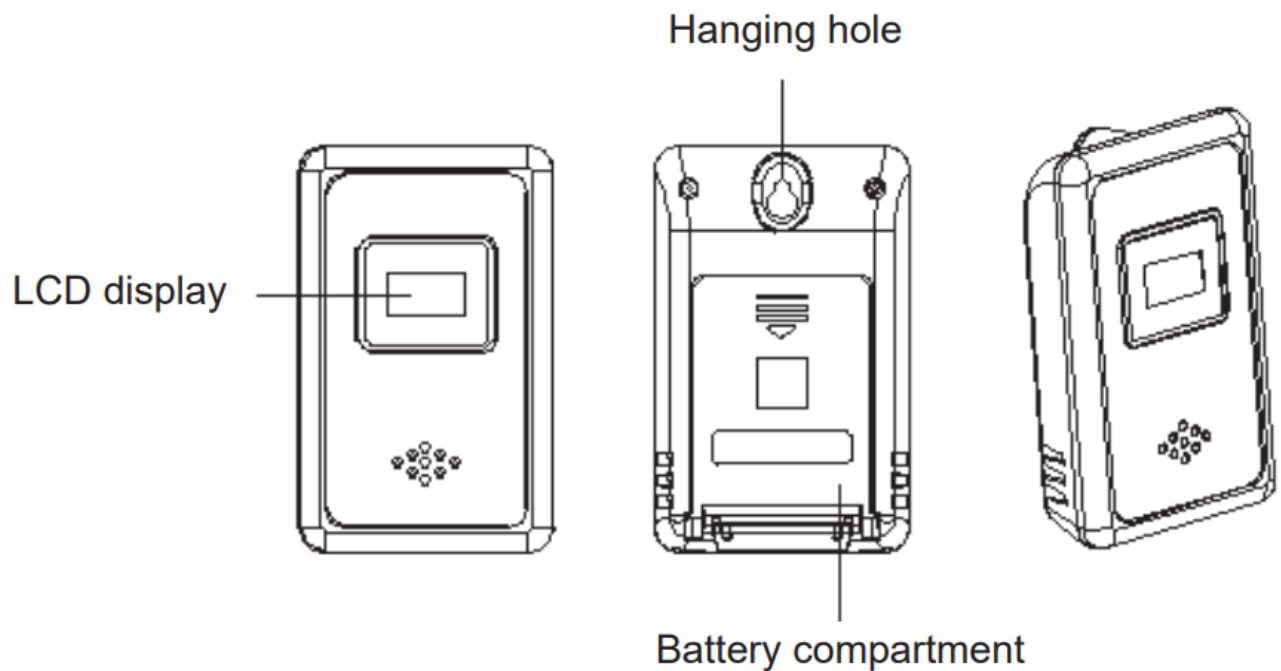

FEATURES

1. Weather forecast
2. Time and calendar
3. Moon phase
4. 12/24 hours selectable.
5. Alarm function & Snooze function.
6. 7 languages display in weekday
7. Indoor and outdoor temperature display
8. Indoor and outdoor humidity display
9. Outdoor temperature with RF: up to 3 channels maximum.
10. Records Min/Max Indoor/Outdoor temperature with trend indication
11. Weather forecast for 5 states: sunny, party-sunny, cloudy, rainy, snowy
12. LED backlight
13. Low battery warning for main unit and outdoor sensor

GETTING STARTED

POWER SUPPLY

MAIN UNIT INSTALLATION

1. Remove the battery compartment cover
2. Insert 2xAAA batteries matching the polarity (+and-).

SENSOR INSTALLATION

1. Remove the battery compartment cover.

2. Insert 2xAAA batteries matching the polarity (+and-).

TIME SET

1. Press "SET" to switch time and alarm mode (default alarm display 7:00 AL).
2. In time display mode, press and hold "SET" key to enter into time setup.
3. The setting order is : Year, Month, Day, Language, Time Zone, 12/24-hr format, Hour, Minute, °C/°F, saving and exit. The figure to be set will be flashing.
4. Press "CH/UP" or "MEM/DOWN" to change settings, user can press and hold the button to finish settings quickly.
5. There are 7 languages in weekdays display (FR-French, NE-Dutch, ES-Spanish, DA-Danish, EN-English, GE-German, IT-Italian)
6. Press and release "MEM/DOWN" button repeatedly, the current in/outdoor temperature and humidity will alternate between the MIN/MAX temperature recordings.
7. Press "CH/UP" to switch the channel of outdoor sensor.
8. Press "Snooze/Light" to lit up backlight for 20 seconds.

ALARM & SNOOZE SET

ALARM SETTING

1. Press "SET" button to switch time mode or alarm mode.
2. Press and hold "SET" to enter into alarm setup mode.
3. The setting order is Hour, Minute, Saving and exit.
4. To turn on the alarm clock: To turn on the alarm clock in the alarm clock mode, press "MEM/DOWN".
5. If without any operation, current configurations will be saved and exit after 30s.
6. Alarm ring last 2 minutes, and ringing will be off if without any operation.
7. Press "CH/UP" or "MEM/DOWN" to change the settings.
8. Press "SET" key again to confirm and exit.

SNOOZE FACTION

1. Touch "SNOOZE" to silence it for 5 minutes
2. Press any other key to turn the alarm off and activate it again after 24 hours.

TEMPERATURE & HUMIDITY

1. Once the battery is installed, the clock will begin searching for a signal. Within 3 minutes the clock will receive the RF signal and set itself to the exact temperature.
2. Press and release the "MEM/DOWN" key repeatedly, the current indoor temperature/outdoor temperature/indoor humidity will alternate between the MIN/MAX temperature recordings and the current value.

MOOM PHASE

The phase should be fairly easy to visualize on the screen, as the illuminated portion gradually transitions between them.

The moon cycle in this order: NEW, WAXING CRESCENT, FIRST QUARTER, WAXING GIBBOUS, FULL, WANING GIBBOUS, THIRD QUARTER, WANING CRESCENT.



433 MHz RECEPTION CHECK

The transmission range is about 30 meters from the transmitter to the weather station (in open area). The weather station should receive the temperature data with 3 minutes after set-up. If the temperature data is not received 3 minutes after setting up, please check

1. The distance of weather station or transmitter should be at least 5~6.5 feet (1.5~2 meters) away from any interfering sources such as computer monitors or TV sets.
2. Avoid positioning the weather station onto or in the immediate proximity of metal window frames.
3. Using other electrical products such as headphones or speakers operating on the same signal frequency.
4. Neighbors using electrical devices operating on the same signal frequency can also cause interference.

CHANNEL & SENSOR OPERATION

1. The weather station is up to maximum 3 sensors.
2. Remove the battery cover of sensor and slide "CHANNEL" switch to CH1/CH2/CH3 (when using additional sensors, make sure each sensor is assigned a different CHANNEL number, ONLY 1 sensor in box normally)
3. Make sure you put each sensor in your desired area.
4. Press "CH/UP" button to switch CH1/CH2/CH3
5. Press and hold "CH/UP" for 2 seconds to de-registration current outdoor value and re-registration outdoor information

BACK LIGHT Selectable

Press "SNOOZE.LIGHT" to switch on backlight, it will last for 20 seconds

POSITIONED METHOD

The weather station can be positioned in 2 ways as desired.

1. Pull out the table stand brackets from the rear of the clock, place on table or desk as desired.
2. Hang on the wall by hanging hole

PRECAUTIONS

- Do not clean any part of the product with benzene, thinner or other solvent chemicals. When necessary, clean it with a soft cloth.
- Never immerse the product in water. This will damage the product.
- Do not subject the product to extreme force, shock, or fluctuations in temperature or humidity.
- Do not tamper with the internal components.

- Do not mix new and old batteries or batteries of different types.
- Do not mix alkaline, standard or rechargeable batteries with this product.
- Remove the batteries if storing this product for a long period of time.
- Do not dispose of this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



■ The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



■ The product meets EU requirements.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

The original version is in the Czech language.

Address of the manufacturer: FAST CR, a.s., U Sanitasu 1621 , Ricany CZ-251 01 Hereby, FAST CR, a.s.

declares that the radio equipment type SWS 3000 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

www.sencor.eu.

Warranty Conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service

under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be identified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Manufacturer:


FAST ČR, a.s., U Sanitasu 1621, Říčany 251 01, Czech Republic

Visit www.sencor.com for detailed information about authorized service centers.

The original version of the instructions is in the Czech language, other language versions are made by the appropriate translation.







SENCOR®

Documents / Resources

 <p>SENCOR SWS 3000</p> <p><small>EN User Manual CZ Uživatelův manuál SK Používateľská príručka HU Használati útmutató PL Podręcznik użytkownika IT Manuale d'uso</small></p> <p><small>Touch Button Weather Station Tlačítková stanice Tlačítková stanica Tombonon meteorologica Stacja pogodowa Stacja pogody z przyciskami</small></p>	<p>SENCOR SWS 3000 Touch Button Weather Station [pdf] User Manual</p> <p>SWS 3000 Touch Button Weather Station, SWS 3000, Touch Button Weather Station, Button Weather Station, Weather Station, Station</p>
---	---

References

-  [Fast Poland](#) | [Strona główna](#)

-  [Design and quality for you | Sencor.com](#)
-  [Od televizorů přes kuchyňské roboty až po koloběžky | Sencor.cz](#)
-  [Design and quality for you | Sencor.com](#)
-  [Sencor - design e qualità | Sencor.it](#)
-  [Békéltető testületek](#)
-  [Fogyasztói Portál](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.