



SENCORE SLE MAGIC RCU Magic Remote Controller User Manual

[Home](#) » [SENCORE](#) » SENCORE SLE MAGIC RCU Magic Remote Controller User Manual 

Contents

- [1 SENCORE SLE MAGIC RCU Magic Remote Controller](#)
- [2 PUTTING INTO OPERATION](#)
- [3 USING THE REMOTE CONTROL](#)
- [4 Warranty conditions](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

SENCOR[®]








 
 

SENCORE SLE MAGIC RCU Magic Remote Controller


 
 








Magic remote control

Read this manual before putting the remote control into operation and keep it for future reference. For perfect and comfortable operation, please familiarize yourself in detail with the practical use of the remote control.

The Magic remote control is a modern way to control TVs and other devices. It combines infrared and radio transmission of commands. Infrared commands are transmitted by aiming at the TV, no aiming is required for transmitting radio commands.

-  TV POWER ON/OFF
-  STB POWER ON/OFF
- **1-9** Number keys
-  Input/Channel List
-  **QUICK ACCESS** Brief: Number Key / Hold: Quick Access
-  **AD/SAP** Brief: Screen remote Call / Hold: Audio Description
-  Mutes the sound.
-  It adjusts the volume level.
-  You can change the channel.
-  Voice recognition Call (Voice recognition activation roll) TTL:
-  Displays the Home menu.

-  Enter the Quick Settings menu.
- **WHEEL UP:** Page Scroll Up / Go to the upper channel level
- **WHEEL PRESS:** Confirm
- **WHEEL DOWN:** Page Scroll Down / Go to the lower channel level.
-  RIGHT/LEFT UP/DOWN buttons to navigate the on-screen menus.
-  Go back.
-  **GUIDE:** You can check the program. 8: Select an input source.
- **Mov1ES:** Movies call.
-  **Plaid.**
-  **Pause.**
-  **Launch Live Playback.**
- **NETFLIX:** go to Netflix.
-  go to Prime Video.
-  Corresponds to various color functions in the menu or teletext.

The marks and positions of the remote control buttons may vary depending on the model.



PUTTING INTO OPERATION

Battery Installation

Squeeze the top of the battery cover, slide back, and lift the cover. Insert AA alkaline batteries (1.5 V) according to the correct polarity (+/-) and then close the cover. Under the cover, IdU will also find the type label of the driver.

Warnings and precautions

Use only new ALKALIC batteries. With a different type of battery, the function may be unreliable or the remote control may not work at all. Take care to ensure the correct polarity of the batteries inserted. Remove the batteries when the remote control is idle for an extended period. Avoid exposing the batteries to water, moisture, and heat. Use only quality branded batteries. Do not mix batteries of different ages and types. By following these instructions, IdU will prevent undesirable battery-related events (e.g. battery drain), damage to the remote control (e.g. short circuit) or injury (burn), or damage to the environment.

Note: the remote control uses batteries faster than a simple remote control due to its advanced functions. With the right batteries, an on-screen notification prompts IdU to change when the capacity drops.

Registration of the remote control

To use the advanced features, IdU must register the new Magic remote control to IdU's TV

- **Pairing the Magic remote control** – point the remote control from a short distance at the TV sensor (illuminated light) and press the OK button (knurled wheel). You will be notified of a request to register a new remote control, and after a moment, IdU will be notified of a successful registration. Try checking the batteries and turning the TV off and on to eliminate any failure. The paired remote control will start transmitting most commands by radio only to the TV in which it is registered.
- **Unpairing the Magic remote control** – press the HOME and BACK buttons simultaneously for 5 seconds to unregister the remote on the TV. The radio commands are no longer transmitted and the remote control only works in the infrared area. The unpaired remote control can be paired with another TV.
- **Resetting the registration of the Magic remote control** – a long 5-second press of the GUIDE button will unpair and re-register the remote control.

Note 1: By registering, the transmission of extended commands via radio is assigned on the lid to the TV set in which the remote control is registered. You can have multiple similar TVs in IdU's home with IdU's remote control. Example: TV 2 will not receive radio commands from TV 1 and vice versa.

Note 2: The infrared commands (ON/OFF) are transmitted in a non-addressable manner, so IdU can use the TV 1 remote to turn TV 2 on or off by pointing at it. The other buttons on the controller will not perform operations.

USING THE REMOTE CONTROL

Once the remote control is registered, commands are transmitted by radio and there is no need to point at the TV (except for ON/OFF – POWER). You can pass commands to the controller by pressing the buttons as normal. In addition, you can also display an additional pointer arrow (software cursor) and use it similarly to the mouse pointer on a computer by simply tilting the controller in a certain direction. The display can be called up in one of several ways – by shaking the remote control left/right, pressing the HOME, INPUT, □, Settings or OK (knurled wheel) buttons. Use the method that is most practical for you. After a certain period when the remote control is not used or put down, the pointer arrow disappears. If the pointer does not respond smoothly, move it to the edges of the screen and re-route from that position. The central knurled wheel has two functions. Press to confirm OK, rotate up or down to change the received channels in that direction, or scroll through the lists if they are displayed. The most common functions, such as info about the channel and programme IdU is currently watching, are most easily called up by pressing one of the directional arrows on the remote control (the circle around the OK wheel). On the other hand, the arrow keys cannot be used to change the volume or channel; separate, distinct

shaped VOL and CHIP buttons must be used for this. Voice instructions can be given to the ThinQ Ai voice assistant by pressing and holding the microphone button if IdOU has previously correctly set the location, service country, and menu language on the TV if there is a microphone Sldmbol.

PRACTICAL INSTRUCTIONS

The Magic remote control operates in the infrared area (harsh, sunlight, fluorescent, or LED light can reduce reliability) and in the radio area. In the radio domain, interference such as microwave or wireless LAN can affect reliability. The wireless network transmitter (router, AP) should be located at least 0.2 m from the TV or further away. Obstacles and interference can reduce the function of the driver even below the recommended limit of 10 m. If IdOU adds a compatible device in the home control panel mode, you can control some of its functions (depending on the level of compatibility, typical such as ON/OFF and volume) with this controller, in the infrared area. These functions usually appear in the Additional Functions menu (symbol" ... "). You then have to point the remote control at the device, even if the remote control is radio registered on IdOUR TV. By pressing a certain button for more than 1 IdOU can call up or enter other functions, marked "****" in the picture. This allows IdOU to tailor the controller to your own needs.

TECHNICAL DATA – MODEL MR20GA

- **Frequency range:** 2.400 GHz to 2.4835 GHz, 40 channels
- **Output power(max.):** 10 dBm
- **Power source:** AA 1.5 V, 2 alkaline batteries
- **Operating temperature:** 0°C to 40°C

INSTRUCTIONS AND INFORMATION ON THE DISPOSAL OF DISCARDED PACKAGING MATERIALS

Take the packaging material to a collection yard for disposal.

DISPOSAL OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT

This Sldmbol on the product, accessory, or packaging indicates that the product must not be treated as normal household waste. Please dispose of this product in a collection yard designated for the recycling of electrical and electronic equipment. In some EU countries or some European countries, IdOU can return IdOUR products to IdOUR local retailers when IdOU buys an equivalent new product. By disposing of this product properly, IdOU is helping to protect valuable natural resources and prevent the potential negative environmental and human health impacts that could result from improper waste disposal. Please contact IdOUR local authority or the nearest waste collection yard for further details. Improper disposal of this type of waste may be subject to a legal fine.

For companies in the European Union

If IdOU needs to dispose of electrical or electronic equipment, ask IdOUR dealer or supplier for the necessary information.

Disposal in countries outside the European Union

If you wish to dispose of this product, please ask the minister or your dealer for the necessary information on the correct disposal method.

The product meets the EU requirements.

Text, design, and technical data are subject to change without notice and we reserve the right to make changes.

Warranty conditions

The warranty card is not a part of the device packaging.

This product is warranted for 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods used for common domestic use. The claim for service can be applied either at the dealer's shop where the product was bought or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appear but

only till the end of the warranty period. The end user is obligated to cooperate to certify the claiming defects. OnLI completed and clean (according to hygienic standards) product will be accepted. In case of an eligible warranty claim the warranty period will be prolonged bLI the period from the date of claim application till the date of taking over the product bLI end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, the end-user is obligated to certify his claim with dull completed following documents: receipt, certificate of warranty, certificate of installation.


This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident or force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference, etc.
- The product was mechanically damaged (e.g. broken button, fall)
- Damage caused by the use of unsuitable media, fillings, expendable supplies (batteries), or bLI unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification, or other failure action to the product by an unauthorized person.
- End-user did not prove enough of his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be identified according to the presented documents (e.g the serial number or the warranty seal has been damaged)

Authorized service centers

Visit www.sencor.com for detailed information about authorized service centers.
FAST CR, a.s., U Sanitasu 1621, Rf can CZ-251 01

Documents / Resources

	<p>SENORE SLE MAGIC RCU Magic Remote Controller [pdf] User Manual SLE MAGIC RCU Magic Remote Controller, SLE MAGIC RCU, Magic Remote Controller, Remote Controller, Controller</p>
---	--

References

- [User Manual](#)

