



sencore TXS 3600 High Density Transcoder User Guide

[Home](#) » [SENCORE](#) » sencore TXS 3600 High Density Transcoder User Guide 

Contents

- [1 sencore TXS 3600 High Density Transcoder](#)
- [2 Product Information: TXS 3600 High Density Transcoder](#)
- [3 Installation Instructions](#)
- [4 Management Port Instructions](#)
- [5 Contents](#)
- [6 Installation](#)
- [7 Management Port](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



sencore TXS 3600 High Density Transcoder



Product Information: TXS 3600 High Density Transcoder

The TXS 3600 High Density Transcoder is a device used to convert video signals from one format to another. It is designed for easy installation and configuration through its web interface. The device comes with the following items:

- TXS 3600
- Power cord(s)

If any of the items are missing or damaged, please contact Sencore for replacements.

Installation Instructions

1. Secure the TXS 3600 into the rack space.
2. Make all appropriate I/O connections on the back of the unit.
3. Connect an Ethernet cable from a management network to the Control port.
4. Connect the power cord(s).

Management Port Instructions

The TXS 3600 can be managed through its web interface or SNMP. To use the web interface or SNMP, the management IP address must be configured. Follow these steps:

1. Press any button on the front panel.
2. Use the arrow buttons to move the cursor to Network Settings, then press Enter.
3. Use the arrow buttons to move the cursor to Settings, then press Enter.

DHCP IP Address Setup

1. Use the arrow buttons to move the cursor to DHCP, then press Enter.
2. Use the arrow buttons to move the cursor to Apply, then press Enter.

Static IP Address Setup

1. Use the arrow buttons to move the cursor to Static, then press Enter.
2. Use the arrow buttons to move the cursor to IP Address, then press Enter.
3. Use the arrow buttons to select the column to edit and use the arrow buttons to change the values, then press Enter.
4. Use the procedure in the previous step to set the Subnet Mask and Gateway.
5. Once the IP Address, Subnet Mask, and Gateway have been set, use the arrow buttons to move the cursor to Apply, then press Enter.

Open a web browser (IE7 or above, Firefox 3.5 or above, or Chrome) and type: http://. The default password is mpeg101.

If you need technical assistance or have any questions, please contact Sencore ProCare or visit sencore.com/support.

Congratulations on purchasing the TXS 3600. Follow these installation and configuration instructions to get started. Use the web interface for easiest configuration. If you need assistance please contact Sencore ProCare for technical assistance or visit sencore.com/support.

Contents

Unpack the TXS 3600 from the box and packaging materials it was shipped in. Verify all of the following items are present:

- TXS 3600 High Density Transcoder 1x




- Line Cords 2x




If any of these items are missing or damaged, please contact Sencore to obtain replacements.

Installation

1. Secure the TXS 3600 into the rack space.

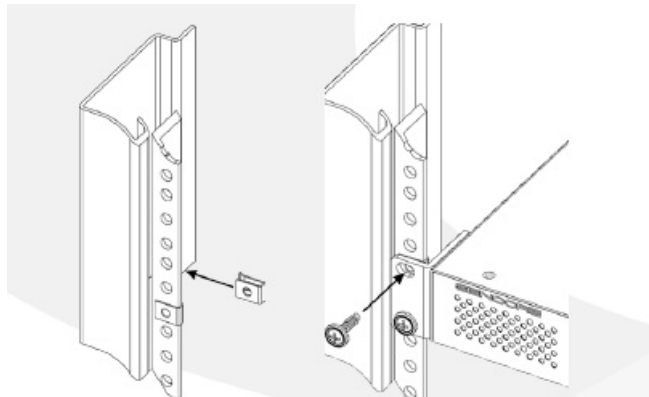



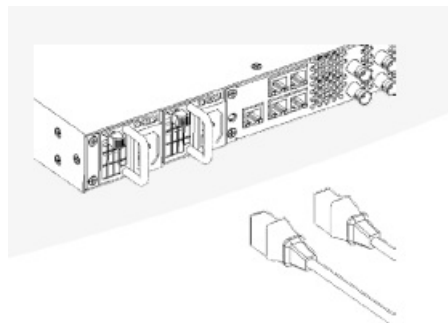



2. Make all appropriate I/O connections on the back of the unit.
3. Connect an Ethernet cable from a management network, to the Control port.
4. Connect the line cord(s).









Management Port













The TXS 3600 can be managed through its web interface or SNMP. To use the web interface or SNMP, the management IP address must be configured. Contact your IT department if you are unsure of these settings.

1. Press any button on the front panel
2. Use  and  to move the cursor to "Network Settings," then press 
3. Use  and  to move the cursor to "Settings," then press 

DHCP IP Address Setup:

1. Use  and  to move the cursor to "DHCP," then press 
2. Use  and  to move the cursor to "Apply," then press 


Static IP Address Setup:

1. Use  and  to move the cursor to "Static," then press .
2. Use  and  to move the cursor to "IP Address," then press .
3. Use  and  to select the column to edit and use and to change the values, then press .
4. Use the procedure in the previous 2 steps to set the Subnet Mask and Gateway.
5. Once the IP Address, Subnet Mask, and Gateway have been set, use  and  to move the cursor to "Apply," then press .

Open a web browser (IE7 or above, Firefox 3.5 or above, or Chrome) and type: <http://<IP Address>> Default password is mpeg101

www.sencore.com | 605.978.4600 | procare@sencore.com | Copyright © Sencore Inc. 2023

Documents / Resources

	sencore TXS 3600 High Density Transcoder [pdf] User Guide TXS 3600 High Density Transcoder, TXS 3600, High Density Transcoder, Density Transcoder, T ranscoder
--	---

References

-  [Service & Support - Sencore](#)
-  [Sencore - Video Broadcast Equipment Suppliers, Equipment Manufacturers](#)