



SENECA S311D-XX-L 11-Digit Display Advanced Digital Totalizers Instruction Manual

[Home](#) » [SENECA](#) » SENECA S311D-XX-L 11-Digit Display Advanced Digital Totalizers Instruction Manual 

INSTALLATION MANUAL

S311D-XX-L / S311D-XX-H Series
4, 6, 8, 11-digit display advanced digital
totalizers – indicators





SENECA s.r.l.

Via Austria, 26 – 35127 – PADOVA – ITALY

Tel. +39.049.8705355 – 8705359 – Fax +39.049.8706287


For manuals in other languages and the configuration software, visit www.seneca.it/products/s311d

MI00150-9-EN

Contents

- 1 MODULE LAYOUT
- 2 BUTTON POSITION
- 3 PRELIMINARY WARNINGS
- 4 TECHNICAL SPECIFICATIONS
- 5 OPERATION DESCRIPTION
- 6 ELECTRICAL CONNECTIONS
 - 6.1 POWER SUPPLY
 - 6.2 DIGITAL INPUT
 - 6.3 ANALOGUE OUTPUT
 - 6.4 OPTIONAL BOARD CONNECTIONS
- 7 MENU PARAMETERS
- 8 SUMMARY OF BUTTON ACTIONS (in display mode)
- 9 ERROR REPORTING
- 10 ORDER CODES
- 11 CONTACT INFORMATION
 - 11.1 Documents / Resources
 - 11.1.1 References
 - 11.2 Related Posts


MODULE LAYOUT

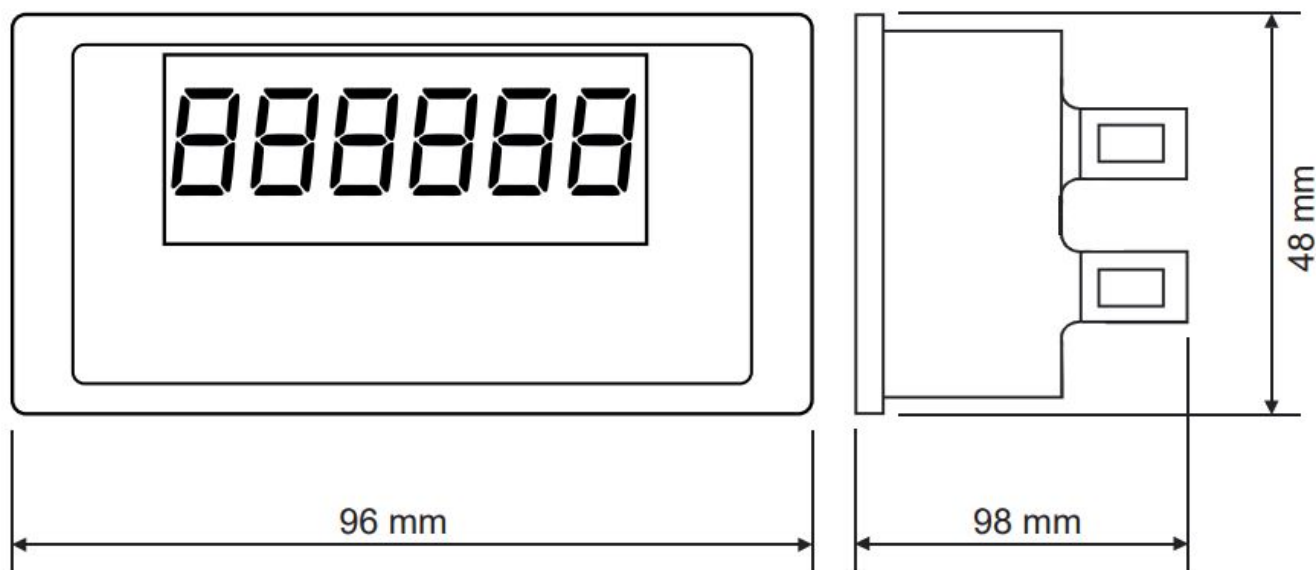



Weight: 170 g; Enclosure: Self-extinguishing PC/ABS material, black.

BUTTON POSITION

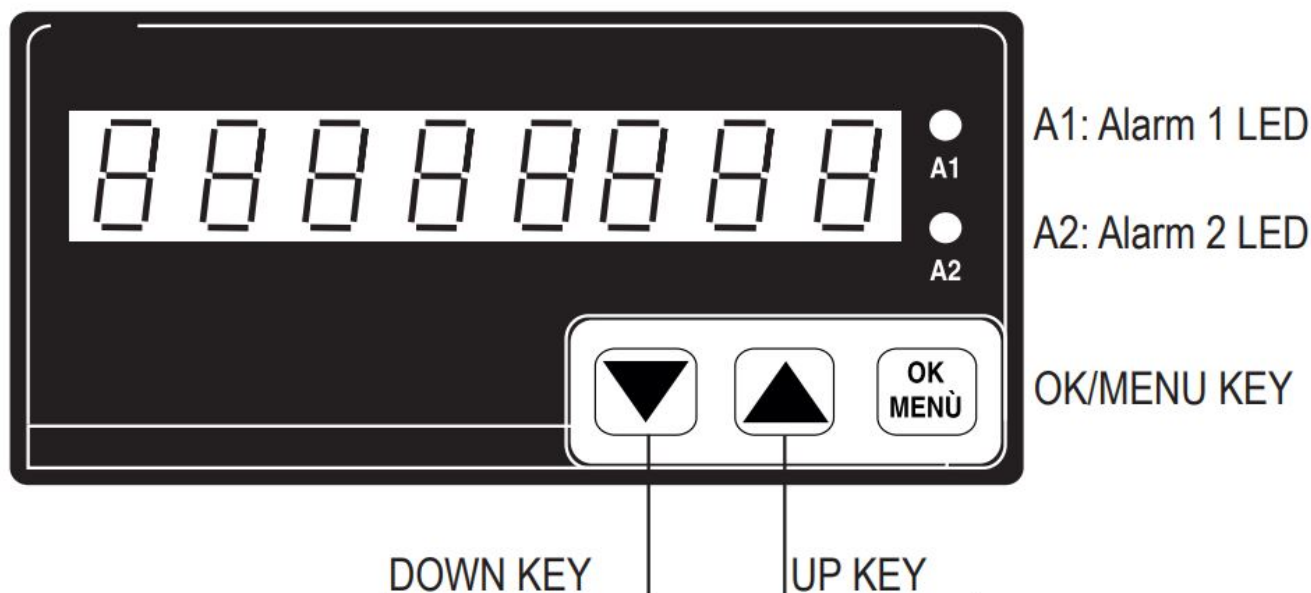


4-6-8-11-DIGIT DISPLAY



PRELIMINARY WARNINGS

The word **WARNING** preceded by the symbol  indicates conditions or actions that put the user's safety at risk. The word **ATTENTION** preceded by the symbol  indicates conditions or actions that might damage the instrument or the connected equipment.

The warranty shall become null and void in the event of improper use or tampering with the module or devices supplied by the manufacturer as necessary for its correct operation, and if the instructions contained in this manual are not followed.

	<p>WARNING: The full content of this manual must be read before any operation. The module must only be used by qualified electricians.</p> <p>Specific documentation is available at www.seneca.it/prodotti/s311d</p>
	<p>The module must be repaired and damaged parts replaced by the Manufacturer. The product is sensitive to electrostatic discharges. Take appropriate measures during any operation.</p>
	<p>Electrical and electronic waste disposal (applicable in the European Union and other countries with recycling).</p> <p>The symbol on the product or its packaging shows the product must be surrendered to a collection centre authorized to recycle electrical and electronic waste.</p>

TECHNICAL SPECIFICATIONS

STANDARDS	EN61000-6-4 Electromagnetic emissions, industrial environment. EN61000-6-2 Electromagnetic immunity, industrial environment. EN61010-1 Safety Install a fuse with a maximum capacity of 1 A near the module.
ENVIRONMENTAL CONDITIONS	Temperature: -10 ÷ + 65°C Humidity: 30% ÷ 90% non condensing. Storage temperature: -20 + 85° Protection rating: IP65 (on the front with appropriate gasket)
INSULATION	2500 Vdc between each pair of ports (including those belonging to the optional board)
POWER SUPPLY	S311D-XX-L: 10 ÷ 40 Vdc, 19 ÷ 28 Vac, 50 ÷ 60 Hz, max. 3 W S311D-XX-H: 85 ÷ 265 Vac, 50 ÷ 60 Hz, max. 3 W
CONNECTIONS	Removable screw terminals, 3.5 mm/5.08 mm pitch
DIGITAL INPUT	Type: Reed, Npn (2 wires), npn 24 V (3 wires) or pnp 24 V (3 wires), NAMUR, Photoelectric (Astra), Hall, 24 V input, TTL, Variable reluctance. Absorbed current: max. 7 mA Vmax.: 28 Vdc Sensor power supply: 17 Vdc Frequency band: 0.00014 Hz ÷ 10 kHz Frequency resolution: < 0.05 %

ANALOGUE OUTPUT	<p>Applied current: 0 ÷ 20 mA, max. load resistance 500 W</p> <p>Voltage: 0 ÷ 10 V, min. load resistance 1 kW</p> <p>Configurable start and end of scale</p> <p>Resolution: 2 mA / 1 mV</p> <p>Response time: 5 ms</p> <p>Maximum measurement field errors:</p> <p>Calibration error: 0.1%</p> <p>Thermal coefficient: 0.01%/°K</p> <p>Linearity error: 0.05%</p> <p>EMI (electromagnetic interference): < 1%</p>
DIGITAL OUTPUT	Open Collector type, I _{max} : 50 mA, V _{max} : 30 V
RELAY OUTPUT	Capacity: 8 A / 250 Vac (available only on optional board)
AUX. DIGITAL INPUT	Optoinsulated, V _{min} : 10 V, V _{max} : 30 V (available only on optional board)

OPERATION DESCRIPTION

The measurement of the digital input frequency or the totalizer value is translated into an analogue or digital output signal. The frequency value or alternatively the totalizer value can also be viewed via the display; in the 11-digit model (4 + 7) both values can be displayed simultaneously (4 digits: frequency value, 7 digits: totalizer value). The values are also available via MODBUS-RTU protocol from the RS485 port (via optional board).

Setting mode:

All the parameters of the instrument can be set via the Programming Menu or RS485 (via optional board). The alarm thresholds can also be set quickly via the specific Quick Alarm Menu. The dedicated Easy Setup software for programming/ configuring the module was also developed (see www.seneca.it).

Retransmission mode:

The instrument accepts the following retransmission modes:

Analogue output: The measurement of the frequency of the digital input is translated into an analogue output signal (current or voltage).

Digital output: The output generates an impulse every time the totalization is increased or decreased. A pulse of duration

≥ ~ 100 ms is generated. The output follows the totalizer up to the maximum value of approximately 4.7 Hz. As the counting frequency increases (up to the maximum value shown above), pulses are gradually lost until an output is obtained always at a low logic level. The output is normally high.

Alarms on frequency or totalizer measurement (optional board):

Two alarms can be activated on the measurement of the frequency of the digital input signal or on the totalizer threshold values, each of which, if enabled, can be configured as follows:

1. Alarm on the minimum threshold.
2. Alarm on the maximum threshold.
3. Alarm on the minimum held threshold (does not automatically reset).
4. Alarm on the maximum held threshold (does not automatically reset).
5. Alarm on the totalizer threshold value (does not reset automatically).

For each alarm it is possible to set threshold and hysteresis. For the totalizer alarm, the hysteresis is not considered. If the alarm is maximum the reset value is Threshold-Hysteresis, if it is minimum the reset value is Threshold + Hysteresis. The status of the alarms can be viewed via the two LEDs on the front panel and from the relays (if the optional board is used). The relays switch status when the alarm occurs and return to the initial state when it is reset (if held). The alarms held are reset in normal operation by pressing the UP + OK/MENU keys for a few seconds. For the totalizer alarm, the alarms are reset by pressing the UP+DOWN+ OK/MENU keys, via MODBUS or from the auxiliary digital input.

Totalizer

As an alternative to measuring the frequency of the digital input signal, it is possible to view the value of the associated totalizer (saved in non-volatile memory). Both values are available simultaneously in the 11-digit indicators (4+7). The totalizer can be:

Increasing: it is increased by one unit at each rising edge of the digital input.

- Decreasing: it is decreased by one unit at each rising edge of the digital input.

Once the maximum or minimum limit is reached, counting restarts from zero.

It is also possible to set a **reduction ratio** by which to divide the totalizer value; the resulting value will then be displayed.

Reset can also take place in the following three ways:

- From auxiliary digital input (if enabled).
- By pressing the three keys simultaneously (if enabled).
- Via Modbus register.

Display of frequency measurement value or totalized value

Three types of operation can be set (except for the 11-digit models that display both the frequency value and the totalizer value together) that define the display modes:

1. Type 0: both frequency value and totalizer value display. Pressing UP for a few seconds you access the frequency display, pressing DOWN for a few seconds displays the totalized value. When passing to the frequency value for a few seconds the writing `Hz` appears, passing to the totalized value the writing `Hz` appears for a few seconds.
2. Type 1: frequency measurement display only.
3. Type 2: totalizer display only

Average and frequency measurement filtering

The frequency value can be averaged over a settable number of samples. The average value is then filtered through the 20-level exponential filter and then shown on the display.

VLF Mode

If the full scale in Hz for measuring the frequency (HI-F) ≤ 1 Hz the instrument goes to Very Low Frequency Mode (VLF) thanks to which the minimum detectable frequency value is equal to 0.00015 Hz (1 pulse every 111 minutes).


Password to access the menu

It is possible to enable password protection from the Programming Menu. The Quick Alarm Menu is always free of passwords.


ELECTRICAL CONNECTIONS

POWER SUPPLY

S311D-XX-L

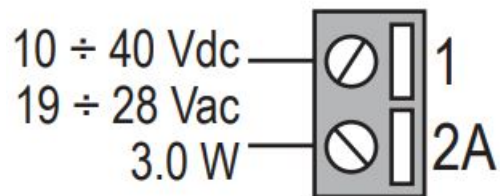


S311D-XX-H

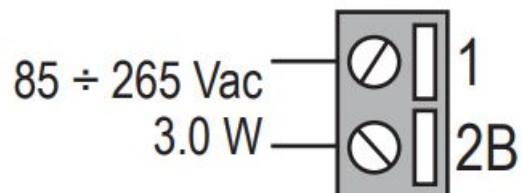


DIGITAL INPUT


REED

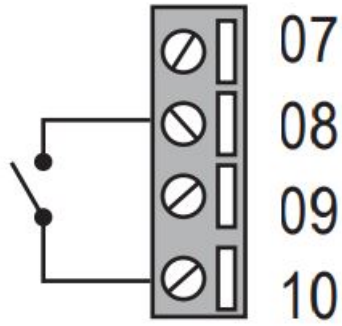


NPN (2 WIRES)

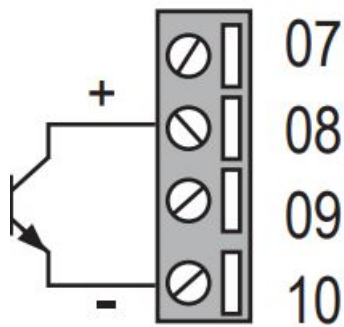


NPN 24 V (3 WIRES)

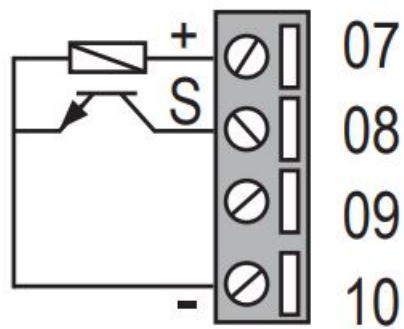


PNP 24 V (3 WIRES)

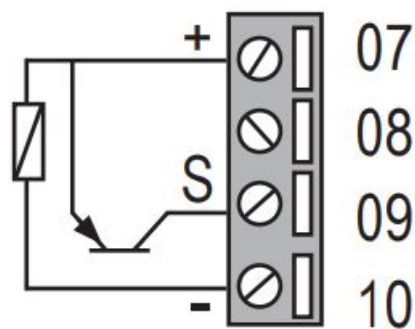


NAMUR

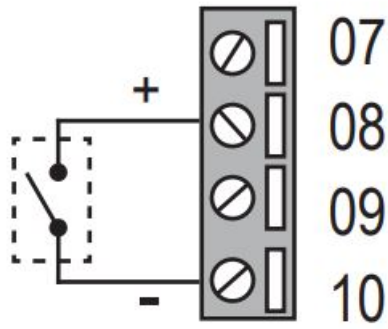


VARIABLE RELUCTANCE

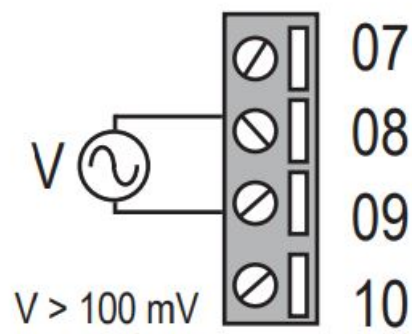


24 V INPUT

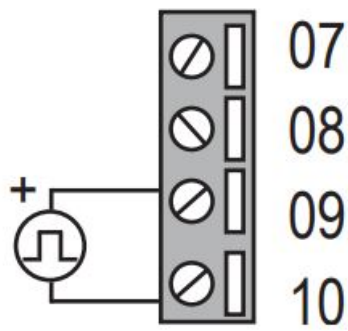


TTL INPUT

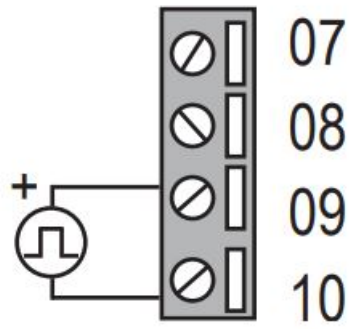

HALL

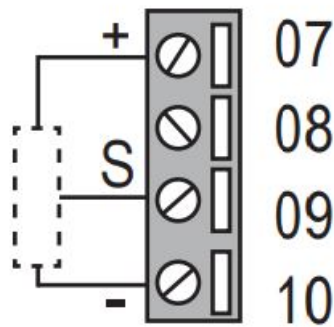


PHOTOELECTRIC

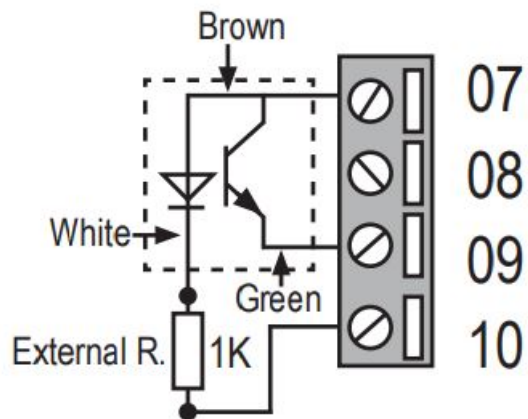


The internal power supply for the sensors, equal to 17 Vdc, is available at terminals 7 (+) and 10 (-).

ANALOGUE OUTPUT

VOLTAGE

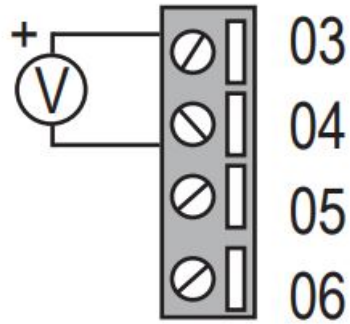


APPLIED CURRENT

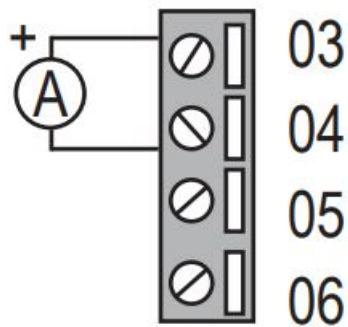


Active output: already powered to be connected to passive inputs

EXTERNAL POWER SUPPLY

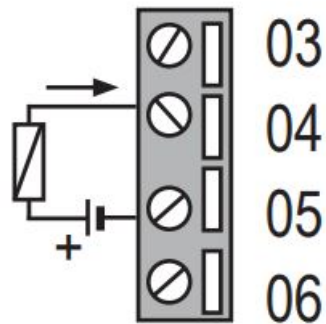

Passive output: not powered to be connected to active inputs.


DIGITAL OUTPUT

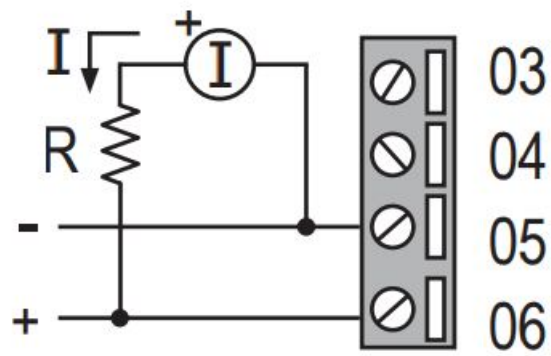


$$I_{\max}: V / R = 50 \text{ mA}$$

OPTIONAL BOARD CONNECTIONS


RS485

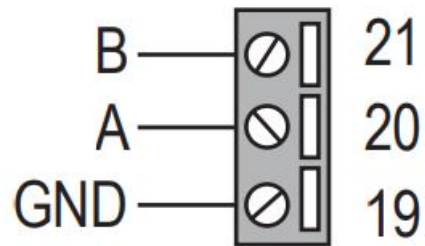


RELAY OUTPUT 1 8 A / 250 Vdc

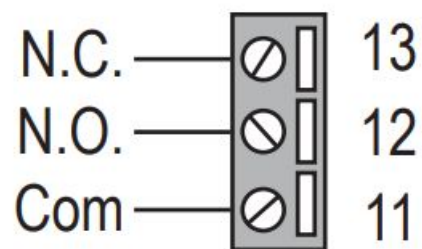

RELAY OUTPUT 2 8 A / 250 Vdc

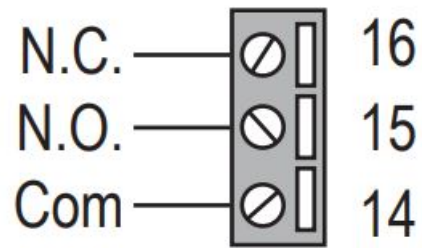


Auxiliary input: Totalizer reset (external power supply)

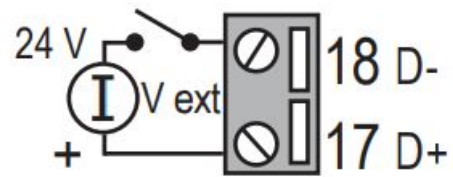

Example:

Totalizer reset with power supplied entirely by the module

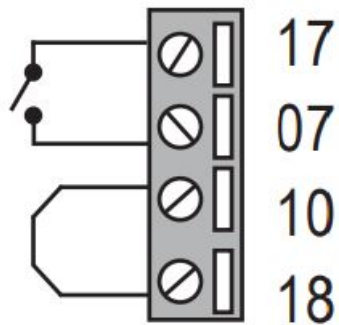

MENU PARAMETERS

	FREQUENCY MEASUREMENT LIMITS:		TOTALIZER LIMITS	
DISPLAY DIGITS	MIN. LIMIT	MAX. LIMIT	MIN. LIMIT	MAX. LIMIT
4	-1999	9999	0	9999
6	-199999	999999	0	999999
8	-19999999	99999999	0	99999999
11 (4+7)	-1999	9999999	0	9999999

PARAMETERS TO SET FROM THE MENU: CONF			
Parameter code	Parameter name	SETTING RANGE AND DESCRIPTION	DEFAULT VALUE
FUNC	Type of instrument operation	0 = frequency and totalizer display function. 1 = only frequency measurement display function. 2 = only totalizer display function.	0 = Instant. and Totaliz.
IRRES	Enables panel to totalizer reset and auxiliary digital input	0 = totalizer reset from panel and auxiliary digital input enabled. 1 = totalizer reset from panel and auxiliary digital input disabled.	0 = Enables
PASS	Password enabling for menu access	By setting a value other than 5477, the password will be requested when starting the menu (always 5477).	5477 = Password disabled
PARAMETERS TO SET FROM THE MENU: INPL			
TYPE	Input type	1= Reed 2= npn 2 wires 3= npn 24 V (3 wires) 4= pnp 24 V (3 wires) 6= Photoelectric (ASTRA) 7= HALL 8= 24 V input 9= TTL input 10= Variable reluctance 5= NAMUR	3 = npn 24 V (3 wires)

<i>HI - F</i>	Full scale (Hz)	<p>Full scale in Hz to measure frequency. It also defines the frequency value associated with the HI-D parameter.</p> <p>Settable values</p> <p>The decimal point is imposed by DPIN. Minimum value: 0, Max value depending on the display:</p> <p>4 / 11 (4+7) digits: 9999 (without decimal point). 6 / 8 digits: 1 0000 (without decimal point).</p>	1000 Hz
<i>dPIn</i>	Position of decimal point in HI-F	<p>0 = no decimal point (e.g. 00009999),</p> <p>1 = first digit (e.g. 0000999.9)</p> <p>2 = second decimal point (e.g. 000099.99)</p> <p>3 = third decimal point (e.g. 00009.999),</p> <p>4 = fourth decimal digit (e.g. 0000.9999, only for 6 and 8 digit models).</p>	0 = Decimal point absent

PARAMETERS TO SET FROM THE MENU: *SCAL*

<i>LO-d</i>	Start of the scales displaying frequency measurement	Frequency value displayed if the measured frequency is 0. Values within the limits see: TABLE1.	0
<i>HI - d</i>	Full scales displaying frequency measurement	Displayed frequency value if the measured frequency is HI-f. Value within the limits see: TABLE1.	1000
<i>dP_d</i>	Frequency display decimal point position	<p>0 = no decimal point (ex. 12345678),</p> <p>1 = first digit (e.g. 1234567.8)</p> <p>N digits display-1</p> <p>For 11-digit models (4+7): max number of decimal places equal to 3</p>	0 = Decimal point absent
<i>FILE</i>	Filter level	0= no filter 1 – 20	3
<i>Au1</i>	Number of samples on which to average the frequency value	Selectable values: 1 -10.	1

PARAMETERS TO SET FROM THE MENU: *AL1.* and *AL2.*

Parameters related to alarm 1: accessible from menu a.L.I. . and identified by final index 1.

Parameters related to alarm 2: accessible from menu A.L.I. . and identified by final index 2.

Parameter code	Parameter name	SETTING RANGE AND DESCRIPTION	DEFAULT VALUE
SEt1	Threshold for alarm 1.	If frequency meter then frequency value shown on the display (decimal). Settable values between the limits of TABLE 1.dP_dpoint imposed by If totalizer then totalizer value shown on the display. Settable values between the limits of TABLE 2.	500
SEt2	Threshold for alarm 2.		100
HYS1	Hysteresis for alarm 1.	Hysteresis has no effect on the totalizer alarms. Settable values between the limits of TABLE 1	10
HYS2	Hysteresis for alarm 2.		10
TYP1	Alarm 1 type	0 = Alarm not active 1 = Alarm on the minimum threshold 2 = Alarm on the maximum threshold 3 = Alarm on the minimum held threshold (does not automatically reset) 4 = Alarm on the maximum held threshold (does not automatically reset). 5 = Alarm on the totalizer threshold value. (does not automatically reset)	0: Al 1 not active
TYP2	Alarm 2 type		0: Al 2 not active
RLY1	Relay 1: N.O. or N.C.	Relay operation: 0 = relay normally open (N.O.) 1 = relay normally closed (N.C.).	0: N.O.
RLY2	Relay 2: N.O. or N.C.		0: N.O.
PARAMETERS TO SET FROM THE MENU: OUT.			
LO-L	Frequency display value associated with the minimum output value	Limits for scaling the retransmitted output see TABLE1. Decimal point imposed by dP-d.	0
HI-L	Frequency display value associated with the maximum output value		1000
TYPE	Type of retransmitted output	1= 0 ÷ 10 V A 2= 4 ÷ 20 mA 3= 0 ÷ 20 m 	

<i>Addr</i>	MODBUS Address	Settable values: from 1 to 255	1
<i>PAR</i>	Parity control type	0= None 1= Even 2= Odd	0 = None
<i>dEL</i>	Delayed response time	Number of pauses of 6 characters each between the end of the Rx message and the beginning of the Tx. Settable values: 0 – 255	0 = No delay
<i>baud</i>	Serial communication speed	Serial communication speed in baud: 0= 1200 4= 14400 1= 2400 5= 19200 2= 4800 6= 38400 3= 9600 7= 57600	6 = 38400

PARAMETERS TO SET FROM THE MENU: *5.5.5.*

<i>Cont</i>	Display contrast	Values from 1 (minimum contrast) to 20 (maximum)	10
<i>UPdn</i>	Totalizer type: Increasing or decreasing	0 = The totalizer increases by one unit at each rising edge of the digital input. 1 = The totalizer decreases by one unit at each rising edge of the digital input.	0 = UP
<i>dFLt</i>	Default settings	1 = Overwrites the set parameters with the default values.	

PARAMETERS TO SET FROM THE MENU: *5.5.6.*

Parameter code	Parameter name	SETTING RANGE AND DESCRIPTION	DEFAULT VALUE
<i>rAtI</i>	Totalizer ratio	Sets a value by which to divide the totalizer. Permitted values: 1- 9999.	1
<i>dP_t</i>	Decimal point position in the totalizer display	0 = no decimal point (e.g. 123456) 1 = first digit (e.g. 12345.6) 2 = second digit (e.g. 1234.56) N digit's display – 1 For 11-digit models (4+7): max number of decimal places equal to 6	0: No decimal point












5.5.7.

Confirming with OK/MENU you save all parameters on a flash card and, after a few moments, reset the module.

—

SUMMARY OF BUTTON ACTIONS (in display mode)

Below is a summary of the actions that can be performed from the button starting from the display phase (not programming). In order for the actions to be carried out, the pressure on the buttons must last a few seconds.

 + 	Access to the programming menu.	 + 	Access to the Quick Alarm Menu
	If FunC=0 has been set, it switches to the frequency display (except 11-digit model)		If FunC=0 has been set, it switches to the totalizer display (except for the 11-digit model)
 + 	Held alarm reset	 +  + 	Totalizer reset (if this function has been enabled by setting IrER=0 and reset of the alarms on the totalizer)

—

ERROR REPORTING

Any errors are also shown directly on the display.
Below are the possible warnings with their meaning.
0000: Frequency measurement value to be displayed > Hi-d value by 2.5% or if the frequency measurement value to be displayed is > maximum that can be displayed.

EErr:

It can signal an error of the calibration memory at startup.
The operation of the instrument is blocked while Mod Bus communication is available (if optional board)

—


ORDER CODES

CODE		DESCRIPTION
MODEL:	S311	Indicator – totalizer with universal digital input.
DISPLAY	4	4 digits
	6	6 digits
	8	8 digits
	11	4 + 7 digits
POWER SUPPLY	H	85 ÷ 265 Vac
	L	10 ÷ 40 Vdc, 19 ÷ 28 Vac
OPTIONS	O	Optional board: RS485 Mod bus port, 2 relay alarms and auxiliary digital input. Insulation: 1500 Vac between each port.
	T	Calibration and configuration service

CONTACT INFORMATION


Technical support	support@seneca.it	Product information	sales@seneca.it
-------------------	-------------------	---------------------	-----------------


This document is the property of SENECA srl. Copies and reproduction are prohibited unless authorised.
The content of this document corresponds to the described products and technologies.
Stated data may be modified or supplemented for technical and/or sales purposes.

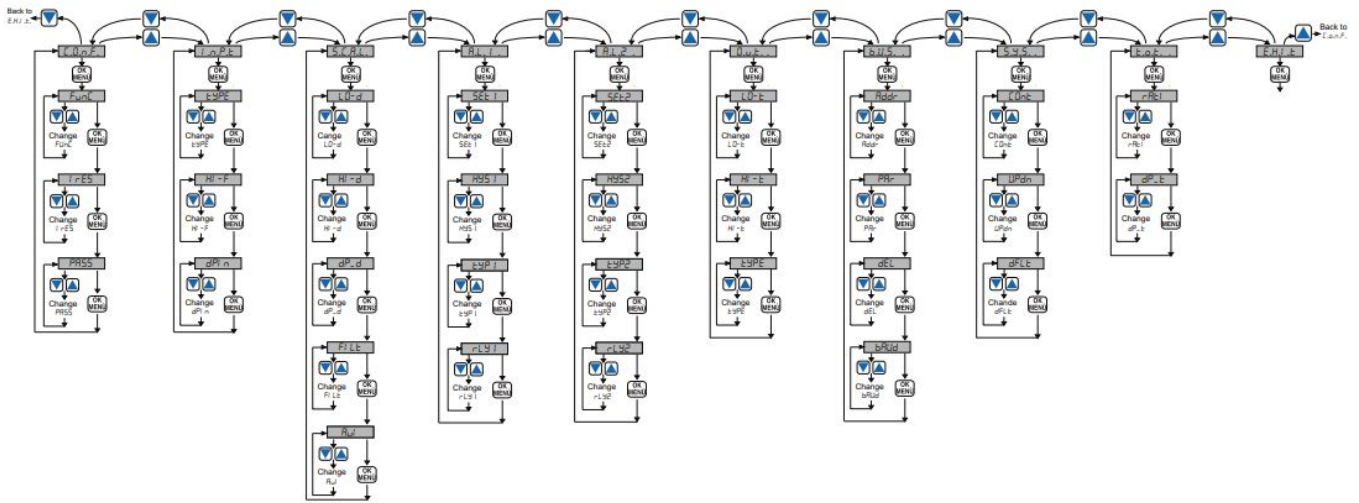

ACCESS TO THE PROGRAMMING MENU

Push the two buttons at the same time for 3 seconds

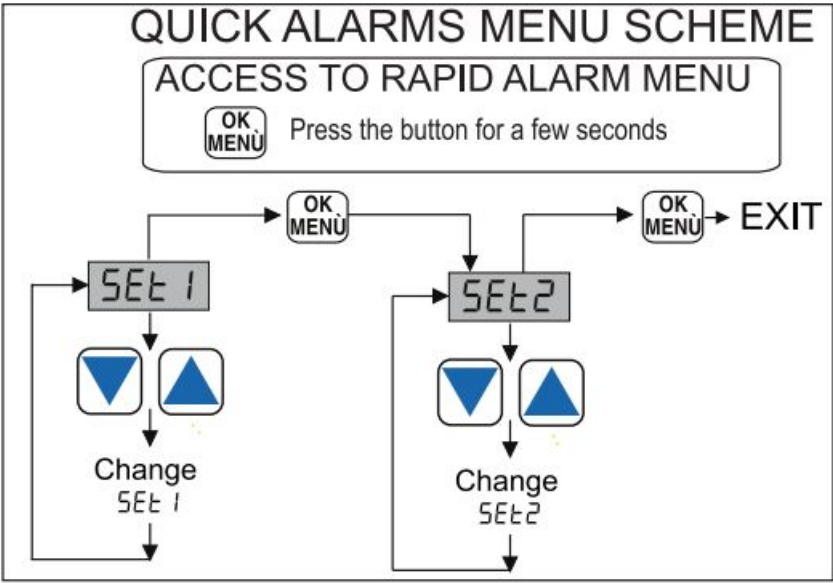

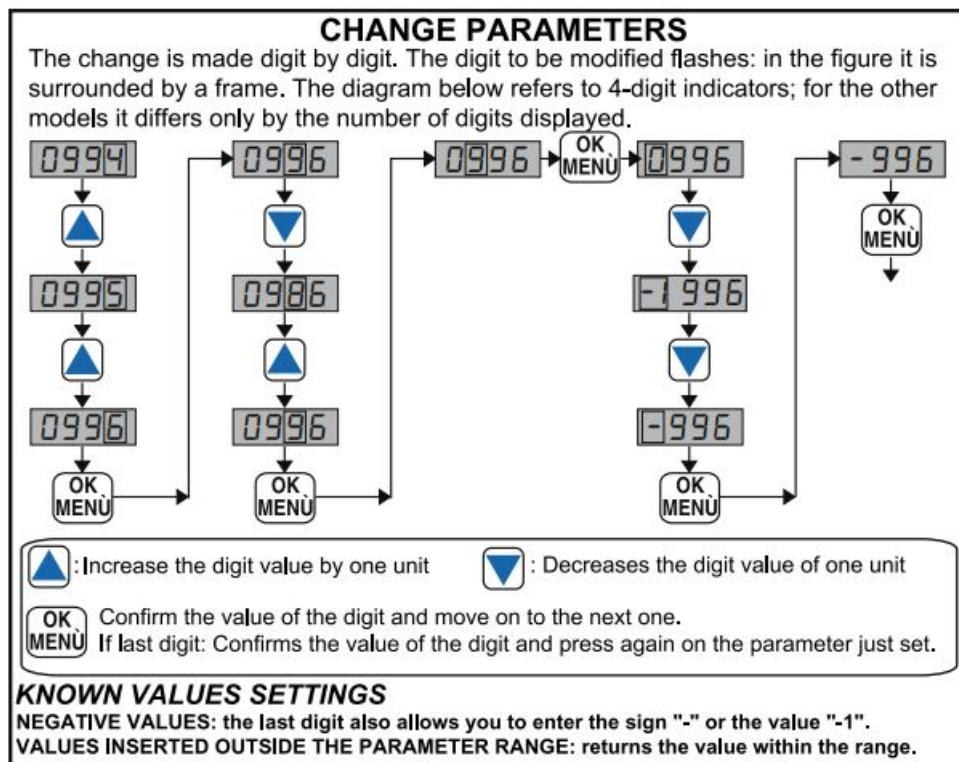

Documents / Resources

	<p>SENECA S311D-XX-L 11-Digit Display Advanced Digital Totalizers [pdf] Instruction Manual S311D-XX-L, S311D-XX-H, 11-Digit Display Advanced Digital Totalizers, Advanced Digital Totalizers, Digital Totalizers, 11-Digit Display Totalizers, Totalizers</p>
--	---

References

- [SENECA | Automation Interfaces | Official Website](#)