




SENECA VPN BOX 2 Network Server Instruction Manual

[Home](#) » [SENECA](#) » SENECA VPN BOX 2 Network Server Instruction Manual 

SENECA VPN BOX 2 Network Server




Contents




- 1 PRELIMINARY WARNINGS
- 2 CONTACT INFORMATION
- 3 MODULE LAYOUT
- 4 TECHNICAL SPECIFICATIONS
- 5 ELECTRICAL CONNECTIONS
- 6 Documents / Resources
 - 6.1 References
- 7 Related Posts


PRELIMINARY WARNINGS

The word **WARNING** preceded by the symbol  indicates conditions or actions that put the user’s safety at risk.

The word **ATTENTION** preceded by the symbol  indicates conditions or actions that might damage the instrument or the connected equipment.

The warranty shall become null and void in the event of improper use or tampering with the module or devices supplied by the manufacturer as necessary for its correct operation, and if the instructions contained in this manual are not followed.

	WARNING: The full content of this manual must be read before any operation. The module must only be used by qualified electricians. Specific documentation is available via QR-CODE shown on page 1.
	The module must be repaired and damaged parts replaced by the Manufacturer. The product is sensitive to electrostatic discharges. Take appropriate measures during any operation.
	Electrical and electronic waste disposal (applicable in the European Union and other countries with recycling). The symbol on the product or its packaging shows the product must be surrendered to a collection centre authorized to recycle electrical and electronic waste.

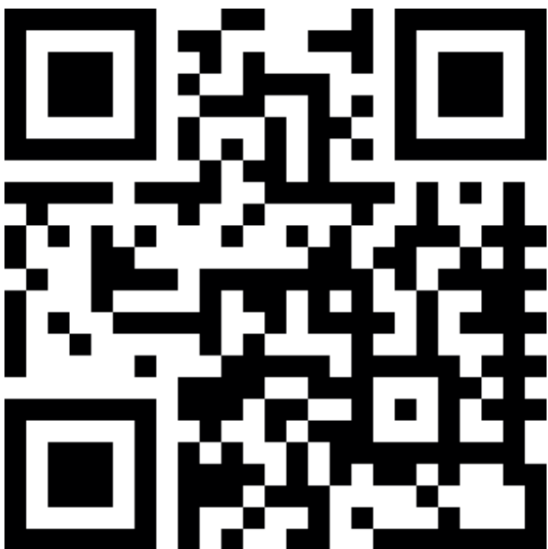


CONTACT INFORMATION


Technical support	support@seneca.it	Product information	sales@seneca.it
-------------------	--	---------------------	--

This document is the property of SENECA srl. Copies and reproduction are prohibited unless authorised.
The content of this document corresponds to the described products and technologies. Stated data may be modified or supplemented for technical and/or sales purposes.


MODULE LAYOUT

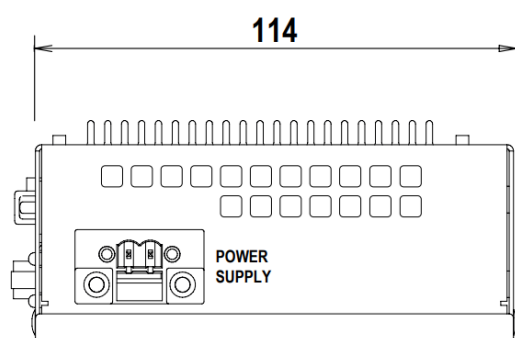

LEFT SIDE

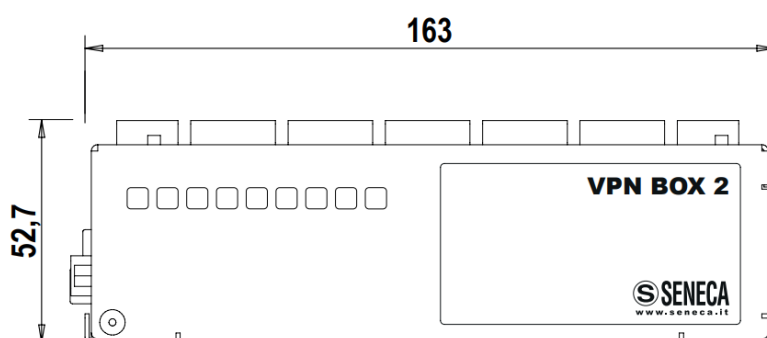

FRONT

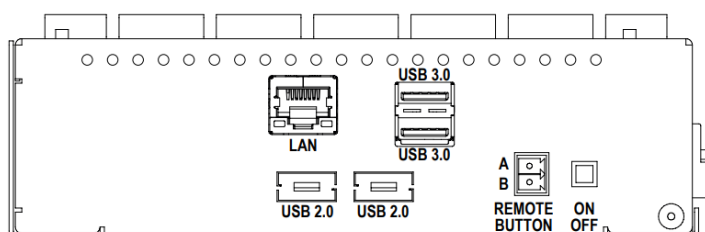

RETRO

Net weight: 1kg

TECHNICAL SPECIFICATIONS


CERTIFICATIONS	 https://www.seneca.it/products/vpn-box2/doc/CE_declaration 
POWER SUPPLY	9 ÷ 36Vdc; 30 ÷ 40W max.
ENVIRONMENTAL CONDITIONS	Storage temperature: -20°C ÷ 70°C Operating temperature: 0°C ÷ 50°C
IP ADDRESS OF FACTORY	The default IP address is configured in DHCP
PROCESSOR	Intel® Pentium™ N4200 1.1GHz ProcessorClock:
CORE NUMBER	Core: 4
COOLING	<i>Fanless</i>
MEMORY	DR3L da 8GB;
HARD DISK	SSD da 64GB
CASE	Compact Fanless
I/O INTERFACE	1x VGA, 1x HDMI, 2x RJ45 GbE LAN, 2x USB 3.0, 2x USB 2.0, ON/OFF button, 1 x PWR LED, 1x HD ACT. LED

Programming tools, app, manuals, templates, examples, etc. for the product can be downloaded free of charged at www.seneca.it in the product section.


ELECTRICAL CONNECTIONS

By means of the removable two-pole terminal, located on the back of the device, it is possible to install an external push-button for switching the device on and off, which can be controlled remotely.

REMOTE BUTTON

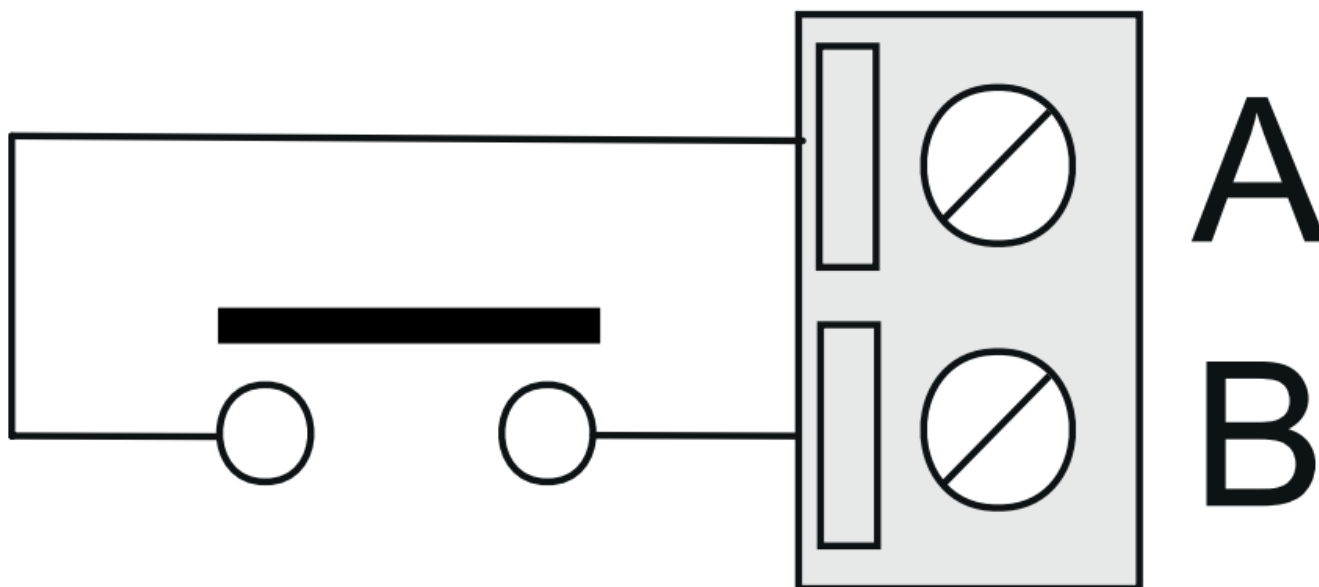

Documents / Resources

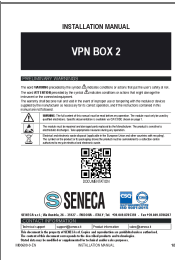	<p>SENECA VPN BOX 2 Network Server [pdf] Instruction Manual MI00600-0-EN, VPN BOX 2 Network Server, VPN BOX 2, Network Server</p>
---	---

References

- [SENECA | Automation Interfaces | Official Website](#)