



SENECA VPN BOX 2 Server Connectivity Module Instruction Manual

[Home](#) » [SENECA](#) » SENECA VPN BOX 2 Server Connectivity Module Instruction Manual 

Contents

- [1 SENECA VPN BOX 2 Server Connectivity Module](#)
- [2 PRELIMINARY WARNINGS](#)
- [3 CONTACT INFORMATION](#)
- [4 MODULE LAYOUT](#)
- [5 TECHNICAL SPECIFICATIONS](#)
- [6 ELECTRICAL CONNECTIONS](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



SENECA VPN BOX 2 Server Connectivity Module



PRELIMINARY WARNINGS

The word WARNING preceded by the symbol indicates conditions or actions that put the user's safety at risk. The word ATTENTION preceded by the symbol indicates conditions or actions that might damage the instrument or the connected equipment. The warranty shall become null and void in the event of improper use or tampering with the module or devices supplied by the manufacturer as necessary for its correct operation, and if the instructions contained in this manual are not followed.



WARNING: The full content of this manual must be read before any operation. The module must only be used by qualified electricians. Specific documentation is available via QR-CODE shown on page 1.



The module must be repaired and damaged parts replaced by the Manufacturer. The product is sensitive to electrostatic discharges. Take appropriate measures during any operation.



Electrical and electronic waste disposal (applicable in the European Union and other countries with recycling). The symbol on the product or its packaging shows the product must be surrendered to a collection centre authorized to recycle electrical and electronic waste




CONTACT INFORMATION


- Technical support support@seneca.it
- Product information sales@seneca.it

This document is the property of SENECA srl. Copies and reproduction are prohibited unless authorised. The content of this document corresponds to the described products and technologies. Stated data may be modified or supplemented for technical and/or sales purposes


MODULE LAYOUT

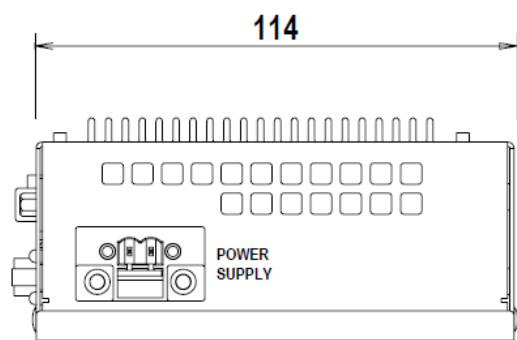

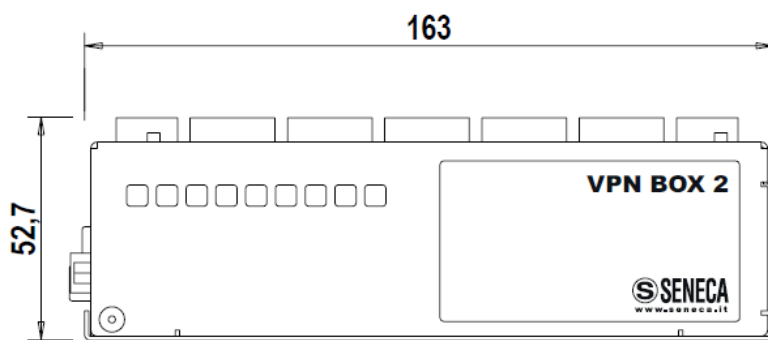


LEFT SIDE

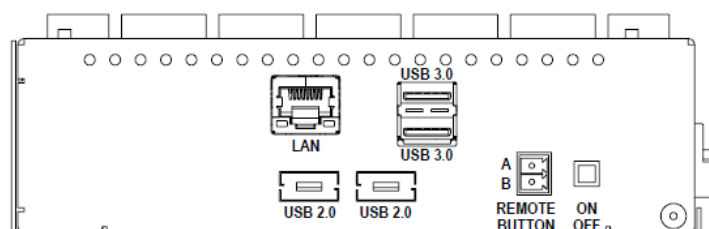

FRONT



TECHNICAL SPECIFICATIONS


CERTIFICATIONS	   https://www.seneca.it/products/vpn-box-2/doc/CE_declaration
POWER SUPPLY	9 ÷ 36Vdc; 30 ÷ 40W max.
ENVIRONMENTAL CONDITIONS	Storage temperature: -20°C ÷ 70°C Operating temperature: 0°C ÷ 50°C
IP ADDRESS OF FACTORY	The default IP address is configured in DHCP
PROCESSOR	Intel® Pentium™ N4200 1.ProcessorClock: 1GHz
CORE NUMBER	Core: 4
COOLING	<i>Fanless</i>
MEMORY	8GB DDR3L dual-channel
HARD DISK	SSD da 64GB
CASE	Compact Fanless
I/O INTERFACE	1x VGA, 1x HDMI, 1x RJ45 (reserved), 1x RJ45 GbE LAN, 2x USB 3.0, 2x USB 2.0, ON /OFF button, 1x PWR LED, 1x HD ACT. LED

Programming tools, app, manuals, templates, examples, etc. for the product can be downloaded free of charged at www.seneca.it in the product section.

ELECTRICAL CONNECTIONS


REMOTE BUTTON

By means of the removable two-pole terminal, located on the back of the device, it is possible to install an external push-button for switching the device on and off, which can be controlled remotely also.

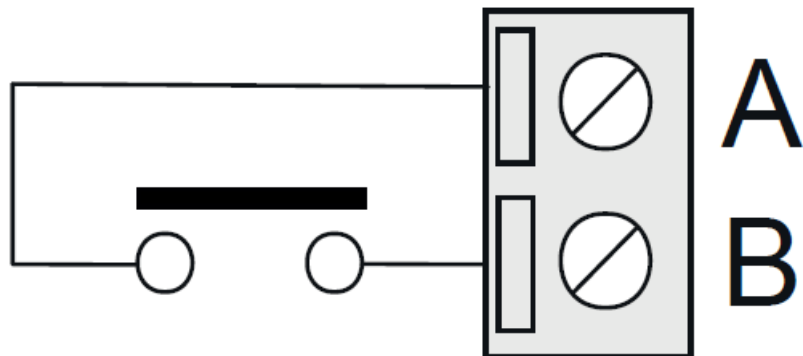

SENECA s.r.l.; Via Austria, 26 – 35127 – PADOVA – ITALY; Tel. +39.049.8705359 – Fax +39.049.8706287

Documents / Resources

	<p>SENECA VPN BOX 2 Server Connectivity Module [pdf] Instruction Manual</p> <p>VPN BOX 2, VPN BOX 2 IoT Server Connectivity Module, IoT Server Connectivity Module, Server Connectivity Module, Connectivity Module, Module, VPN BOX 2 Server Connectivity Module</p>
---	---

References

- [SENECA | Automation Interfaces | Official Website](#)