



SENECA Z-8TC-SI Analog I-O Module Installation Guide

[Home](#) » [SENECA](#) » SENECA Z-8TC-SI Analog I-O Module Installation Guide 


 
SENECA Z-8TC-SI Analog I-O Module Installation Guide




Contents

- 1 PRELIMINARY WARNINGS
- 2 MODULE LAYOUT
- 3 TECHNICAL SPECIFICATIONS
- 4 SUPPORTED INPUT SPECIFICATIONS
- 5 SETTING THE DIP-SWITCHES
- 6 INSTALLATION REGULATIONS
- 7 ELECTRICAL CONNECTIONS
- 8 MODBUS CONNECTION RULES
- 9 CONTACT INFORMATION
- 10 Documents / Resources
- 11 Related Posts

PRELIMINARY WARNINGS

The word **WARNING** preceded by the symbol  indicates conditions or actions that put the user's safety at risk. The word **ATTENTION** preceded by the symbol  indicates conditions or actions that might damage the instrument or the connected equipment. The warranty shall become null and void in the event of improper use or tampering with the module or devices supplied by the manufacturer as necessary for its correct operation, and if the instructions contained in this manual are not followed.

 **WARNING:** The full content of this manual must be read before any operation. The module must only be used by qualified electricians. Specific documentation is available via QR-CODE.




The module must be repaired and damaged parts replaced by the Manufacturer. The product is sensitive to electrostatic discharges. Take appropriate measures during any operation.



Electrical and electronic waste disposal (applicable in the European Union and other countries with recycling). The symbol on the product or its packaging shows the product must be surrendered to a collection centre authorized to recycle electrical and electronic waste.

MODULE LAYOUT

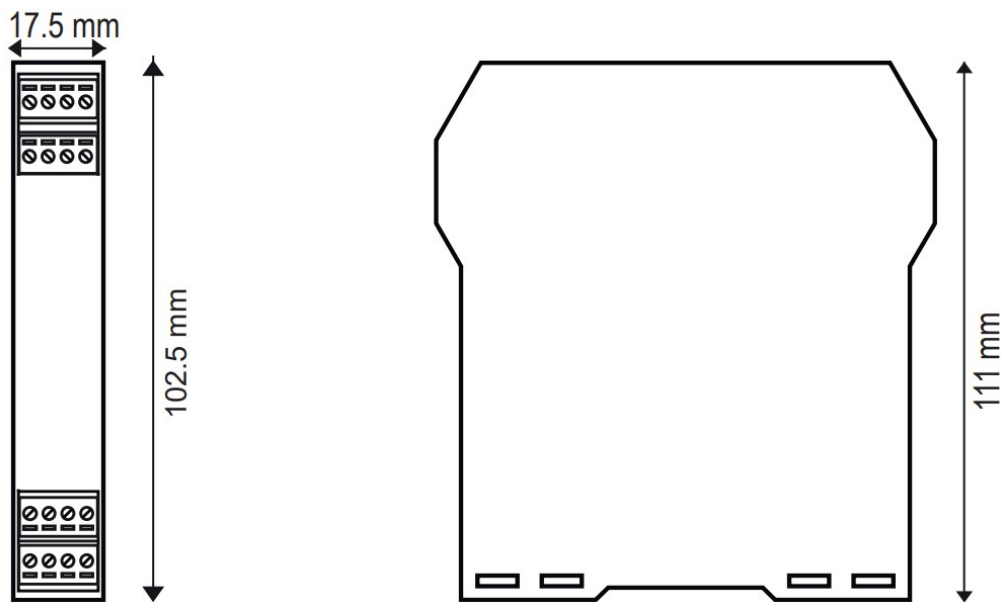


- **Dimensions:** 17.5 x 102.5 x 111 mm
- **Weight:** 100 g
- **Container:** PA6, black

SIGNALS VIA LED ON FRONT PANEL

LED	STATUS	LED meaning
PWR	ON	The device is powered correctly
FAIL	ON	Instrument in error state
RX	Flashing	Data receipt on port #1 RS485
TX	Flashing	Data transmission on port #1 RS485

TECHNICAL SPECIFICATIONS

<p>CERTIFICATIONS</p>	<div data-bbox="480 107 951 264">  </div> <div data-bbox="480 280 1238 311"> https://www.seneca.it/products/z8tc-si/doc/CE_declaration </div> <div data-bbox="488 322 874 703">  </div> <div data-bbox="480 723 1287 754"> https://www.seneca.it/products/z8tc-si-lab/doc/CE_declaration </div> <div data-bbox="488 768 884 1160">  </div>
<p>POWER SUPPLY</p>	<p>Voltage: 10 ÷ 40Vdc; 19 ÷ 28Vac; 50-60 Hz; absorption: 0.6W max</p>
<p>ENVIRONMENTAL CONDITIONS</p>	<p>Operating temperature: -25°C ÷ +70°C. Humidity: 30% ÷ 90% non condensing. Storage temperature: -30°C ÷ +85°C Altitude: Up to 2000 m above sea level Protection rating: IP20</p>
<p>ASSEMBLY</p>	<p>35mm DIN rail IEC EN60715</p>
<p>CONNECTIONS</p>	<p>4-way removable terminal block, 3.5mm pitch, 1.5 mm² cable section max</p>
<p>COMMUNICATION PORTS</p>	<p>IDC10 rear connector for IEC EN 60715 DIN bar, ModBUS-RTU, 1200÷115200 Baud and Micro USB on the front, ModBUS protocol, 2400 Baud</p>

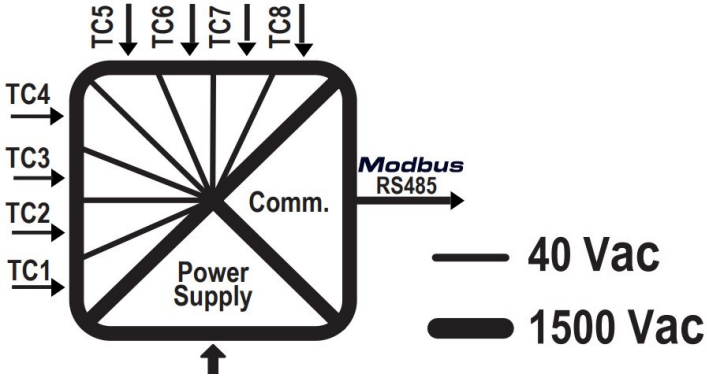INSULATION	 <p>The diagram shows a square module with a diagonal line from the top-left to the bottom-right. On the left side, there are eight horizontal arrows pointing into the module, labeled TC1, TC2, TC3, TC4, TC5, TC6, TC7, and TC8 from bottom to top. On the top side, there are four vertical arrows pointing into the module, labeled TC5, TC6, TC7, and TC8 from left to right. On the bottom side, there is a single upward-pointing arrow labeled 'Power Supply'. On the right side, there is a horizontal arrow pointing out of the module labeled 'Comm.' with 'Modbus RS485' written above it. To the right of the module, there are two horizontal lines: a thin line labeled '40 Vac' and a thick line labeled '1500 Vac'.</p>
COMMUNICATION PORTS	RS485 on IDC10 connector
PROTOCOL	ModBUS- RTU
TC INPUTS	No. of channels: 8; Type of thermocouples: J, K, E, N, S, R, B, T, L (individually activated and configurable in pairs)

N.B.: A delayed fuse with a maximum rating of 2.5 A must be installed in series with the power supply connection, near the module.

SUPPORTED INPUT SPECIFICATIONS

SENSOR	ACCURACY (AT 23°C)	SOLUTION	MEASURING RANGE	STANDARD
J	$\pm (0.03\% + 0.2^{\circ}\text{C})$ (**)	0.5 μV ($\sim 0.01^{\circ}\text{C}$ @ 0°C)	-210 ÷ +1200°C	EN 60584-1:1997
K	$\pm (0.03\% + 0.2^{\circ}\text{C})$ (**)	0.5 μV ($\sim 0.02^{\circ}\text{C}$ @ 0°C)	-200 ÷ +1372°C	EN 60584-1:1997
R	$\pm (0.03\% + 0.3^{\circ}\text{C})$ (**)	0.5 μV ($\sim 0.1^{\circ}\text{C}$ @ 0°C)	-50 ÷ +1768°C	EN 60584-1:1997
S	$\pm (0.03\% + 0.3^{\circ}\text{C})$ (**)	0.5 μV ($\sim 0.1^{\circ}\text{C}$ @ 0°C)	-50 ÷ +1768°C	EN 60584-1:1997
T	$\pm (0.03\% + 0.1^{\circ}\text{C})$ (**)	0.5 μV ($\sim 0.01^{\circ}\text{C}$ @ 0°C)	-200 ÷ +400°C	EN 60584-1:1997
B	$\pm (0.03\% + 0.3^{\circ}\text{C})$ (**)	0.5 μV ($\sim 0.2^{\circ}\text{C}$ @ 0°C)	+250 ÷ +1820°C (*)	EN 60584-1:1997
E	$\pm (0.03\% + 0.2^{\circ}\text{C})$ (**)	0.5 μV ($\sim 0.01^{\circ}\text{C}$ @ 0°C)	-200 ÷ +1000°C	EN 60584-1:1997
N	$\pm (0.03\% + 0.2^{\circ}\text{C})$ (**)	0.5 μV ($\sim 0.02^{\circ}\text{C}$ @ 0°C)	-200 ÷ +1300°C	EN 60584-1:1997
L	$\pm (0.03\% + 0.15^{\circ}\text{C})$ (**)	0.5 μV ($\sim 0.01^{\circ}\text{C}$ @ 0°C)	-200 ÷ +800°C	Gost 8.585-2001
mV	0.03% + 15 μV	0.5 μV	$\pm 150\text{ mV}$	

(*) Up to 250°C a zero temperature value is assumed.

(**) Acquisition speed 100ms, no cold junction compensation.

















Even at constant room temperature, the declared accuracies are achieved after at least 30 minutes from switching on the device.









SPAN mV	±150mV.
IMPEDANCE	> 4MΩ.
ADC	24 bit.
TEMPERATURE DRIFT	< 100ppm/K.
COLD JUNCTION ERROR	<1°C.
TEST CURRENT	<100nA.
CMRR	70dB @ 100ms
DMRR	60 dB.



SETTING THE DIP-SWITCHES

The position of the DIP-switches defines the Modbus communication parameters of the module: Address and Baud Rate The following table shows the values of the Baud Rate and the Address according to the setting of the DIP-switches:

DIP-Switch status				
SW1 POSITION	B A U D R A T E	SW1 POSITION	POSITION	FU NC TION
1 2 3 4 5 6 7 8		3 4 5 6 7 8	9	BO OT LO AD ER
	96 00			Ena bled
	19 20 0			Dis able d
	38 40 0		10	TE RM I NA TO R
	57 60 0			Ena bled
	Fr om			Dis able d
	E E P R O M			

Note: When DIP – switches 1 to 8 are OFF, the communication settings are taken from programming (EEPROM).
Note 2: The RS485 line must be terminated only at the ends of the communication line.

FACTORY SETTINGS							
1	2	3	4	5	6	7	8
							

KEY	
	ON
	OFF

The position of the dip-switches defines the communication parameters of the module. The default configuration is as follows: Address 1, 38400, no parity, 1 stop bit.

INSTALLATION REGULATIONS

The module has been designed for vertical installation on a DIN 46277 rail. For optimal operation and long life, adequate ventilation must be provided. Avoid positioning ducting or other objects that obstruct the ventilation slots. Avoid mounting modules over heat-generating equipment. Installation in the bottom part of the electrical panel is recommended.



CAUTION

These are open type devices intended for installation in a final casing/panel that offers mechanical protection and protection against the spread of fire.

ELECTRICAL CONNECTIONS




CAUTION

To meet the electromagnetic immunity requirements:

- use shielded signal cables;
- connect the shield to a preferential instrumentation earth system;
- separate shielded cables from other cables used for power installations (transformers, inverters, motors, etc.).


Power supply and Modbus interface are available using the Seneca DIN rail bus, via the IDC10 rear connector, or the Z-PC-DINAL-17.5 accessory.

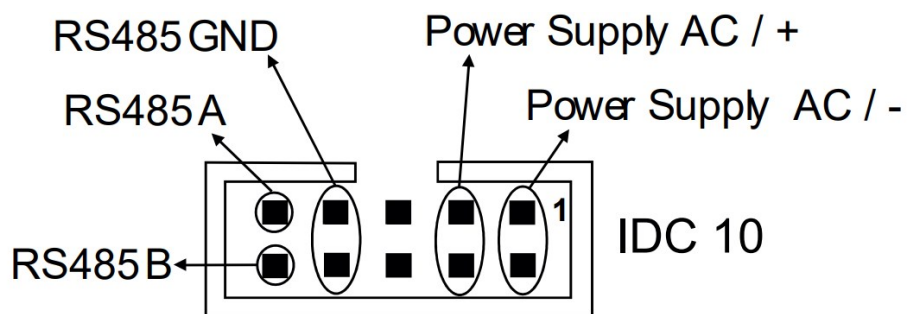


Back connector (IDC 10)

The illustration shows the meanings of the various IDC10 connector pins if signals are to be sent via them directly

Z-8TC-SI

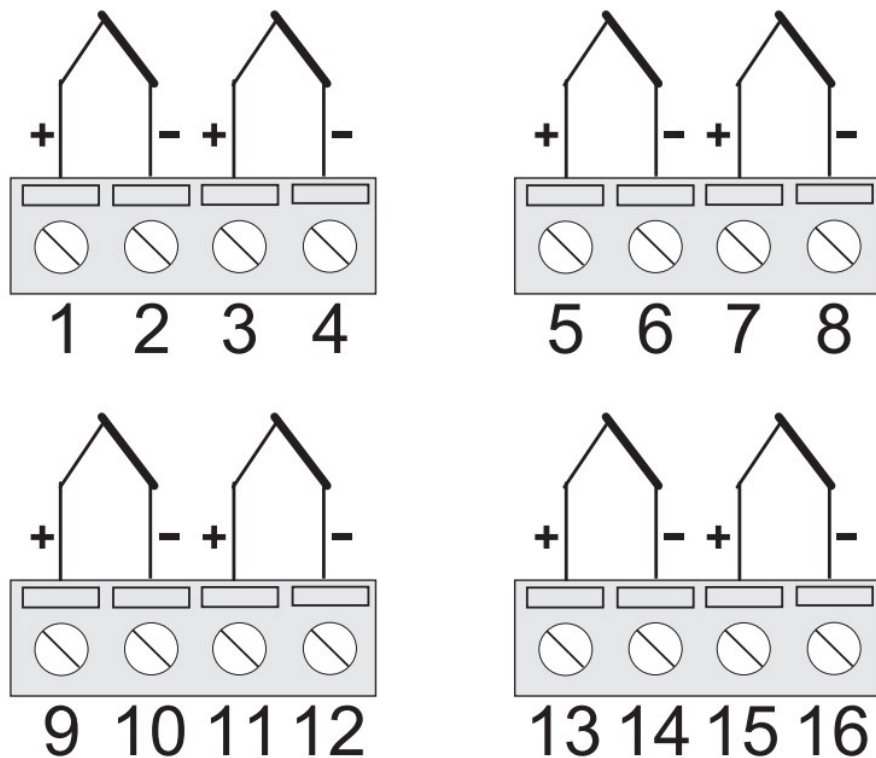


Z-8TC-SI-LAB

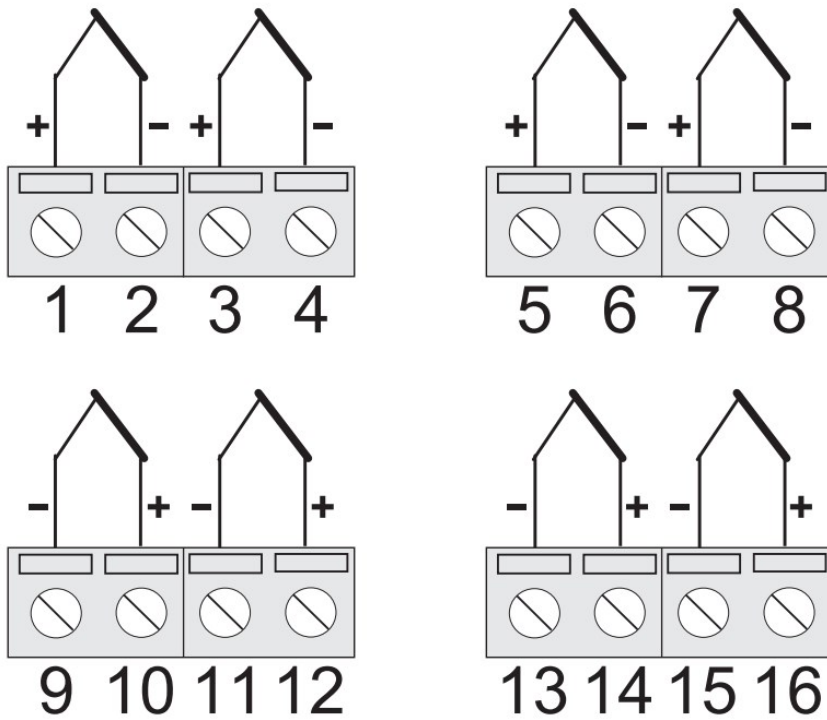

MODBUS CONNECTION RULES

1. Install the modules in the DIN rail (120 max)
2. Connect the remote modules using cables of an appropriate length. The following table shows cable length data:
 - Bus length: maximum length of the Modbus network according to the Baud Rate. This is the length of the cables that connect the two farthest modules (**see Diagram 1**).
 - Derivation length: maximum length of a derivation 2 m (**see Diagram 1**).

Bus length	Derivation length
1200 m	2 m

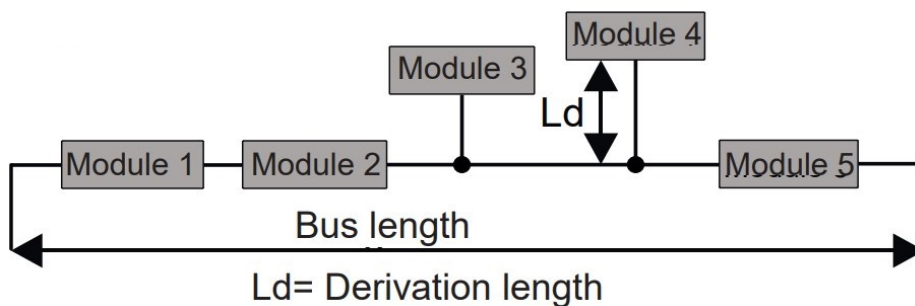


For maximum performance, it is recommended to use special shielded cables manufactured specifically for RS485 communication.

CONTACT INFORMATION

Technical support: support@seneca.it
 Product information: sales@seneca.it

This document is the property of SENECA srl. Copies and reproduction are prohibited unless authorised. The content of this document corresponds to the described products and technologies. Stated data may be modified or supplemented for technical and/or sales purposes.

Documents / Resources

	<p>SENECA Z-8TC-SI Analog I-O Module [pdf] Installation Guide</p> <p>Z-8TC-SI, Z-8TC-SI-LAB, Z-8TC-SI Analog I-O Module, Z-8TC-SI, Analog I-O Module, I-O Module, Module</p>
---	--

Manuals+.