

# sensate XT1220 TPMS Bluetooth Transceiver Owner's Manual

Home » sensate » sensate XT1220 TPMS Bluetooth Transceiver Owner's Manual

#### **Contents**

- 1 sensate XT1220 TPMS Bluetooth
- **Transceiver**
- 2 Specifications
- **3 Product Usage Instructions**
- **4 Features**
- 5 FAQ
- 6 Documents / Resources
  - **6.1 References**



## sensate XT1220 TPMS Bluetooth Transceiver



· Mechanical:

• **Dimension:** 4.65 x 1.56 x 1.14 inches (11.8 cm x 3.9 cm x 2.9 cm)

Weight: 2 oz. (49 g)

• Case Material: Glass Reinforced Nylon

· Electrical:

Power: 6-36v DC; 101v Protected ISO16750-2

• Electrical Compliance: BLE 5.3

· Environmental:

• Operational Temperature: -

Seal Rating: –

• Communications:

· Bluetooth: Yes

Compliance:

· Certifications: FCC, IC, CE/RED, UKCA, Anatel

# **Product Usage Instructions**

## Integrate Tire Data. Anywhere

The XT1220 Bluetooth transceiver seamlessly collects and reports integral tire pressure and temperature data to any INSIGHTS or 3rd party telematics system. Flexible mounting options allow the device to adapt to any trailer or chassis, regardless of installation requirements or complexity. With auto-learn and auto-location, the XT1220 eliminates the need for manual programming and streamlines diagnostics. Vital tire data is processed in the cloud to track tire inflation, predict blowouts, and reduce operating costs and downtime for vehicles, operators and fleet managers.

## **Highlights**



Get vital tire pressure and temp monitoring in any telematics platform



Compatible with all INSIGHTS external and internal TPMS sensors



Precise Tire Position (PTP) technology – Great for vehicles with double tires



Bluetooth for real-time, rapid data transfer

#### **Features**

- · Sleek design for any installation scenario
- Easy integration with 3rd party telematics platforms
- · Quick, worry-free install

- Tough, commercial-grade components built for the harshest environments
- Over-the-air firmware upgrades and mobile commissioning

### Step 1: Installation

Mount the XT1220 TPMS Bluetooth Transceiver in a suitable location within your vehicle.

## Step 2: Pairing

Ensure your telematics platform supports Bluetooth connectivity. Pair the XT1220 with your device following the provided instructions.

#### Step 3: Monitoring

Access tire pressure and temperature data in real-time on your telematics platform after successful pairing.

## Step 4: Maintenance

Regularly check the functionality of the XT1220 and replace batteries as needed to ensure continuous monitoring.

© 2023 Sensata INSIGHTS. All rights reserved.

sensatainsights.com

## **FAQ**

#### Q: Is the XT1220 compatible with all INSIGHTS TPMS sensors?

A: Yes, the XT1220 is compatible with all INSIGHTS external and internal TPMS sensors.

#### Q: What is the Bluetooth version used in the XT1220?

A: The XT1220 utilizes Bluetooth Low Energy (BLE) version 5.3 for rapid data transfer.

#### Q: What certifications does the XT1220 hold?

A: The XT1220 is certified by FCC, IC, CE/RED, UKCA, and Anatel for compliance and quality assurance.

# **Documents / Resources**



sensate XT1220 TPMS Bluetooth Transceiver [pdf] Owner's Manual

XT1220 TPMS Bluetooth Transceiver, XT1220, TPMS Bluetooth Transceiver, Bluetooth Transceiver, Transceiver

## References

- XT Telematics & Data Analytics | Xirgo Technologies
- User Manual

## Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.