



SENSATIVE Strip Drip Door/Window Sensor User Manual

[Home](#) » [SENSATIVE](#) » SENSATIVE Strip Drip Door/Window Sensor User Manual 

SENSATIVE Strip Drip Door/Window Sensor User Manual



Contents

1 ADD

1.1 To Add Strips to Your Z-Wave™ Controller

1.2 To perform a manual wake up

2 SET-UP

2.1 To test the Strips, please follow the steps below

2.2 To mount the Strips, please follow the steps below

2.3 User Commands (Table A)

2.4 LED Notifications (Table B)

3 CONFIGURATIONPARAMETERS

4 Documents / Resources

5 Related Posts

ADD

To Add Strips to Your Z-Wave™ Controller

Strips Drip 700 is a SmartStart enabled product and can be added to a Z-Wave network by using SmartStart. Start by scanning the Z-Wave QR Code present on the back label of the Strip, or on the DSK leaflet present in the box. Strips can be added to both secure and non-secure controllers and with or without SmartStart.

a). Add using SmartStart inclusion

You can use this method of inclusion only if your Z-Wave Controller supports SmartStart.


1. Open up your Z-Wave Controllers app and select SmartStart inclusion.
2. Scan the QR Code (You can find the QR Code on the back of Strips or in the package).
3. Remove the magnet from Strips.*
SmartStart will automatically begin 30 seconds after removing the magnets and Strips will be added within 10 minutes when it has been activated within the Z-Wave Controller range.
4. One long LED blink means Strips has been successfully added to your Z-Wave network.

b). Add using classic inclusion

1. Open your Z-Wave Controller application and start pairing mode.
2. Remove the magnet from Strips.*
3. One long LED blink means Strips has been successfully added to your Z-Wave network.

If you have previously removed the magnets from Strips, or need to re-add the device, performing a manual wake up will join the device when the controller is in pairing mode.


To perform a manual wake up

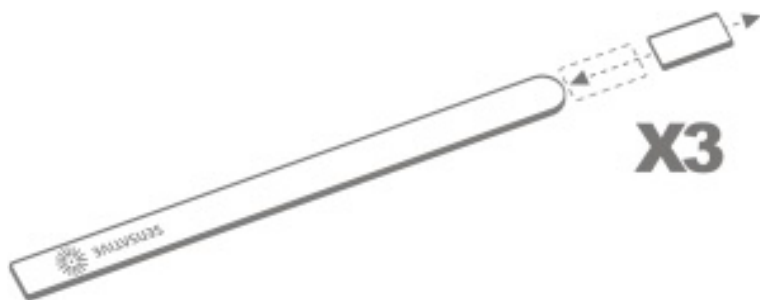

1. Take the magnet and move it to the rounded edge and wait for the blink, then move the magnet away.
2. Repeat this 3 times. A final short blink will confirm that the user command was successful.

SET-UP

To test the Strips, please follow the steps below

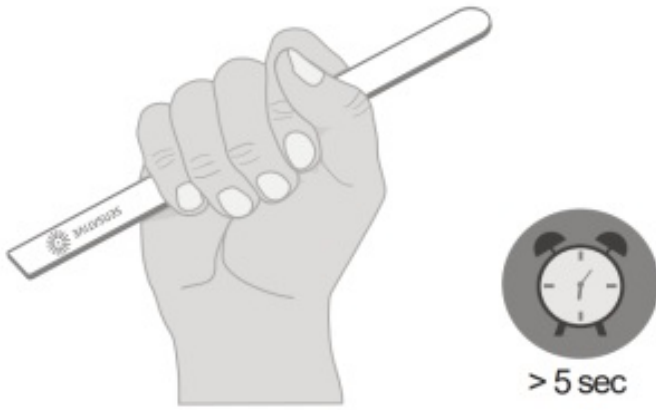


You may verify that your Z-Wave controller shows Strips Drip reporting correctly by holding it firmly according to the illustration above for >5 seconds. Strips Drip will sense the moisture level and send a leakage alarm. After removing your hand, the water leakage alarm should disappear.

Strips Drip includes a mounting plate with built-in moisture detection pads. Strips Drip should be mounted on the mounting plate immediately after completing the inclusion process. This is in order to calibrate the leakage sensor correctly. Keep the moisture detection pads dry for the first 2 hours for a proper leakage sensor calibration

Please note that

Poor network reliability will affect Strips Drip battery life. To make sure you have a good network, place Strips Drip at its indented location and perform a Wake Up (see Table A). If Strips Drip blinks 5 times, this indicates that Strips Drip failed to communicate with the controller. If it happens you may move the Z-Wave controller closer or add an extender between the controller and Strips Drip.

To mount the Strips, please follow the steps below

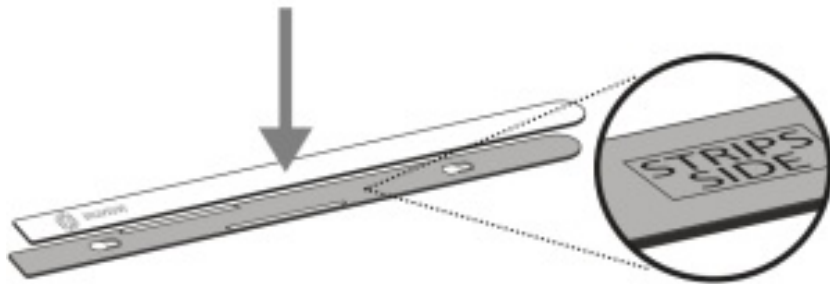

Remove the protective tape from Strips Drip adhesive. Mount Strips Drip on the marked "Strips Side" of the mounting plate as illustrated above.

You can choose one of the three alternatives for mounting Strips:

- Place Strips in the intended location.
- Use the adhesive on the mounting plate to place it firmly in the right place. Please make sure the surface is clean, dry and at least +10°C (+50°F). Remove the protective tape from the mounting plate and place Strips Drip firmly on the surface.
- Use screws to mount Strips on its location. Use the plate to mark the holes and use flat screw heads.

Note that the adhesive is permanent and may damage your Strips or surface upon removal. If you need to remove Strips make sure to follow the necessary steps (Find the instructions on our website).


Your Strips Drip is now mounted and added to your Z-Wave controller. It will detect temperature and moisture levels that may be used for alarms or controlling other devices. Strips Drip analyzes the moisture of the pads to indicate a leak.

You should not remove Strips if a leak occurs. The sensor pods will dry after the water has been removed. You may use a cloth to dry carefully around the soaking pads for a faster drying.

User Commands (Table A)

Wake Up	To wake up Strips manually for communication with the Z-Wave controller, move the magnet 3 times according to the illustration above.
Add/Remove	Place the controller into pairing or exclude mode and perform the “wake up” pattern described in the first section of this manual.
Factory Default Reset	You may need to reset Strips if your Z-Wave controller is missing or not responding. Follow the instructions for Wake Up above, but on the 3rd repetition, keep the magnet of the rounded edge for 10 seconds. A long LED signal indicates success.

Execute user commands according to “Table A” by moving the magnet according to the picture below.

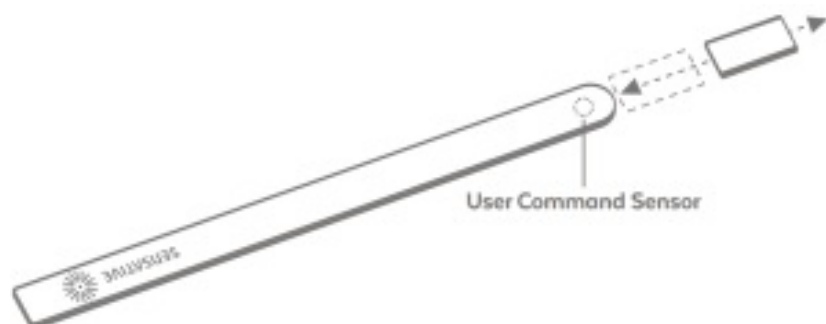

LED Notifications (Table B)

1 Short Blink	-User feedback during commands -Successfully sent report
2 Short Blinks	The indication when Strips is not added to a network.
1 Long Blink	A user command is successfully executed.
5 Short Blinks	Error (e.g. communication with controller failed)

CONFIGURATIONPARAMETERS

No	Name	Description	Size	Values	Default Value
2	LED alarm event reporting	Turn On or Off LED for specific event indications (ex. alarms)	1 byte	0: Off 1: On	1
4	Temperature reporting type	Turn On or Off the temperature sensor value reporting(Does not affect temperature alarms.)	1 byte	0: Off 1. On. Reports the actual value when the temperature is changed according to parameter 26 since the last report or at least according to the reporting period set in the config parameter 25. 2. On. Reports the actual value periodically based on the config parameter 25. 3. On. The average temperature during the period is sent periodically during every wake up interval.	0
5	Temperature reporting unit	Select the temperature unit	1 byte	0: Celsius 1: Fahrenheit	0

6	Temperature alarms	Turn On or Off the temperature alarm	1 byte	0: Off 1: On	0
7	High temperature alarm level	Select a high temperature alarm level	1 byte	-20 to +80 (Degree C)	40
8	Low temperature alarm level	Select a low temperature alarm level	1 byte	-20 to +60 (Degree C)	5
12	Leakage/moisture alarm	Turn the Leakage Alarm On or Off	1 byte	0: Off 1: On	1
13	Leakage/moisture alarm level	Set the trigger level at which the Leakage Alarm Notification Report will be sent	1 byte	1 to 100 (1: Almost Dry, 100: Wet)	10
14	Leakage/moisture reporting period	Select the number of hours between moisture reports. Report values between -100 to 100.	1 byte	0-120 Hours (Hours between reports)	0 (Off)

15	Activate supervision	<p>Activate Supervision command for only important alarm events or all events *Supervised commands require a confirmation</p> <p>from the gateway when a notification is received</p>	1 byte	<p>0: Off 1: Alarm Report (*) 2: All Reports *Only for alarm events (e.g. Leakage alarm)</p>	1
20	Wake-Up moisture polling workaround for Fibaro Gateway users	Turn On or Off Moisture reporting during polling (applicable only for Fibaro gateway users)	1 byte	<p>0: Off 1: On</p>	0
23	Perform leakage/moisture sensor calibration	Should be performed when Drip is mounted correctly and absolutely dry to calibrate the "zero-level". A Multi Level Sensor Report with the Moisture value is sent after the calibration is performed.	1 byte	<p>0: Device resets to this value after performing capacitance calibration and sends a report with value 0 to the gateway (as recommended by Z-Wave Specifications.) 1: Perform Calibration</p>	0
24	Temperature offset	The offset value is used to calibrate the temperature reports in the actual temperature.	1 byte	-100 to 100 [=-10.0 to +10.0 (Degree C)]	0
25	Temperature reporting period	Select the number of minutes between the temperature reports (15 minutes to 24 hours) (Used for parameter 4)	2 bytes	15-1440 (minutes between reports)	1440

26	Temperature delta	A new temperature report is sent when the temperature has changed more than the delta value. Input value converted to one decimal place.	1 byte	5 to 100 [=0.5 to 10.0 (Degree C)]	20 (=2.0' C)
27	Temperature hysteresis for temperature alarms	Triggers alarm clear reports (See parameters 7&8). Input value converted to one decimal place.	1 byte	5 to 100 [=0.5 to 10.0 (Degree C)]	20 (=2.0' C)

For Good Communication:

Strips uses low power radio signals to communicate with your Z-Wave controller. For best results, please consider the following:

- Strips should not be mounted directly on magnetic surfaces or encased within a metal structure as the range will be reduced.
- Strips range is up to 99 meters. (325 feet)
- Any non-battery Z-Wave device will act as a repeater to increase network reliability and range.

Association	Strips supports association group 1 (lifeline), max 1 node, normally used to send Strips' notification to the Z-Wave Controller.
Tamper	Strips will send a tamper alert if it detects that someone tries to wake up or manipulate Strips.

This product can be operated in any Z-Wave Controller with other Z-Wave certified devices from other manufacturers. All mains operated nodes within the network will act as a repeater, regardless of vendor, to increase the reliability of network.


For Command Classes and supported Notification Events please see: www.sensative.com/drip700

Enjoy Strips Drip for years to come!

Visit sensative.com/drip700 to find out more, including instructional videos and for any support inquiries.



Documents / Resources

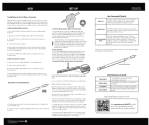	<p>SENSATIVE Strip Drip Door/Window Sensor [pdf] User Manual Strip, Drip Door Sensor, Drip Window Sensor</p>
---	--