




SENSOR PARTNERS Cube-35-F Ultrasonic Proximity Switch Instruction Manual

[Home](#) » [Sensor Partners](#) » **SENSOR PARTNERS Cube-35-F Ultrasonic Proximity Switch Instruction Manual** 



Operating manual

Ultrasonic proximity switch with one switching output and IO-Link



cube-35/F
cube-130/F
cube-340/F

Contents

- 1 Product Description
- 2 Diagram 1: Set sensor via Teach-in procedure
- 3 Technical data
- 4 Documents / Resources
 - 4.1 References

Product Description

The cube sensor offers a non-contact measurement of the distance to an object which must be positioned within the sensor's detection zone.

The switching output is set conditional upon the adjusted switching distance.

Safety Notes

- Read the operating manual prior to start-up.
- Connection, installation and adjustments may only be carried out by qualified staff.
- No safety component in accordance with the EU Machine Directive, use in the area of personal and machine protection not permitted.

Proper Use

cube ultrasonic sensors are used for non-contact detection of objects.

IO-Link

The cube sensor is IO-Link-capable in accordance with IO-Link specification V1.1 and supports Smart Sensor Profile like Measuring and Switching Sensor. The sensor can be monitored and parameterised via IO-Link.

Installation

- Mount the sensor at the place of fitting, see >>QuickLock mounting bracket<<.
- Connect a connection cable to the M12 device plug, see Fig. 2.
- If necessary, use the alignment assistance (see >>Using the Alignment Assistance<<).

Start-up

- Connect the power supply.
- Set the parameters of the sensor, see Diagram 1.

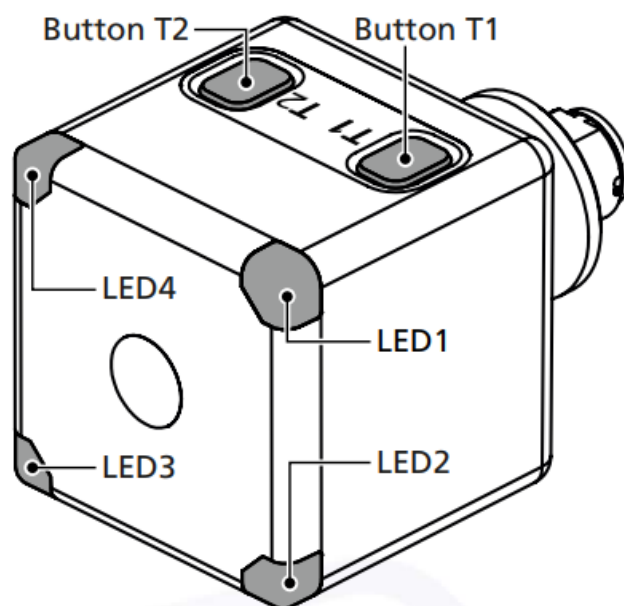


Fig. 1: Controls of the cube sensor

Controls of the cube sensor

The sensor can be operated using the push buttons T1 and T2. Four LEDs indicate the operation and the state of the output, see Fig. 1 and Fig. 3.

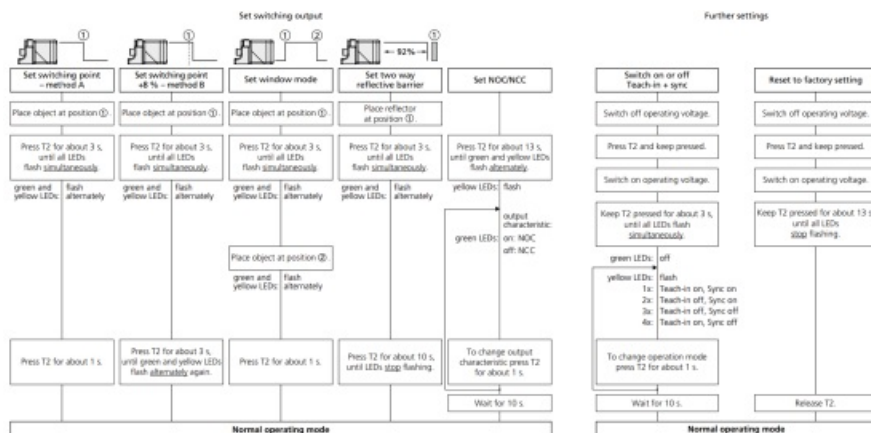
	microsonic notation	IO-Link notation	IO-Link Smart Sensor Profile	colour
1	+U _B	L+		brown
2	–	–	–	white
3	–U _B	L–		blue
4	F	Q	SSC	black
5	Com	NC		grey

Fig. 2: Pin assignment with view onto sensor plug, IO-Link notation and colour coding of the microsonic connection cables

LED	Colour	Indicator	LED...	Meaning
LED1	yellow	state of output	on off	output is set output is not set
LED2	green	power indicator	on flashing	normal operating mode IO-Link mode
LED3	green	power indicator	on flashing	normal operating mode IO-Link mode
LED4	yellow	state of output	on off	output is set output is not set

Fig. 3: Description of the LED indicators

Diagram 1: Set sensor via Teach-in procedure



Operating Modes

■ Operation with one switching point

The switching output is set when the object falls below the set switching point.

■ Window mode

The switching output is set when the object is within the window limits.

■ Two-way reflective barrier

The switching output is set when the object is between sensor and fixed reflector.

Synchronisation

If the assembly distance of multiple sensors falls below the values shown in Fig. 4, they can influence one another.

To avoid this, the internal synchronisation should be used («sync» must be switched on, see Diagram 1). Interconnect each pin 5 of the sensors to be synchronised.

 
 
		
cube-35...	≥ 0.40 m	≥ 2.50 m
cube-130...	≥ 1.10 m	≥ 8.00 m
cube-340...	≥ 2.00 m	≥ 18.00 m

Fig. 4: Minimal assembly distances without synchronisation

QuickLock mounting bracket

The cube sensor is attached using the QuickLock mounting bracket:

⇒ Insert the sensor into the bracket according to Fig. 5 and press until the bracket audibly engages.

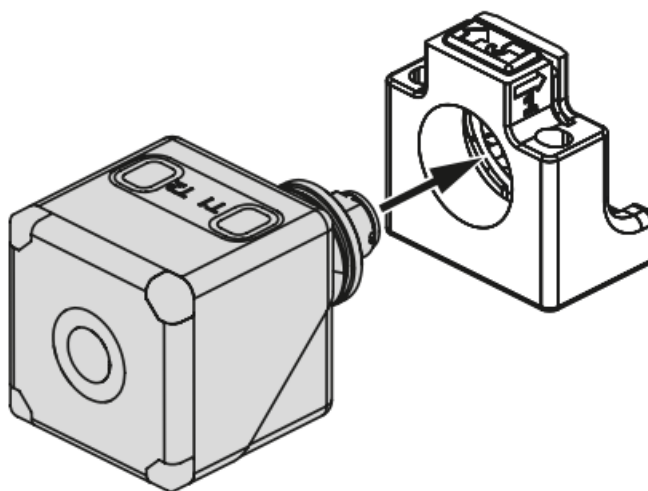


Fig. 5: QuickLock mounting bracket:
insert Sensor

The sensor can be rotated around its own axis when inserted into the bracket.

Furthermore, the sensor head can be rotated so that measurements can be taken in four different directions, see »Rotatable sensor head«.

The bracket can be locked:

⇒ Slide the latch (Fig. 6) in the direction of the sensor.

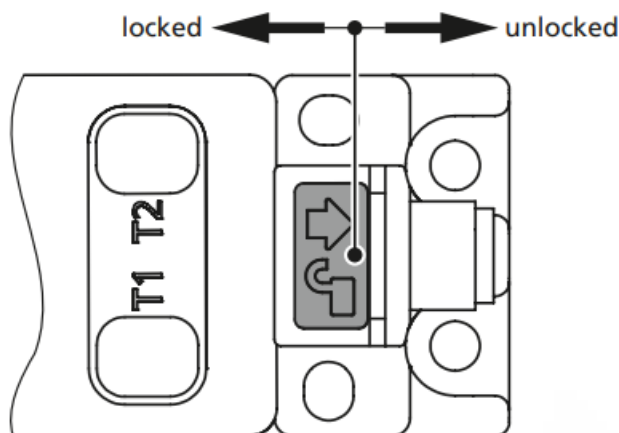


Fig. 6: QuickLock mounting bracket:
lock/unlock Sensor

Remove the sensor from the QuickLock mounting bracket:

⇒ Unlock the latch according to Fig. 6 and press down (Fig. 7). The sensor detaches and can be removed.

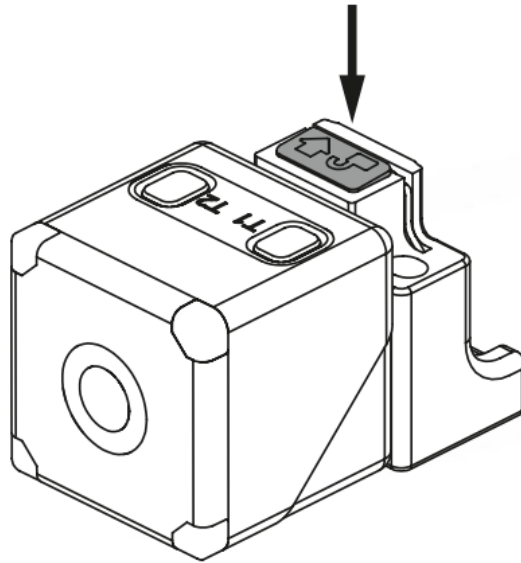


Fig. 7: Remove the sensor

Rotatable sensor head

The cube sensor has a rotatable sensor head, with which the orientation of the sensor can be rotated by 180° (Fig. 8).

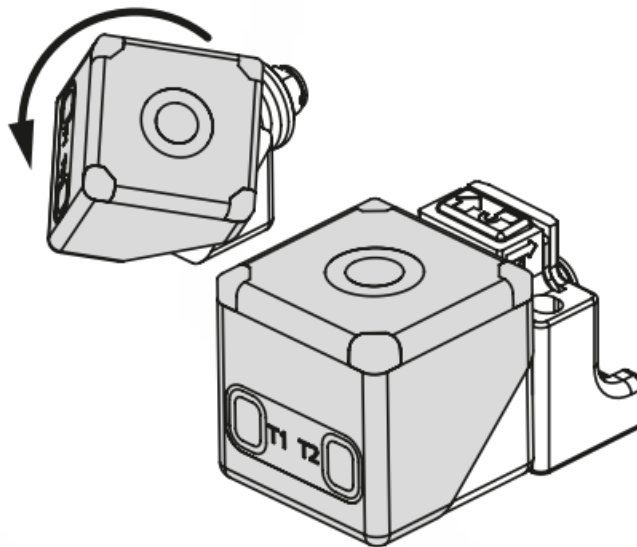


Fig. 8: Rotatable sensor head

Factory Setting

The cube sensor is delivered factory made with the following settings:

- Switching output on operating mode switching point
- Switching output on NOC Switching distance at operating range
- Input Com set to »sync«
- Filter at F01
- Filter strength at P00

Using the Alignment Assistance

With the internal alignment assistance the sensor can be optimally aligned to the object during installation. To do this, proceed as follows (see Fig. 9):

⇒ Mount the sensor loosely at the place of mounting so that it can still be moved.

- ⇒ Press T2 shortly. The yellow LEDs flash. The faster the the yellow LEDs flash, the stronger the received signal.
- ⇒ Point the sensor at different angles to the object for about 10 seconds so that the sensor can determine the maximum signal level. Afterwards align the sensor until the yellow LEDs light constantly.
- ⇒ Screw the sensor in this position.
- ⇒ Press T2 shortly (or wait approx. 120 s) to exit the Alignment Assistance. The green LEDs flash 2x and the sensor returns to normal operating mode.

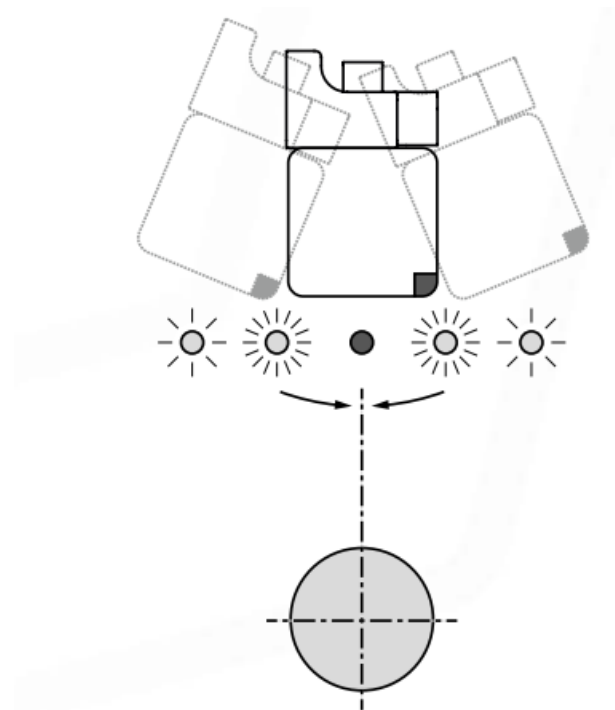


Fig. 9: Align the sensor optimally

Maintenance

microsonic sensors are maintenancefree. In case of excess caked-on dirt we recommend cleaning the white sensor surface.

Notes

The cube sensor has a blind zone, within which a distance measurement is not possible.

- The cube sensor is equipped with an internal temperature compensation. Due to the sensors self heating, the temperature compensation reaches its optimal working point after approx. 3 minutes of operation.
- The cube sensor has a push-pull switching output
- Choosing between output function NOC and NCC is possible.
- In the normal operating mode the illuminated yellow LEDs signal that the switching output is set.
- The flashing green LEDs indicate that the sensor is in IO-Link mode.
- If a Teach-in procedure is not completed, all changes are deleted after approx. 30 seconds.
- If all LEDs flash rapidly alternately for approx. 3 seconds during a teach-in procedure, the teach-in procedure was not successful and is discarded.
- In the Two-way reflective barrier operating mode, the object has to be within the range of 0 to 92% of the set distance.
- In the Set switching point-method A Teach-in procedure the actual distance to the object is taught to the sensor as the switching point. If the object moves towards the sensor (e.g. with level control) then the taught distance is the level at which the sensor has to switch the output.
- If the object to be scanned moves into the detection area from the side, the Set switching point +8% method B Teach-in procedure should be used. In this way the switching distance is set 8% further than the actual measured distance to the object. This ensures a reliable switching behavior even if the height of the objects varies slightly, see Fig. 10.

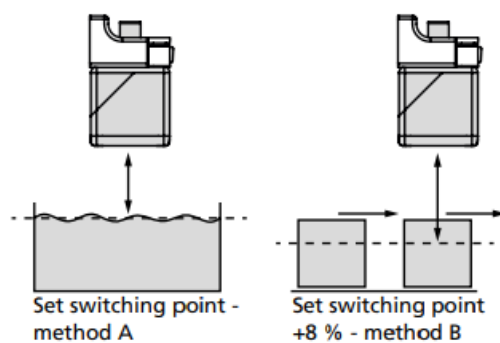





 
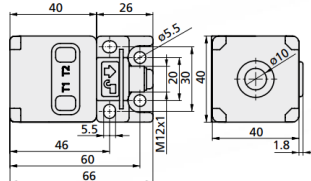
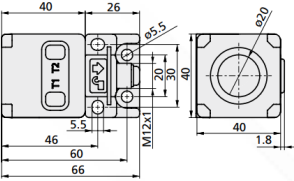
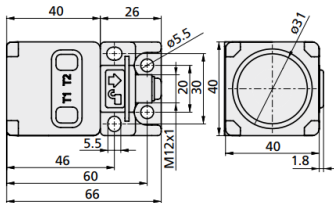
Fig. 10: Setting the switching point for different directions of movement of the object

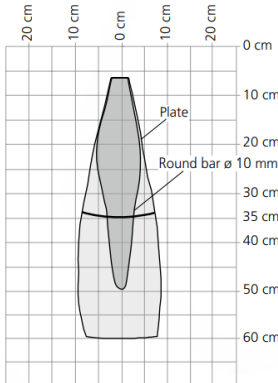
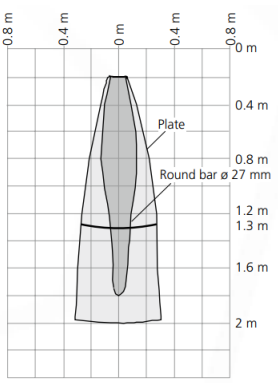
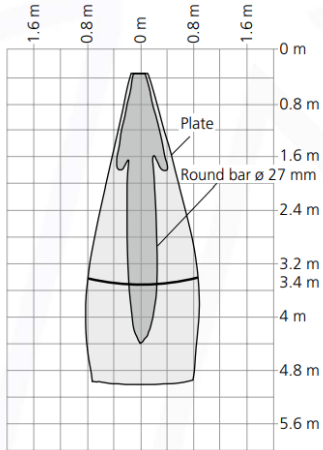
- The sensor can be reset to its factory setting (see Further settings, Diagram 1).
- The cube sensor can be locked against unwanted changes in the sensor via function Switch on or off Teach-in + sync, see Diagram 1.
- Using the Link Control adapter (optional accessory) and the LinkControl software for Windows, all Teach-in and additional sensor parameter settings can be optionally adjusted.
- The latest IODD file and information about start-up and configuration of cube sensors via IO-Link, you will find online at: www.microsonic.de/en/cube

Scope of delivery

1x QuickLock mounting bracket

Technical data

	cube-35... 	cube-130... 	cube-340... 
			
blind zone	0 to 65 mm	0 to 200 mm	0 to 350 mm
operating range	350 mm	1,300 mm	3,400 mm
maximum range	600 mm	2,000 mm	5,000 mm
angle of beam spread	see detection zone	see detection zone	see detection zone
transducer frequency	400 kHz	200 kHz	120 kHz
measurement resolution	0.056 mm	0.224 mm	0.224 mm
digital resolution	0.1 mm	1.0 mm	1.0 mm

<p>detection zones for different objects:</p> <p>The dark grey areas represent the zone where it is easy to recognise the normal reflector (round bar). This indicates the typical operating range of the sensors. The light grey areas represent the zone where a very large reflector – for instance a plate – can still be recognised. The requirement here is for an optimum alignment to the sensor. It is not possible to evaluate ultrasonic reflections outside this area.</p>			
reproducibility	±0.1.5%	±0.15%	±0.15%
accuracy	±1% (Temperature drift internal compensated, may be deactivated, 0.17%/K without compensation)	±1% (Temperature drift internal compensated, may be deactivated 1), 0.17%/K without compensation)	±1% (Temperature drift internal compensated, may be deactivated 1), 0.17%/K without compensation) 9 to 30 V DC, reverse polarity protection (Class 2)
operating voltage UB	19 to 30 V DC, reverse polarity protection (Class 2)	9 to 30 V DC, reverse polarity protection (Class 2)	±10%
voltage ripple	±10%	±10%	\$50 mA
no-load supply current	\$50 mA	\$50 mA	PA, Ultrasonic transducer: polyurethane foam,
housing	PA, Ultrasonic transducer: polyurethane foam, epoxy resin with glass content	PA, Ultrasonic transducer : polyurethane foam, epoxy resin with glass content	epoxy resin with glass content
class of protection to EN 60529	IP 67	IP 67	IP 67
norm conformity	EN 60947-5-2	EN 60947-5-2	EN 60947-5-2
type of connection	5-pin initiator plug, PBT	5-pin initiator plug, PBT	5-pin initiator plug, PBT
controls	2 push-buttons	2 push-buttons	2 push-buttons
indicators	2x LED green, 2x LED yellow	2x LED green, 2x LED yellow	2x LED green, 2x LED yellow
programmable	Teach-in via push button, LinkControl, IO-Link	Teach-in via push button, LinkControl, IO-Link	Teach-in via push button, LinkControl, IO-Link
IO-Link	V1.1	V1.1	V1.1
operating temperature	1-25 to +70 °C	-25 to +70 °C	-25 to +70 °C

storage temperature	-40 to +85 °C	-40 to +85 °C	-40 to +85 °C
weight	120 g	120 g	130 g
switching hysteresis 1)	5 mm	20 mm	50 mm
switching frequency 2)	12 Hz	8 Hz	4 Hz
response time 2)	64 ms	96 ms	166 ms
time delay before availability	<300 ms	<300 ms	<300 ms
order No.	cube-35/F	cube-130/F	cube-340/F
switching outputs	push pull, UB-3 V-U _s +3 V, I _{max} = 100 mA switchable NOC/NCC, short-circuit-proof	push pull, U-3 V, -U _g +3 V, I _{max} = 100 mA switchable NOC/NCC, short-circuit-proof	push pull, U _s -3 V, -U _g +3 V, I _{max} = 100 mA switchable NOC/NCC, short-circuit-proof

1. Can be programmed via LinkControl and IO-Link.
2. With LinkControl and IO-Link, the selected filter setting influences the switching frequency and response time.

Sensor Partners BV
James Wattlaan 15
5151 DP Drunen
Nederland



+31 (0)416-378239



info@sensorpartners.com



sensorpartners.com

BTW: NL807226841801

BANK: NL93HAND0784527083

KVK: 18128491

microsonic GmbH / Phoenixseestraße 7 / 44263 Dortmund / Germany / T +49 231 975151-0 / F +49 231 975151-51 / E info@microsonic.de / W microsonic.de

The content of this document is subject to technical changes. Specifications in this document are presented in a descriptive way only. They do not warrant any product features.



UK
CA



2014/30/EU



Enclosure Type 1
For use only in industrial
machinery NFPA 79 applications.

 
The proximity switches shall be used with a Listed (CYJV/7) cable/connector assembly rated minimum 32 Vdc, minimum 290 mA, in the final installation.





MV-DO-233656-831901

Documents / Resources



[SENSOR PARTNERS Cube-35-F Ultrasonic Proximity Switch](#) [pdf] Instruction Manual
Cube-35-F, Cube-35-F Ultrasonic Proximity Switch, Ultrasonic Proximity Switch, Proximity Switch, Switch

References

- [microsonic | ultrasonic sensors | Made in Germany](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.