



SENTRY KX700 Wireless Keyboard and Mouse Combo User Manual

[Home](#) » [Sentry](#) » SENTRY KX700 Wireless Keyboard and Mouse Combo User Manual 

SENTRY KX700 Wireless Keyboard and Mouse Combo User Manual



Contents

- [1 How to connect it to computer](#)
- [2 Product Description](#)
- [3 Remarks /troubleshooting](#)
- [4 FCC Compliance Statement](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

How to connect it to computer

Fig 1. USB Dongle (receiver) located inside the mouse battery compartment.



1. Remove the battery cover of the keyboard and install it with 1 pcs M batteries. Put back the cover
2. Remove the battery cover of the mouse and install it with 1 pcs M batteries. Put back the cover
3. Take out the USB dongle receiver from the mouse (located inside the battery compartment) and plug it onto the USB port of the computer. (see **Fig 1**).
4. The computer will then connect with the devices automatically.

Product Description

Wireless Keyboard and Mouse Combo

- 2.4GHz Wireless Optical Mouse/Keyboard, 5M Wireless receiving distance
- 104-KEY keyboard, compatible with the IBM PC/USB system, Fully compatible with systems and workstations
- Optical wireless mouse with 1000 DPI resolution
- Compatible with Windows 98/2000/XP/2000/Me/8/10

Remarks /troubleshooting

If the set is not used for 5 minutes it goes into sleep mode, a random click on the mouse or type on keyboard should activate the set again.

If the NUM indicator on the keyboard is not used for 15 seconds, it turns off, when you use it again, it lights up. When the battery is low the red light will start to flash.

If the mouse or keyboard does not work, the following method should be used to troubleshoot:

1. Release the batteries and make sure the batteries are inserted correctly into the keyboard or mouse.
2. Check that the USB dongle receiver is correctly inserted on the USB port of the computer and that the computer is on.
3. Ensure that the USB dongle receiver is properly identified by the computer after being inserted. Remove and reinsert may help.

When the wireless mouse or keyboard moves slowly or fails, the following method is recommended:

1. Replace the Batteries After using the wireless mouse for a period of time, it is found that it cannot be used normally. or the cursor does not at work or move well, It may be that the battery power is insufficient. Please replace both keyboard and mouse with a new battery.
2. Remove and reinsert the USB Dongle on your computer
3. Check to see that the computer is functioning properly
4. Do not make USB dongle receiver near other wireless or electrical devices such as Wifi Routers or Microwave

ovens or other RF transmitters

5. If the mouse or keyboard is on a metal surface, such as iron, aluminum, or, copper. it will create a barrier to radio transmission and interfere with the keyboard or the mouse reaction time or cause the keyboard and mouse to temporarily fail.
6. Use dry and soft cotton for cleaning mouse or keyboard.

Choking hazard: The product, packaging and some of the included accessories may present a choking hazard to small children. Keep these accessories away from small children. The bags themselves or the many small parts they contain may cause choking if ingested.

Danger: Improper battery replacement may cause an explosion and injury.

Supplier's Declaration of Conformity 47 CFR 47 CFR Part 15.21, 15. 105(b) Compliance Information Sentry Wireless Keyboard and Wireless Mouse

Model KX700

Responsible Party-
Sentry Industries inc
One Bridge street, Hillburn. NY 10931
Tel +1 845 753 2910

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

“NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.”



“This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.”

Keyboard FCC ID: 2AT3W-SYKX700K

Mouse FCC ID: 2AT3W-SYKX700M

Mouse Dongle FCC ID: 2AT3W-SYKX700D

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.

Caution: Choking hazard : The product, packaging and some of the included accessories may present a choking hazard to small children. Keep these accessories away from small children. The bags themselves or the many small parts they contain may cause choking if ingested.



Documents / Resources

	SENTRY KX700 Wireless Keyboard and Mouse Combo [pdf] User Manual SYKX700D, 2AT3W-SYKX700D, 2AT3WSYKX700D, KX700 Wireless Keyboard and Mouse Combo, KX700, Wireless Keyboard and Mouse Combo, Wireless Keyboard, Wireless Mouse, Keyboard, Mouse
---	--