



serenelife SLSPA4SQA ezRest Inflatable Pool Spa with Light User Guide

[Home](#) » [serenelife](#) » serenelife SLSPA4SQA ezRest Inflatable Pool Spa with Light User Guide 



Contents

- 1 serenelife SLSPA4SQA ezRest Inflatable Pool Spa with Light
- 2 SAFETY INSTRUCTIONS – READ CAREFULLY!
- 3 PARTS CHECKLIST
- 4 BEFORE YOU SETUP YOUR INFLATABLE POOL SPA
- 5 SETTING UP
- 6 SETTING UP YOUR INFLATABLE POOL SPA
- 7 HOW TO INSTALL LED LIGHTING
- 8 HOW TO USE YOUR LED LIGHTING RF REMOTE CONTROL
- 9 OPERATING YOUR INFLATABLE POOL SPA
- 10 MAINTENANCE & REPAIR OF YOUR INFLATABLE POOL SPA
- 11 CLEANING YOUR INFLATABLE POOL SPA
 - 11.1 CLEANING & STORING AWAY YOUR INFLATABLE POOL SPA
- 12 TROUBLESHOOTING
- 13 CONTROL PANEL ERROR CODES
- 14 WHAT'S IN THE BOX:
- 15 FEATURES AND TECHNICAL SPECS
- 16 Features:
- 17 Technical Specs:
- 18 Documents / Resources
 - 18.1 References
- 19 Related Posts

serenelife SLSPA4SQA ezRest Inflatable Pool Spa with Light



SAFETY INSTRUCTIONS – READ CAREFULLY!

When installing and using this electrical equipment, there are basic safety precautions that should always be followed:

- Appliance should be supplied through a residual current device (RCD/GFCI type) with a rated tripping current not exceeding 30mA.
- Electric installations should fulfil the requirements of local standards.
Earthed appliances must be permanently connected to fixed wiring.
- Any damage to electrical cable should be replaced by a competent party immediately before further use.
- It's recommended not to use an extension cord to connect the Inflatable Pool Spa to electrical supply.
- **RISK OF ELECTRIC SHOCK.** Never operate any external/additional electrical appliance when in the Inflatable Pool Spa or when your body is wet.
Keep electrical appliances away from the Inflatable Pool Spa.
- **RISK OF ACCIDENTAL DROWNING.** Children are forbidden from using the Pool Spa unless they are supervised at all times by a responsible adult.
- For health and safety reasons, we do not recommend children under 8 years old use our hot tubs. For children 8 years + we recommend the temperature be set no higher than 37°C.
- When not in use, cover should be fitted and locked to help retain heat.
- This also prevents unsupervised children accessing the Inflatable Pool Spa.
- Shower before using your Inflatable Pool Spa. Cosmetic products, lotions etc on skin can degrade water quality.
- Do not switch on if there is any possibility that water in the Pool Spa or control system is frozen.
- Pets should be kept away from your Pool Spa at all times.
- Soaking in hot water during pregnancy can cause damage to the unborn foetus. If you have any specific concerns please consult your doctor before continuing to use your hot tub.
- Use of alcohol, drugs or medication before or during use of your Inflatable Pool Spa can increase risk of drowning.
- Those with history of heart disease, low/high blood pressure, circulatory system problems or diabetes should consult a doctor before using Inflatable Pool Spa. People using medication should consult their doctor before using the Spa.
- Some medications may cause drowsiness, whilst other medication may affect heart rate, blood pressure and

circulation during use.

- Water in a Inflatable Pool Spa should never exceed 42°C (107°F).
- Operating temperatures between 38-40°C (100-104°F) are considered safe for a healthy adult. Lower temperatures are recommended for younger children, and when use exceeds 10 continuous minutes.
- A max temperature of 42°C can be programmed for the water – Once cover is removed, water temperature will automatically drop as heat is released through evaporation. The additional 2°C compensates for heat loss that may occur. Once you are ready to use, reduce maximum temperature to recommended 38-40°C (100-104°F) and ensure that temperature reading is no greater than 40°C.
- Immediately get out of your Inflatable Pool Spa if you feel uncomfortable or sleepy.
- Do not turn Inflatable Pool Spa on when it is empty. This could cause irreparable damage to pump system which would nullify any warranty period.
- To avoid damaging your pump & heating system during colder weather, your Inflatable Pool Spa is fitted with 365 FreezeGuard Technology. Set the temperature to 5°C, and this will prevent any water in the system from freezing.
- Always add chemicals to jug of water to avoid strong fumes or violent reactions that may result in a hazardous chemical spray.
- To avoid accidental resetting of thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- **WARNING:** Adequate drainage has to be provided to deal with overflow of water.
- **IMPORTANT:** For set-up/installation, the surface must be smooth, flat, level and capable of evenly supporting the weight of the Inflatable Pool Spa, water and users
e. g. 6 Person Square Inflatable Pool Spa filled weight: 980kg (approx) plus combined weight of occupants. It is the responsibility of the Spa owner to assure integrity of the site at all times.

WARNING – PLEASE READ CAREFULLY!

Do not operate pump and heating system whilst the Pool Spa is empty. This can damage the system and void your warranty.

PARTS CHECKLIST



Please check all parts are present in your box before first use.
To order new or missing parts please visit: SereneLifeHome.com



GROUNDSHEET (A)



FILTER CARTRIDGES (B)



FILTER PROTECTOR COVER (C)



INFLATION HOSE (D)



CLIP-ON TOP COVER (E)



REPAIR PATCHES (F)



DRAINAGE PLUG (G)



SAFETY LOCKING CLIP KEYS (H)



**LED LIGHTING KIT
(Where applicable)
Refer to pages 08 - 09**

BEFORE YOU SETUP YOUR INFLATABLE POOL SPA

Before setting up outdoors

1. You must have solid support foundation where you install your Spa. When setting up, ensure there are no sharp objects that could damage the Spa and the location is level so the Spa sits properly.
2. During filling, emptying or when in use, water may spill out. You should install it near to a drainage point that is able to accept the total volume of water.
3. Do not leave the surface of the Spa exposed to direct sunlight for long periods of time as this may affect the strength of the welds.

Before setting up indoors

1. Floor must be able to withstand weight of the Inflatable Pool Spa + occupants.
2. Floor should be a non-slip, level surface.
3. Suitable drainage is essential when installing your Inflatable Pool Spa indoors. Carefully consider the placement of your hot tub before installation.

SETTING UP

Before setting up your Inflatable Pool Spa with LED Lights

It is important to check your lights are working before setting them up.

Please note: You must insert the lights through loops on the base of hot tub before filling up with water.


Check pack contents:



1. Mains Power Converter
2. LED Light strip
3. RF Remote Control and CR2025 3V Battery

SETTING UP YOUR INFLATABLE POOL SPA

1. Lay out groundsheet (A) on a flat even surface, clear of any sharp objects.

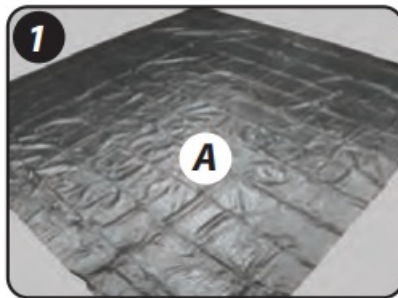

2. Unpack Inflatable Pool Spa on groundsheet.



3. Unfold the Inflatable Pool Spa, ensuring sides are as upright as possible.




4. Remove protective plastic from connectors.



5. Uncoil cord and RCD/GFCI plug, located under built-in control unit.




6. Connector Locations: Air Outlet (J), Inflation Valve (K) and Water Outlet (L).

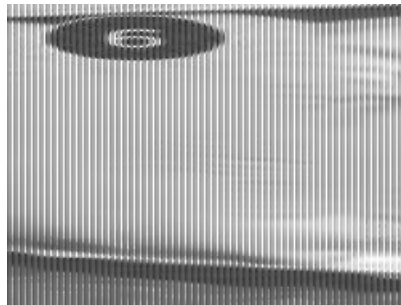


7. Unscrew cap from Air Outlet (J).




8. Screw Hose (D) on to Air Outlet (J).

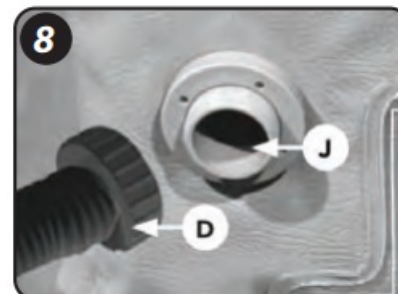

9. Unscrew outer cap from Inflation Valve (K). Do not unscrew the black inner valve.

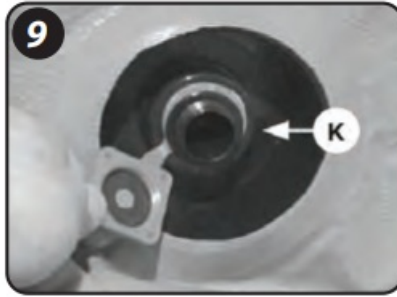

10. Push the Hose (D) into Inflation Valve (K). Plug into mains and switch on.

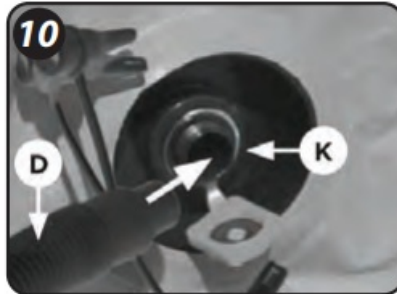

11. Press 'Inflate/Air Jets' on control panel to start inflation (red light will appear).




12. To aid the inflation pull the sides upright and spread out the base.




13. Once inflated, press the 'Inflate/Air Jet' on control panel to 'Stop' inflation.



14. Remove Hose (D) from Inflation Valve (K).

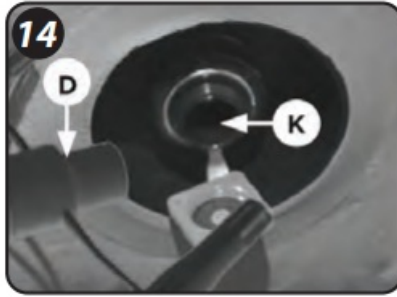


15. Screw cap back onto Inflation Valve (K).

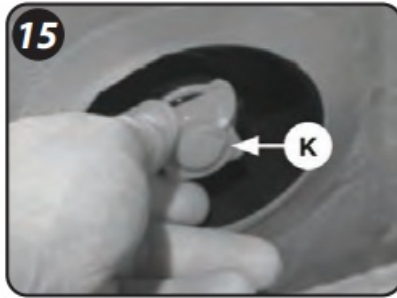

16. Unscrew Hose (D) from Air Outlet (J).


17.

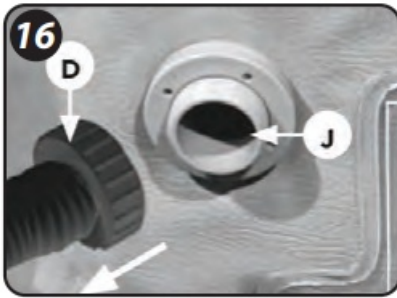


Screw cap back onto Air Outlet (J).

18. Water Outlet (M) Filter Connector (N) Drainage Plug (G).

19. Screw Filter Cartridge (B) onto Filter Connector (N).

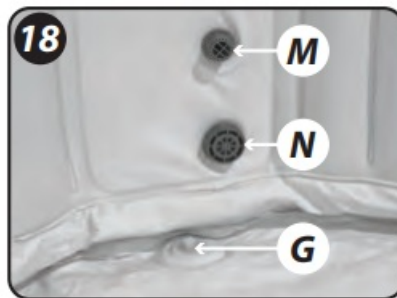

20. Add Filter Protector Cover (C) onto Filter Cartridge (B).

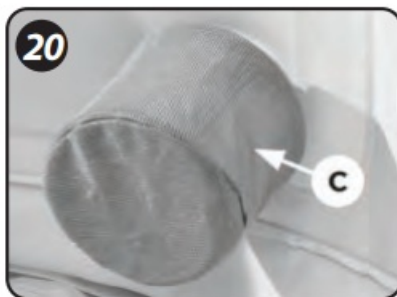

21. Add water to level. No higher than 'MAX' level.




22. Set temperature on control panel*. Clip on Top Cover



(E) to retain the heat.

*See page 10 for full operating instructions.


23. Double lock clips with Safety Locking Keys (H).

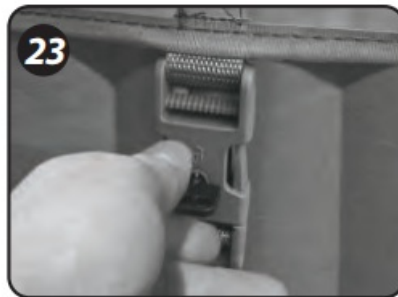

IMPORTANT NOTE , BEFORE FILLING YOUR INFLATABLE POOL SPA If your In~atable Pool Spa comes with LED lights, please follow the instructions on page 8.


HOW TO INSTALL LED LIGHTING

LIGHT KIT PARTS

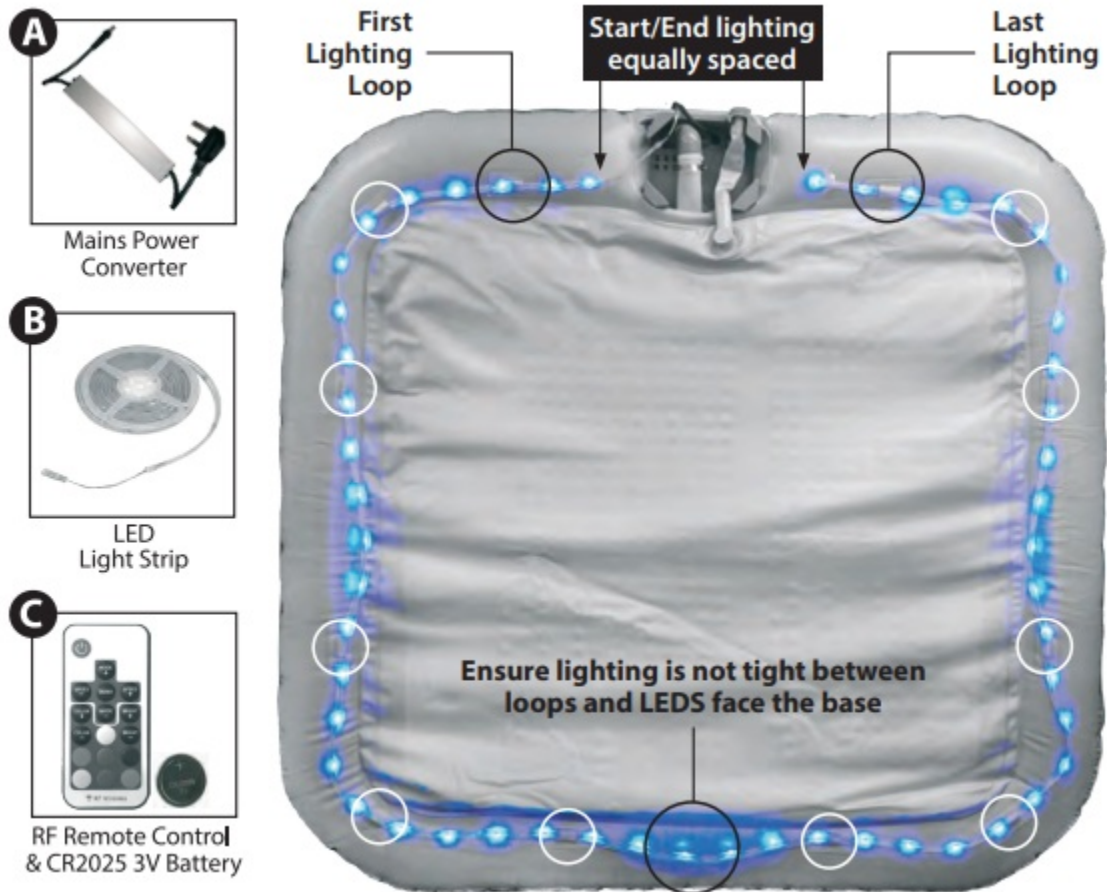

HOW TO USE YOUR LED LIGHTING RF REMOTE CONTROL

INSTRUCTIONS

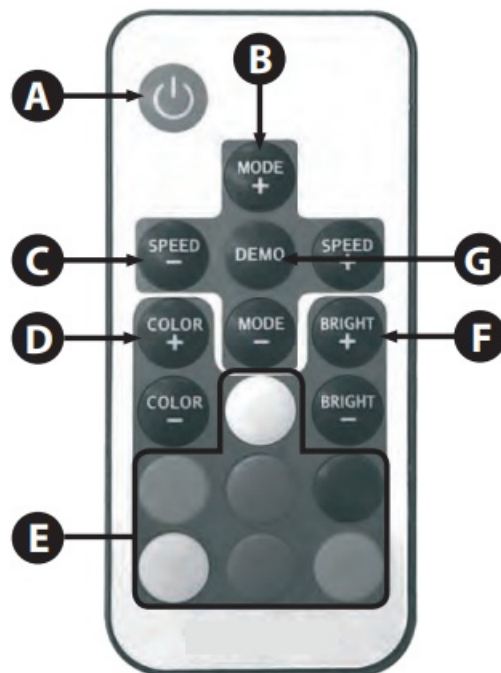

- A. POWER On/Standby
- B. CHANGE MODE Forwards/Backwards
- C. CHANGE SPEED OF LIGHTS '+' Faster / '-' Slower
- D. CHANGE COLOURS Forwards/Backwards

- E. PRE-SET COLOURS Select from a range of pre-set solid colours
- F. BRIGHTNESS Adjust Lighting brightness (5 levels)
 - Increase Brightness
 - Decrease Brightness
- G. DEMO MODE Cycles through pre-set colours & effects

INITIAL LIGHTING SETUP

1. Connect lighting system together as shown on page 8.
2. Remove plastic tape from the battery compartment on the remote.
3. Turn lights on with the power button.

If colours pressed on the remote are activating incorrect colours on the light strip:

1. Ensure the lights are turned on using the red power button.
2. Press the solid Green button once.
3. Switch off the 'Power' at the mains for 5 seconds then turn back on.
4. Press and hold the solid green button immediately after turning on.
5. Release the button when the colour changes.
6. Wait 5 seconds for the change to take effect.

OPERATING YOUR INFLATABLE POOL SPA

• SETTING THE TEMPERATURE:

Press 'SET TEMP/LOCK' and the numbers on display screen will start to flash. Increase/decrease temperature by pressing 'TEMP UP' or 'TEMP DOWN'. Choose desired temperature, press 'SET TEMP/LOCK' again to confirm. Temperatures can be set between the range of 5°C/41°F to 42°C/107.6°F.

(See safety instructions for recommended operating temperatures).

• INFLATE/AIR JETS:

Press 'INFLATE/AIR JETS' to start air jets – a red light will appear. Press again and air jets will stop working – red light will go out. Air jets stop automatically after 20 minutes. To reset, wait for 10 minutes and press 'INFLATE/AIR JETS'. Air jets can be stopped/started any time during their 20 minute cycle.

Air Jets will stop after 20 minutes to avoid internal pump over-heating.

• HEATER:

Press 'HEATER', red light will appear. Press 'HEATER' again and heating system will stop, red light will go out. When heater system is on, filter system will switch on automatically to circulate water. When temperature has reached 1°C above pre-set temperature, heating system will stop working, but light will remain on. Filter pump will continue to operate even when heater is not functioning. When water falls 1°C below pre-set temperature, heating system will automatically heat water back to 1°C above selected temperature. Once achieved, heater will stop to allow temperature to settle at pre-set value.

• FILTRATION SYSTEM:

Press 'FILTER', red light will appear, pump will start to work. Press 'FILTER' again to stop pump, red light will go out. After approx. 168 hours, 'FC' will appear on display screen (flashing), with a warning tone. Red light will be lit on 'FILTER', pump will not be operational. Heating system will also not work and red light will be off.

To make sure filtration system is off, press 'FILTER'. 'FC' on display screen will disappear as well as warning tone. Water temperature will be displayed, all functions will return to normal. 'FC' and warning tone remind user to replace filter.

MAINTENANCE & REPAIR OF YOUR INFLATABLE POOL SPA

WATER LEVEL

Water should be filled and maintained between 'Min' and 'Max' fill lines as indicated on inner wall of your Inflatable Pool Spa.

IMPORTANCE OF WATER TREATMENT

You need to regularly monitor and appropriately treat the water in your Inflatable Pool Spa.

PEOPLE WITH THE FOLLOWING TRAITS ARE AT HIGHER RISK INCLUDING:

- Diabetes, lung and heart disease
- Smokers and heavy drinkers
- Anyone with an impaired immune system
- People suffering from chronic respiratory or kidney disease.

For more information contact your doctor.

WATER AND LEGIONNAIRES DISEASE?

Legionnaires' disease can be contracted by inhaling small droplets of water (called aerosols), which are suspended in the air and contain the bacteria.

Certain conditions increase the risk of Legionella if:

- Water temperature in all or some parts of the system is between 20-45°C (68°F-113°F), which is suitable for growth of the bacteria.
- It is possible for breathable water droplets to be created and water is stored and/or re-circulated.
- There are deposits that can support bacterial growth providing a source of nutrients for the organism e.g. rust, sludge, scale, organic matter and biofilms (from the body).

CLEANING YOUR INFLATABLE POOL SPA

Detergent residues, dissolved solids from bathing suits and chemicals will gradually accumulate in the water. To clean your Inflatable Pool Spa, use soap and water then rinse thoroughly.

Please note: DO NOT use hard brushes or abrasive cleaners.

REPAIRING PUNCTURES IN YOUR INFLATABLE POOL SPA

If your Inflatable Pool Spa is torn/punctured, use repair patches. Completely dry area to be repaired, apply strong adhesive to repair patch and then cover the damaged area. Smooth the surface to remove any air bubbles. Leave to dry for 12 hours before using the Inflatable Pool Spa.

CLEANING & STORING AWAY YOUR INFLATABLE POOL SPA

HOW TO EMPTY YOUR INFLATABLE POOL SPA

1. Firstly, remove the Inflatable Pool Spa plug from the electrical mains.
2. Remove the screw cap from the water outlet (L) (below the pump system of the Inflatable Pool Spa) ensuring the Drainage Plug (G) is still inserted to prevent unexpected draining.
3. Screw the inflation hose (D) onto the water outlet (L) and direct the open end of the hose appropriately.
4. Remove the drainage plug from the outlet within the floor of the Inflatable Pool Spa, so the water can flow out.
5. Once drained use a sponge to absorb excess water; then operate air jet function for up to 20 minutes (one full cycle) to drain any water and dry out the pipeline.
If not completely dry after first cycle – repeat.
6. When draining has finished, remove the inflation hose (D) and replace the drainage plug (G) and water outlet cap (L).

HOW TO DEFLATE YOUR INFLATABLE POOL SPA

1. Locate the black two part air valve on the spa (see point 9) on 'setting up your Inflatable Pool Spa' item (K).
2. Fully unscrew and remove the rapid deflation air valve turning anti-clockwise (K).
3. Fold the spa away carefully to direct and remove as much air as possible through the open valve.

STORING YOUR INFLATABLE POOL SPA

Make sure all the water is completely drained from the Inflatable Pool Spa and pump system. This is vital in extending the life of your Inflatable Pool Spa.

We recommend the use of a wet/dry vacuum to blow out or suck up water from the Inflatable Pool Spa pipes and pump lines. Remove the filter cartridge.

Inflatable Pool Spa should be placed in the bag provided and stored in a dry place, ideally raised off the floor and away from any extreme temperatures.

Please note: Plastic becomes brittle and susceptible to breakage when exposed to subzero temperatures and this can severely damage your Inflatable Pool Spa.

CLEANING THE WATER FILTER CARTRIDGE & MESH FILTER

If using your Inflatable Pool Spa 2-3 times per week, we suggest that you change your filter every 2 weeks to maintain the best performance.

1. Remove filter protector cover (C) then remove filter cartridge (B).
2. Filter cartridge can be rinsed under a cold tap and reused.
If filter cartridge remains soiled/discoloured – replace. If holes are present in paper filter or paper is noticeably worn, replace filter with a new one.
We DO NOT recommend use of pressurised water to clean any Inflatable Pool Spa filters.
3. Replace filter protector cover (C) over filter cartridge (B) and attach to filter connector (N) by turning it clockwise.

To help to keep your water clean, check your filter cartridge every day. To order filters and chemicals for your Inflatable Pool Spa, please visit: www.SereneLifeHome.com



FILTER CARTRIDGES (B)



FILTER PROTECTOR COVER (C)

TROUBLESHOOTING

SOME TIPS TO HELP YOU TO DIAGNOSE AND RECTIFY COMMON SOURCES OF TROUBLE:

PROBLEMS	POTENTIAL CAUSES	SOLUTIONS
Air jet system is not operating	<p>A1 Air pump too hot</p> <p>A2 Something wrong with power box</p> <p>A3 Air Pump in cooling mode</p>	<p>A1 Unplug system. After air pump has cooled , insert plug and press air jets button to activate</p> <p>A2 Wait for 10 Minutes and restart</p> <p>A3 Call SereneLife Aftersales if does not reset</p>
Heating system does not operate	<p>A1 Temperature is set too low</p> <p>A2 Dirty filter cartridge</p> <p>A3 Improper water levels</p> <p>A4 Heating element failure</p>	<p>A1 Set to a higher temperature 20-40°C (68° F-104°F) than current water temperature</p> <p>A2 Clean/replace filter cartridge</p> <p>A3 Add water to specified levels</p> <p>A4 Call SereneLife Aftersales if does not reset</p>
Filtering system does not operate/ Rattling noise when switching filter on	<p>A1 Dirty filter cartridge</p> <p>A2 Something wrong with power box</p>	<p>A1 Clean/replace filter cartridge</p> <p>A2 Call SereneLife Aftersales if does not reset</p> <p>A3 Ask a professional electrician to check household electrical supply is functioning correctly</p>
Inflatable Pool Spa leakage	<p>A1 Inflatable Pool Spa is torn or punctured</p>	<p>A1 Use repair patch provided</p>
Water not clean	<p>A1 Insufficient filtering time</p> <p>A2 Dirty filter cartridge</p> <p>A3 Improper water maintenance</p>	<p>A1 Increase filtration time</p> <p>A2 Clean/replace filter cartridge</p> <p>A3 Refer to chemical manufacturer's instructions</p>
Display temperature is higher than 40°C, after stopping heating function	<p>A1 Residual water in the Pool Spa will continue to be heated by residual temperature</p> <p>A2 Water inlet through filter system may be blocked</p>	<p>A1 Unplug from mains and wait. Temperature will start to reduce and return to normal</p> <p>A2 Clean the inlet</p> <p>A3 Call SereneLife Aftersales if does not reset</p>

CONTROL PANEL ERROR CODES

CODE	CAUSE	SOLUTIONS
FC	When filtration system has worked for approx. 16 8 hours, 'FC' will appear on display with a warning tone. Red light will still be lit on filter, pump will not be operational. Heating system will not work, and red light will be out on heater.	Check filter and change if necessary. Once done, press filter again. 'FC' error code will disappear, and warning tone will stop. Water temperature will be displayed, all functions will return to normal.
SL/HL	Temperature Issue	Contact SereneLife Aftersales on: www.SereneLifeHome.com
SH	Water Temperature Sensor Issue	Contact SereneLife Aftersales on: www.SereneLifeHome.com

CORRECT DISPOSAL OF THIS PRODUCT

This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment, or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

WHAT'S IN THE BOX:

- (1) Filter
- (1) Inflatable Hose
- LED light
- (1) Ground Pad
- (1) Repair Kit
- (1) Remote Control

FEATURES AND TECHNICAL SPECS

MODEL	SLSPA4SQA	SLSPA4RND	SLSPA6SQA	SLSPA6RND
High Powered Bubble Jets	100	100	130	130
Seating Capacity	4-Seat	4-Seat	6-Seat	6-Seat
Water Capacity	600L/158 Gal	800L/211Gal	910L/240Gal	1000L/264Gal
Bubble Jets	100	100	130	130
Product Dimensions (L x W x H)	57" x 57" x 25" -inches		73" x 73" x 25" -inches	
Inner/Outer Diameter		71" -inches Height: 25" -inch		82" -inches Height: 25" -inch
LED length	4.3m	5.2m	5.2m	6.0m

Features:

- Inflates & Deflates Easily – Easy to Store
- Easy to Operate Digital Panel
- Fitted Cover Included
- Ideal for Joint/Muscular Pain, Improved Sleep, Stress & Anxiety Relief
- Great for Parties or Personal Relaxation
- Includes Remote Control to Control the Pump Temperature and Massage System and Lights
- Digital Control Panels
- Includes Light to Create perfect Mood and Ambiance
- Illuminates Up to 7 Different Colors: White, Green, Yellow, Blue, Red, Purple & Light blue
- Comes with Two Lighting Modes: Single Color or Color Changing Mode
- Air Jets Stop Automatically after 20 minutes
- To Reset, Wait for 10 minutes and Press



Technical Specs:

- Construction Materials:
- Laminated and Durable PVC Hot Tub and Top Cover with Foil inside
- Bubble Air Blower: 1 hp/110-120V
- Heater: 1200W (double tube)
- Power Supply: 110-120V
- Flow Rate: 420 Gal/Hr.
- Temperature Range: 38-40°C
- Temperature Rise: 40°C
- Remote Control Battery Operated for LED, Requires (1) x Button Battery

Questions? Issues?

We are here to help! Phone: (1) 718-535-1800 Email: support@pyleusa.com

Documents / Resources

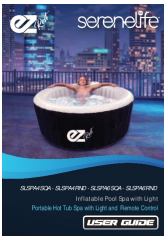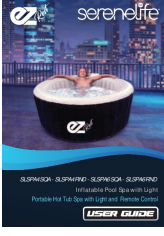	<p>serenelife SLSPA4SQA ezRest Inflatable Pool Spa with Light [pdf] User Guide SLSPA4SQA, SLSPA4RND, SLSPA6SQA, SLSPA6RND, ezRest Inflatable Pool Spa with Light, Portable Hot Tub Spa with Light and Remote Control</p>
	<p>SereneLife SLSPA4SQA ezrest Inflatable Pool Spa with Light [pdf] User Guide SLSPA4RND, SLSPA6SQA, SLSPA4SQA, ezrest Inflatable Pool Spa with Light, SLSPA4SQA ezrest Inflatable Pool Spa with Light</p>

References

- [🌀 Innovative Lifestyle Products Just For You | SereneLife](#)
- [🌀 Innovative Lifestyle Products Just For You | SereneLife](#)

Manuals+