

92020 Double Dip Server User Guide

Home » SERVER » 92020 Double Dip Server User Guide 🖫

Contents

- 1 92020 Double Dip Server
- 2 Tips and tricks to help you get started with your new Dip Server
- **3 WANT TO LEARN MORE?**
- 4 Documents / Resources
 - 4.1 References
- **5 Related Posts**



92020 Double Dip Server




Tips and tricks to help you get started with your new Dip Server


1. Remove unit from box. Clean, rinse, sanitize, and air dry all parts. Never immerse complete unit into water. Electrical shock could occur. Be aware of the product you are serving and the temperature the product is required to maintain.




2. Insert removable bottom into slot in base of shroud.

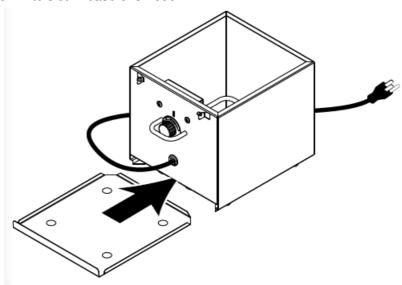


3. Insert dip container into shroud. Position #10 can(s) or stainless steel jar(s) between bumps at bottom.

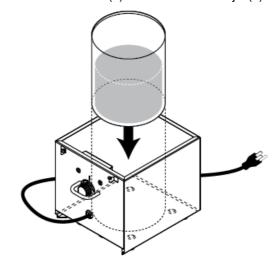


4. Install top onto shroud.

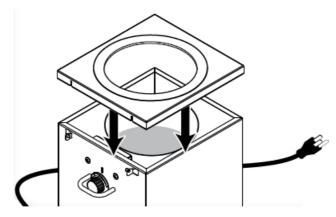

5. Install lid onto shroud. Align lid hinge holes onto pivot pins on shroud. Press lid hinges inward towards each other until pivot pins fit into hinge holes.

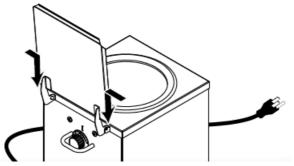

6. Plug cord into power source. Set the thermostat knob to recommended serving temperature.

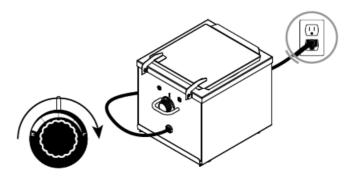

7. Allow unit to cool before cleaning. Clean external surfaces daily with a clean damp cloth. Dry with clean soft cloth. Glass and surface cleaners approved for use in food contact areas may be used.



WANT TO LEARN MORE?

Visit <u>server-products.com</u>/manual-more for your manual, part breakdown, support videos and more. <u>spsales@server-products.com</u> | 800.558.8722

Documents / Resources



<u>SERVER 92020 Double Dip Server</u> [pdf] User Guide 92020, Double Dip Server, 92020 Double Dip Server

References

- Oproducts.com
- Search our Website for Equipment Manuals & More

