

# **Setti SC970 4G LTE SC970 Rotating Camera Instruction Manual**

Home » Setti » Setti SC970 4G LTE SC970 Rotating Camera Instruction Manual

#### **Contents**

- 1 Setti SC970 4G LTE SC970 Rotating Camera
- **2 CONDITIONS OF SAFETY AND HAZARDS**
- **3 INTRODUCTION**
- **4 TECHNICAL DATA**
- **5 DEVICE DESCRIPTION**
- **6 INSTALLATION**
- **7 COMMISSIONING**
- **8 INSTALLING THE MEMORY CARD**
- 9 CLEANING
- **10 STORAGE**
- 11 TROUBLESHOOTING
- 12 WARRANTY CONDITIONS FOR THE

**CAMERA** 

- 13 Documents / Resources
  - 13.1 References
- **14 Related Posts**



Setti SC970 4G LTE SC970 Rotating Camera



# Specifications:

· Model: SC970

· Power Supply: Solar panel

• Angle Adjustment Range: Adjustable

• Power Socket: USB-C

• Supported Memory Cards: microSD (up to 128 GB)

Network: 4G LTE

# **Product Description:**

The SC970 Rotating Camera is a high-quality device designed for outdoor use. It features various components such as a power socket, microphone, LED lights, motion sensor, SIM card slot, and more.

#### Installation:

## Wall Mounting:

- 1. Make holes according to the mounting ring diameter and insert the plugs.
- 2. Mount the camera on the wall using the provided instructions.

## App Installation and Setup:

- 1. Download the Setti+ app from the website by scanning the QR code.
- 2. Create an account or log in with your existing credentials.
- 3. Power on the device. The camera will perform a test movement, and the LED indicator will start flashing.

## Usage:

# Starting Up:

- 1. Charge the device using the solar panel or a USB-C charger.
- 2. Insert an active and unsecured SIM card into the slot.
- 3. Turn on the camera using the POWER button.
- After successful connection, the LED indicator will turn off, indicating readiness for remote operation via the app.

#### **Memory Card Installation:**

- 1. Remove the rubber seal.
- 2. Insert the microSD card into the slot as indicated and lock it.

#### Cleaning:

Regularly inspect and clean the device using a slightly damp cloth.

#### Storage:

If the device will not be used, it should be turned off.

#### Frequently Asked Questions (FAQ):

- · Q: Can the camera be submerged in water?
  - A: No, it is advised not to submerge the device in water or other liquids.
- Q: What is the power source for the camera?
  - A: The camera can be powered by a solar panel or a USB-C charger.
- Q: How do I connect the camera to the mobile app?

A: Follow the instructions provided in the user manual to connect the camera to the Setti+ mobile app.

## **CONDITIONS OF SAFETY AND HAZARDS**

- 1. Do not start the device if it is damaged, if it is so the device must be repaired by the service or a person authorized to do so.
- 2. For safety reasons, only the manufacturer, a service authorized by the manufacturer or a person with appropriate qualifications can perform any repairs of the device.
- 3. Do not attempt to repair and interfere with the interior of the device.
- 4. This product may only be operated by children 8 or mor24e years old, mentally and/or physically deficient persons and persons without knowledge of or experience in operation of this appliance type if supervised or instructed in safe operation, with clear understanding of all related risks. Children should not play with the device. Unsupervised children should not carry out maintenance and cleaning of the device.
- 5. Do not immerse the device in water nor in other liquids.
- 6. The device is not designed to protect 25 property. For this purpose one should seek a professional alarm system.
- 7. Ensure that local laws do not prohibit recording, storing, and editing video without the consent of the people being recorded.
- 8. Do not use the power adapter if its cable or housing is damaged.

#### INTRODUCTION

- Thank you for the trust you have placed in us when purchasing a Setti+ device.
- We are convinced that this high quality device will provide you with a lot of joy and satisfaction during its use.


# PLEASE CAREFULLY READ AND FOLLOW THE OPERATING MANUAL!

This device is intended for domestic or similar, non-commercial use. The manufacturer will not be held liable for damages resulting from improper or non-compliant use.

## **TECHNICAL DATA**

Model	SC970	
Power supply	5.0 V 1.0 A	
Angle adjustment range	350° horizontal, 90° vertical	
Protection rating	IP65	
Video recording resolution	2304 x 1296	
Battery	10400 mAh	
Power socket	USB-C	
Accessories	Camera, solar panel, installation accessories	
Motion detection range	up to 10 m, 120°	
System requirements	Android, IOS	
Supported memory cards	Micro SD, do 128 GB	
Network	4G LTE	
Operating time	1.5-2 months (at 10 camera activations)	
Solar panel	SC970	
Output voltage and current	5.0 V === 1 A, 5 W	

# **DEVICE DESCRIPTION**

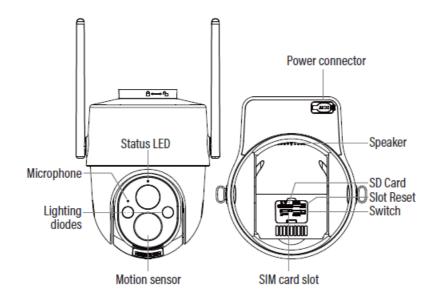


#### **INSTALLATION**

The camera mounting bracket can be fixed on a concrete wall or ceiling, using dowels.

- 1. Place the bracket against the wall or ceiling and mark the locations of the holes to be drilled. You can also use the auxiliary template from the equipment.
- 2. Drill holes matching the diameter of the mounting plug, put the plugs in the holes.
- 3. Place the mounting bracket against the wall or ceiling, insert the screws into the bracket holes and screw into the plugs, securing the bracket to the wall.
- 4. Place the camera in the installed bracket and rotate it to lock it on the bracket.

#### Wall installation:

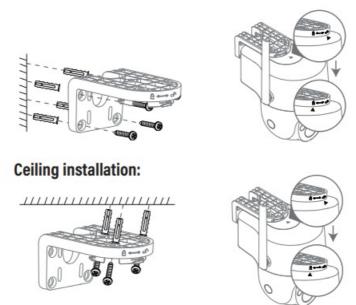

PLEASE NOTE! IF THE BRACKET IS NOT SECURELY FIXED, REMOVE IT AND RE-INSTALL IN ACCORDANCE WITH THE INSTALLATION INSTRUCTIONS.
PLEASE NOTE! THE CAMERA IS ADAPTED FOR OUTDOOR OPERATION AND CAN COPE WITH ATMOSPERIC CONDITIONS. PLACING THE CAMERA UNDER A GUTTER MAY DAMAGE THE DEVICE.

#### COMMISSIONING

- 1. Before starting for the first time, charge the device using the solar panel or mains charger with USB-C output (charger not included).
- 2. Remove the rubber seal and insert the SIM card into the slot.
  - **CAUTION!** THE SIM CARD MUST BE ACTIVE AND NOT BE SECURED WITH A PIN. THIS DEVICE WILL NOT WORK WITHOUT CORRECTLY INSERTED SIM CARD.
- 3. Start the camera with the button marked POWER and close the gasket.
- 4. After correct connection, the LED indicator will illuminate. After about a minute, the camera will perform test movements and inform you with an acoustic signal that it is ready to be set up with the app, then the LED indicator will flash.

#### **INSTALLATION AND OPERATION OF THE APP**

1. Download the Setti+ app from the website by scanning the QR code below:



- 2. Open the installed application.
- 3. As a new user, create a new account. Once you have an account, log in using your own access data.
- 4. Start the device. The camera will perform a test move, then the LED will start flashing.
- 5. In the upper right corner of the app screen, press the "+" button and select the appropriate device: Security, SC970 Camera.
- 6. In the upper right corner, select the "QR Code" configuration mode. Make sure the LED flashes quickly to indicate the configuration mode.
- 7. A QR code will be displayed on the phone screen. Point the camera lens towards the phone screen to scan the code. After hearing a beep, confirm with the button "I heard a sound."
- 8. After successfully connecting the device to the app, the camera led indicator will turn off, select "Finished", then you can fully enjoy the remote operation of the device.

A detailed operating manual for the control application is available at: <a href="https://setti.pl/wsparcieaplikacja">https://setti.pl/wsparcieaplikacja</a> or after scanning the QR code below:



#### **INSTALLING THE MEMORY CARD**

To install a microSD memory card (128 GB max):

- 1. Remove the rubber seal.
- 2. Slide the card into the slot as marked, press and lock.

#### **CLEANING**

- The device should be regularly inspected and cleaned. Use a softly damp cloth for cleaning.
- PLEASE NOTE! DO NOT USE CHEMICALS OR ABRASIVES FOR CLEANING.

#### **STORAGE**

- 1. The camera must be switched off when the device is not in use.
- 2. Store the device in a dry, safe place, away from children.
- 3. Protect the device from scratches and shocks.

#### **TROUBLESHOOTING**

PROBLEM	POSSIBLE CAUSE	SOLUTION
Sound signal was triggered.	The camera was not been properly configured or was disconnected.	Re-configure the camera according to the "Installation and operation of the app" sect ion.
Unable to configure the cam era.	No coverage or poor signal strength.	Find a place where there is a stable, good mobile network coverage.
	The phone with the app is not conne cted to the internet.	Connect your phone to the internet.
It is not possible to preview the live view. The camera does not respond to changes in the application.	No coverage or weak mobile networ k signal.	Find a place where there is a stable, good mobile network coverage.
	The phone with the app is not conne cted to the Internet.	Make sure you have access to the networ k.
	Camera configuration has been changed.	Reconfigure the camera according to the section "Installation and operation of the a pp".

## **DECLARATION**

ART-DOM Sp. z o.o. hereby declares that the SC970 camera complies with the relevant requirements of the Union harmonisation legislation: Directive 2014/53/EU and other Union harmonisation legislation. The full text of the EU declaration of conformity is available at the following address: <a href="https://www.artdom.net.pl/deklaracja/SC970/">www.artdom.net.pl/deklaracja/SC970/</a>

#### **ECO-FRIENDLY AND ENVIRONMENTALLY FRIENDLY DISPOSAL**

This device is marked, in accordance with Directive 2012/19/EU of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment (WEEE), with the symbol of a crossed-out waste container:

Do not dispose of the device marked with this symbol together with household waste.



For disposal return the device to your local waste treatment and disposal facility or contact your local authorities

#### YOU CAN HELP PROTECT THE ENVIRONMENT!

Proper handling of waste electrical and electronic equipment contributes to avoiding harmful consequences for human health and the environment resulting from the presence of hazardous components and improper storage and processing of such equipment.

## WARRANTY CONDITIONS FOR THE CAMERA

- 1. ART-DOM Sp. z o.o. with its registered office in Łódź (92-402) at ul. Zakładowa 90/92 National Court Register Number 0000354059 (Guarantor) guarantees that the purchased device is free from physical defects. The warranty covers only defects resulting from the causes inherent in the item sold (manufacturing defects).
- 2. A disclosed defect will be removed at the Guarantor's expense within 14 days from the date of reporting the damage to the authorized service or point of sale.
- 3. In exceptional cases, e.g. the need to import spare parts from their manufacturer, the repair period may be extended up to 30 days.
- 4. The warranty period for the user is 24 months from the date of delivery of the goods.
- 5. The goods are intended for use only in the conditions of an individual household.
- 6. The present warranty does not cover:
  - damage caused by using the device in a manner inconsistent with the user manual,
  - · mechanical, chemical or thermal damage,
  - repairs and modifications made by companies or persons that were not authorized to do so by the manufacturer.
  - parts that are easily worn or consumables such as: batteries, bulbs, f40uses, filters, knobs, shelves, accessories.
  - installation, maintenance, inspection, cleaning, unlocking, removal of contaminants and instruction.
- 7. The Guarantor will select the mode of defect removal at its own discretion. Removal of a confirmed defect of the device will take place through warranty repair or replacement of the device. The Guarantor may make repairs when the Buyer requests replacement or the Guarantor may make replacements when the Buyer requests repair, if bringing the goods (device) to compliance with the granted warranty in the manner selected by the buyer is impossible or would require excessive costs for the Guarantor. In particularly justified cases, if both repair and replacement are impossible or would require excessive costs for the Guarantor, the Guarantor may refuse to bring the goods into compliance with the granted warranty and propose another way to settle the warranty claim.
- 8. The exchange of goods is made at the point of sale at which the goods were purchased (replacement or refund) or an authorized service point, if it offers such service (replacement). The returned device must be complete, without mechanical damage. Failure to comply with these conditions may result in failure to accept the warranty claim.
- 9. In the event of non-compliance of the goods with the sales contract, the buyer by law, is entitled to legal remedies from and at the expense of the seller, and the warranty does not affect these legal remedies.
- 10. The warranty is valid in Poland.
- 11. The condition for the warranty repair or replacement of the device is the presentation of proof of purchase and the use of the goods in ac42 cordance with the information contained in the operating manual.

# **CAUTION!**

Damage or removal of the rating plate from the device may result in warranty being deemed void.



We are constantly improving our products, so they may differ slightly from the images presented on the packaging and in the user manual. Please read the user manual before operating the appliance.

ART-DOM Sp. z o.o., ul. Zakładowa 90/92, 92-402 Łódź, info@artdom.net.pl.National Court Register number

## **Documents / Resources**



<u>Setti SC970 4G LTE SC970 Rotating Camera</u> [pdf] Instruction Manual SC970 4G LTE SC970 Rotating Camera, SC970, 4G LTE SC970 Rotating Camera, Rotating Camera, Camera

# References

- D Setti+
- User Manual

#### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.