

SEVERIN

SM 3707 Stand
Mixer Blender



SEVERIN SM 3707 Stand Mixer Blender Instructions

[Home](#) » [SEVERIN](#) » SEVERIN SM 3707 Stand Mixer Blender Instructions 

Contents

- [1 SEVERIN SM 3707 Stand Mixer Blender](#)
- [2 Connection to the mains supply](#)
- [3 Familiarisation](#)
- [4 Important safety instructions](#)
- [5 Short-term operation](#)
- [6 Operation](#)
- [7 Cleaning and care](#)
- [8 Recipes](#)
- [9 Disposal](#)
- [10 Guarantee](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

SEVERIN

SEVERIN SM 3707 Stand Mixer Blender

**Dear Customer,**

Before using the appliance, read the following instructions carefully and keep this manual for future reference. The appliance must only be used by persons familiar with these instructions.

Connection to the mains supply

Make sure that the supply voltage corresponds with the voltage marked on the rating label of the appliance.

CE marking

This product complies with all binding CE labelling directives.

Familiarisation



1. Stopper with measuring cup
2. Lid
3. Blender jug with handle
4. Blender blade
5. Motor housing
6. Rotary control
7. Power cord with plug
8. Blade unit with blender jug
9. Rating label (on underside of appliance)

Important safety instructions

- In order to avoid hazards, our customer service must repair this electrical appliance or its power cord.
- If repairs are needed, please send the appliance to our customer service department (see appendix).
- Before cleaning the appliance, ensure it is disconnected from the power supply and has cooled down completely.
- The appliance should be cleaned after each cycle of use.
- To avoid the risk of electric shock, do not clean the appliance with liquids or immerse it.
- The blender jug, lid and stopper may be cleaned with hot soapy water.

- For detailed information on cleaning the appliance, please refer to the section Cleaning and care.
- Caution: The blades used in this appliance are extremely sharp. To prevent injuries, take special care when cleaning the appliance and when emptying the blender jug.
- Caution: Do not put hot liquid into the blender jug.
- Extra care is required when pouring hot liquids into the blender jug in case a jet of vapour should escape from the appliance.
- Caution: Any misuse can cause severe personal injury.
- Always switch the appliance off and remove the plug from the wall socket.
 - when there is no supervision,
 - before opening the lid,
 - before removing or fitting the blender jug,
 - in case of any malfunction during use,
 - before cleaning,
 - after use.
- When removing the plug from the wall socket, never pull on the power cord; always grip the plug itself.
- This appliance is intended for domestic or similar applications, such as the
 - staff kitchens in shops, offices and other similar working environments,
 - Agricultural working environments,
 - by customers in hotels, motels etc. and similar accommodation,
 - in bed-and-breakfast type environments.
- The appliance may only be used by persons with reduced physical, sensory or mental capabilities, or lacking experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance and fully understand all dangers and safety precautions involved.
- Children must not be permitted to operate the appliance. The appliance and its power cord must be kept well away from children.
- Children must not be permitted to play with the appliance.

Caution: Keep any packaging materials well away from children. These materials are a potential source of danger, e.g. of suffocation.

Every time the appliance is used, the main body, including the power cord as well as any attachment ted should be checked thoroughly for any defects. Should the appliance, for instance, have been dropped onto a hard surface, or if excessive force has been used to pull the power cord, it must no longer be used; even invisible damage may have adverse effects on the operational safety of the appliance.

- Do not operate the appliance outdoors.
- The appliance should only be placed on a level surface. Do not allow the housing or its power cord to come into contact with open flames or any hot surfaces such as hot plates.
- Do not let the power cord hang free.
- Do not touch any moving parts during operation – this can be extremely dangerous.
- Do not put your hands or any kitchen utensils into the blender jug while the appliance is in operation.
- Do not t the blade unit to the motor housing without the blender jug.
- The appliance must only be used with the attachments provided by the manufacturer.
- No responsibility will be accepted if damage results from improper use or if these instructions are not complied with.

Before using for the first time

Before the appliance is used for the first time, the blender jug and lid with stopper should be thoroughly cleaned as described in the section Cleaning and care.

Switch settings

The following settings can be selected:

- P The appliance operates at maximum power as long as the rotary control is held in this position
- 0 The appliance is switched off
- 1 Low power
- 2 Maximum power

Short-term operation

The appliance is designed to process average domestic quantities of food; it can be operated without interruption for a maximum of 3 minutes, after which it should be allowed to cool down to room temperature.

Safety switch

A special safety switch in the motor housing ensures that the appliance can only be operated if the blender jug is properly locked in position.

Before removing the blender jug, make sure that the rotary control is in position 0. This also applies when fitting the blender jug to the motor housing. If the control is not in its off-position (0), the motor will start immediately.

Operation

- Fit the blender jug to the motor housing, with its handle to the right, in such a way that the two triangle symbols are aligned.
- Put the ingredients into the blender jug. The jug has a maximum capacity of 1500 ml. To avoid possible foaming or spilling when processing foamable or thin liquids such as milk, do not fill the jug over the 1000 ml mark.
- Replace the lid and turn clockwise until it locks into place.
- Insert the stopper into the lid.
- To add ingredients during operation, the stopper in the centre of the lid can be removed.
- Caution: Do not operate when the blender jug is empty. Do not fill it with dry items only, such as nuts, almonds etc.
- Insert the plug into the wall outlet and use the rotary control to select the required power setting.
- After using the blender, switch off and remove the plug from the wall socket. Wait until the motor has come to a complete standstill before removing the blender jug.

Crushing ice

Ice-cubes can be easily crushed in the blender jug:

Fill the jug a quarter full with ice cubes, and then fit it to the motor housing, as described in the section Operation. Put on the lid with the stopper in place, and use the pulse function (P) to operate the appliance for about 2 seconds. Wait until the ice cubes have collected in the bottom of the jug again and then repeat the process until the cubes have been reduced to the required size.

Cleaning and care

- Always remove the plug from the wall socket before cleaning the appliance.
- To avoid the risk of electric shock, do not clean the motor housing or the power cord with water and do not immerse them in water. The motor housing may be wiped with a slightly damp, lint-free cloth.

- Do not use abrasives, harsh cleaning solutions or hard brushes for cleaning.
- For cleaning directly after use, fill the blender jug with around 1000 ml of warm water and a little detergent. Let the appliance run for a short period as described in the section Operation. Afterwards, rinse the blender jug, lid, and stopper with fresh water. All parts must be thoroughly dried afterwards.
- These parts are not dishwasher-safe.
- If required, the blade unit for the blender jar can be detached for cleaning (see diagram):
- Turn the blender jug upside down and take off the black blade unit by turning it anti-clockwise. Caution: The blades are extremely sharp.
- The gasket in the blade unit cannot be removed.
- Clean the blade unit with warm, soapy water using a suitable brush.
- The blender jug and blade unit must be thoroughly dried.
- To reassemble, fit the blade unit to the (still inverted) blender jug and lock it by turning clockwise all the way.

Recipes

Iced coffee

200 ml cold coffee
 100 ml milk (1,5%)
 2 tsp dark bitter chocolate, grated
 1 tsp caramel sauce
 3 ice cubes
 1 scoop vanilla ice cream

Put all the ingredients (except the ice-cream) into the blender jug and start mixing them at setting II. The result may be sweetened with sugar, according to taste. Add the ice cream after the mixing process.

Banana chocolate milkshake

1 banana
 400 ml chilled milk
 2-3 EL chocolate sauce
 4 scoops of chocolate ice cream

Peel the banana, cut it into small pieces, and puree it together with the milk. Add the chocolate sauce and ice cream and mix briefly.

Additional recipes:



or under www.severin.de/Service/Rezepte

Disposal




Devices marked with this symbol must be disposed of separately from your household waste, as they contain valuable materials which can be recycled. Proper disposal protects the environment and human health. Your local authority or retailer can provide information on the matter.

Guarantee

This product is guaranteed against defects in materials and workmanship for a period of two years from the date of purchase. Under this guarantee, the manufacturer undertakes to repair or replace any parts found to be defective, provided the product is returned to one of our authorised service centres. This guarantee is only valid if the appliance has been used in accordance with the instructions, and provided that it has not been modified, repaired or interfered with by any unauthorised person, or damaged through misuse.

This guarantee naturally does not cover wear and tear, nor breakables such as glass and ceramic items, bulbs, etc. This guarantee does not affect your statutory rights, nor any legal rights you may have as a consumer under applicable national legislation governing the purchase of goods. If the product fails to operate and needs to be returned, pack it carefully, enclosing your name and address and the reason for return. If within the guarantee period, please also provide the guarantee card and proof of purchase.

Documents / Resources

 <table border="1" data-bbox="129 1256 284 1301"><thead><tr><th></th><th></th><th></th></tr></thead><tbody><tr><td>DE</td><td>Bedienungsanleitung</td><td>Handbuch</td></tr><tr><td>EN</td><td>Instructions for use</td><td>Manual</td></tr><tr><td>FR</td><td>Mode d'emploi</td><td>Manuel</td></tr><tr><td>ES</td><td>Manual de instrucciones</td><td>Manual</td></tr></tbody></table>				DE	Bedienungsanleitung	Handbuch	EN	Instructions for use	Manual	FR	Mode d'emploi	Manuel	ES	Manual de instrucciones	Manual	<p>SEVERIN SM 3707 Stand Mixer Blender [pdf] Instructions 910036_G24M, SM 3707, SM 3707 Stand Mixer Blender, SM 3707, Stand Mixer Blender, Mixer Blender</p>
DE	Bedienungsanleitung	Handbuch														
EN	Instructions for use	Manual														
FR	Mode d'emploi	Manuel														
ES	Manual de instrucciones	Manual														

References

- [S SEVERIN Onlineshop](#)
- [S SEVERIN Onlineshop](#)
- [S SEVERIN Onlineshop](#)
- [S Blogazine - SEVERIN \(Official\)](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.