



SEVERIN ZB 5592 Multi Dicer Attachment Instruction Manual

[Home](#) » [SEVERIN](#) » SEVERIN ZB 5592 Multi Dicer Attachment Instruction Manual 

Contents

- [1 SEVERIN ZB 5592 Multi Dicer Attachment](#)
- [2 Structure](#)
- [3 Safety instructions](#)
- [4 Before using for the first time](#)
 - [4.1 Cutting/grating inserts](#)
- [5 Operation](#)
- [6 Cleaning and Care](#)
- [7 SEVERIN Elektrogeräte GmbH](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

SEVERIN

SEVERIN ZB 5592 Multi Dicer Attachment



Dear Customer

Before using the appliance, read the following instructions carefully and keep this manual for future reference. The appliance must only be used by persons familiar with these instructions.

Structure



1. Plunger
2. Cutting insert
3. Coarse and fine grater inserts
4. Circlip
5. Filler neck

Safety instructions

- The attachment may only be used in conjunction with the KM 3896 food processor. Therefore, the safety instructions for KM 3896 also apply.
- When the attachment is used, the mixing bowl with splash guard lid must also be attached, as the mixer also rotates.
- **Warning:** The graters and cutters are very sharp. Risk of injury. Therefore, proceed carefully when cleaning and changing these parts.
- Clean the accessories immediately after use with warm water with and detergent.
- For more information on cleaning, please refer to the Cleaning and Care section.
- Do not wear long necklaces, earrings, scarves, wide sleeves or long open hair when operating the appliance.
- Never touch the output area of the attachment.
- Always use only the plunger to push in the filler neck. Never push in with your hand or other objects.
- Never touch moving parts of the appliance, risk of injury!
- The appliance must be switched off and mains power must be disconnected before mounting, changing,

removing accessories or cleaning the appliance. Wait for the motor to come to a complete standstill after switching off.

- The appliance must only be operated with the original accessories provided with it and for the purpose described.
- Inspect the grating and cutting inserts for damage before each use. Do not use a defective insert.

Before using for the first time

Clean the attachment before using it for the first time, as described in Cleaning and Care.

Short operation

This appliance is designed with a short operating time (10 mins), i.e. you can use it for a maximum of 10 minutes in one go. Then the unit needs to be switched off for 20 minutes to cool down.

Cutting/grating inserts

Cutting insert

- For creating thin vegetable slices of cucumbers or potatoes, for example.

Grating insert coarse/ fine

- For grating vegetables, fruit, cheese and nuts.

Operation

- Select the desired cutting/grating insert and insert it into the multi-dicer attachment.
- Push the locking ring firmly onto the attachment and check that it is firmly seated.
- Remove the cover on the front of the food processor. To do this, reach into the gap at the bottom of the cover.
- Place the attachment on the appliance and lock it counterclockwise. The filler neck must point upwards.
- Place a tray under the locking ring.
- Insert the power plug into a wall socket.
- Set the control knob to the desired speed level between 3 and 5.
- Place the prepared food in the filler neck and press down lightly.
- Use only the plunger to refill the filler neck.

After use

- After use, switch off the appliance and disconnect from the mains power.
- Unlock the attachment clockwise and remove it. Remove the locking ring and take out the insert.
- Replace the cover in such way that the lines (– –) are opposite each other.

Cleaning and Care

- Before cleaning, switch off the appliance, disconnect from mains power and wait for the motor to come to a complete standstill.
- Do not use harsh or abrasive cleaning agents.
- Clean the accessories immediately after use with warm water and detergent or in the dishwasher.

Disposal


Devices marked with this symbol must be disposed of separately from your household waste, as they contain valuable materials which can be recycled. Proper disposal protects the environment and human health. Your local authority or retailer can provide information on the matter.

SEVERIN Elektrogeräte GmbH




- Röhre 27 D-59846 Sundern
- **Tel:** +49 2933 982-0
- **Fax:** +49 2933 982-1333
- information@severin.de
- www.severin.com

Model specifications are subject to change.
I/M No: 10123.0000 07/22

Documents / Resources

	<p>SEVERIN ZB 5592 Multi Dicer Attachment [pdf] Instruction Manual ZB 5592, Multi Dicer Attachment, ZB 5592 Multi Dicer Attachment</p>
---	---

References

-  [SEVERIN \(Official\)](#)
-  [SEVERIN \(Official\)](#)
-  [SEVERIN \(Official\)](#)