

 


SG Lighting LEDDim Smart Push II Instruction Manual

[Home](#) » [SG Lighting](#) » SG Lighting LEDDim Smart Push II Instruction Manual 



LEDDim Smart Push II



220-240V, 50Hz, 3-200VA, -20°C – 35°C Operating frequency: 2402-2480MHz,
Maximum radio-frequency output power: 2dBm SWITCH DIM

Contents


[1 LEDDim Smart Push II](#)

[2 Documents /
Resources](#)

[2.1 References](#)

[3 Related Posts](#)

LEDDim Smart Push II

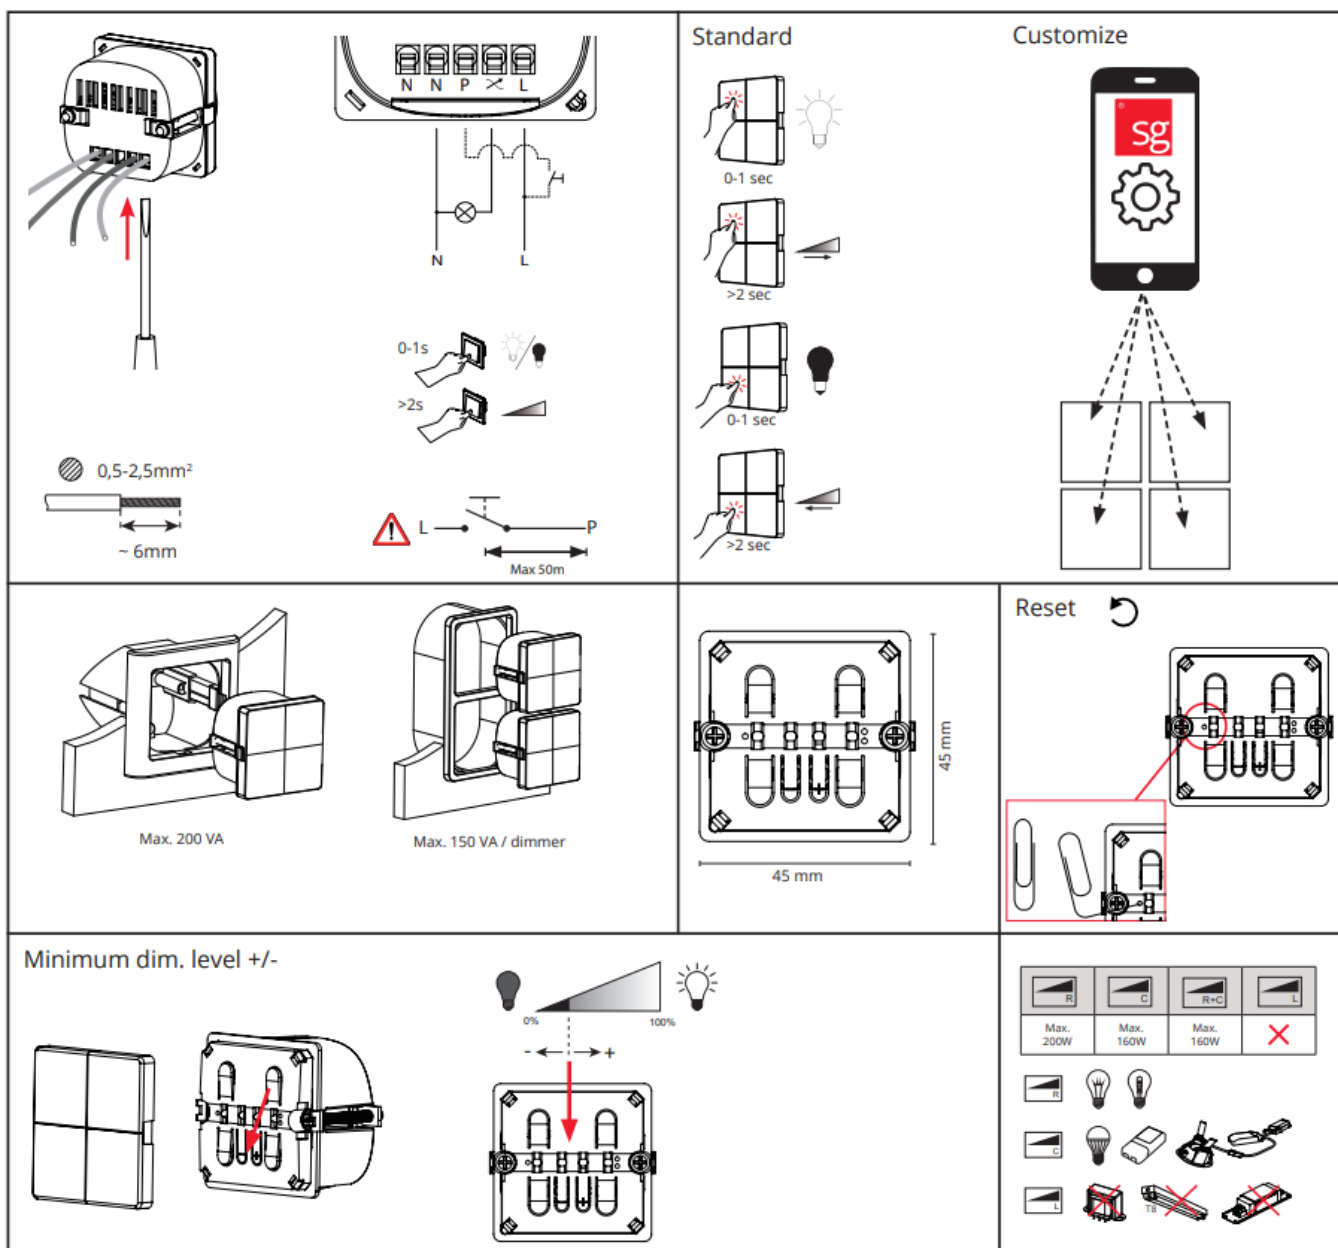


Turn off power before installing.




only to be installed and maintained by an authorized electrician.


Pairing

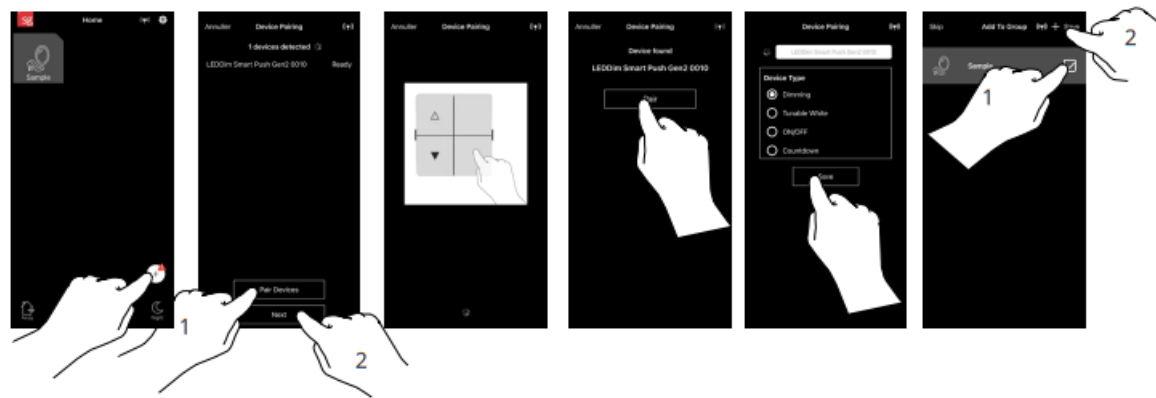


Assign Shortcut

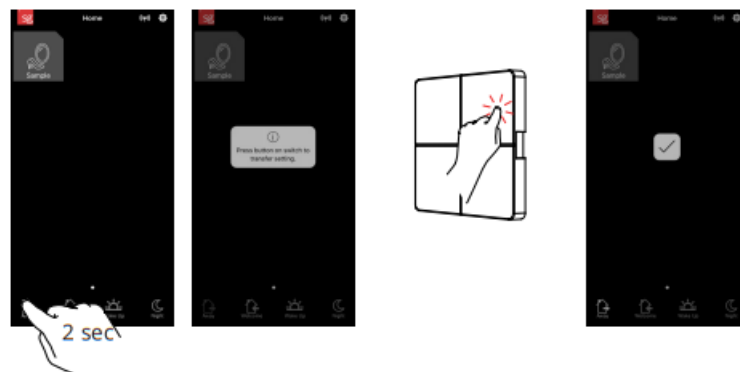


Assign Group

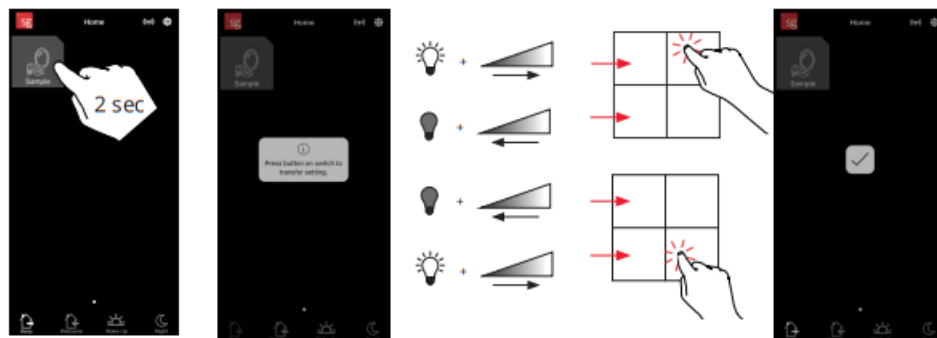


Assign Scene

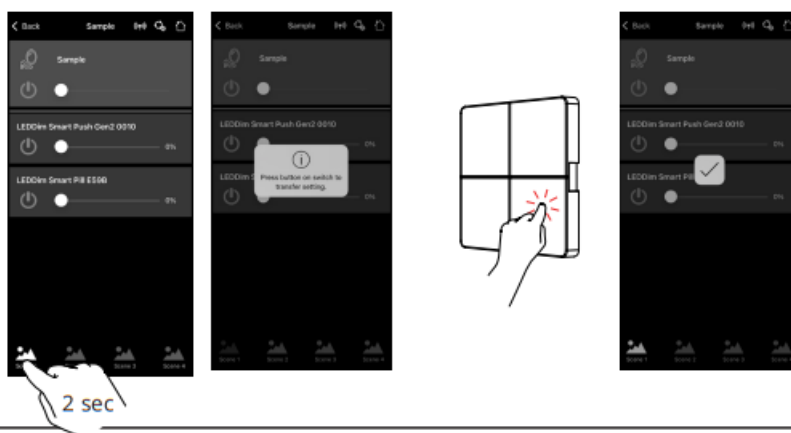


Assign Single Device

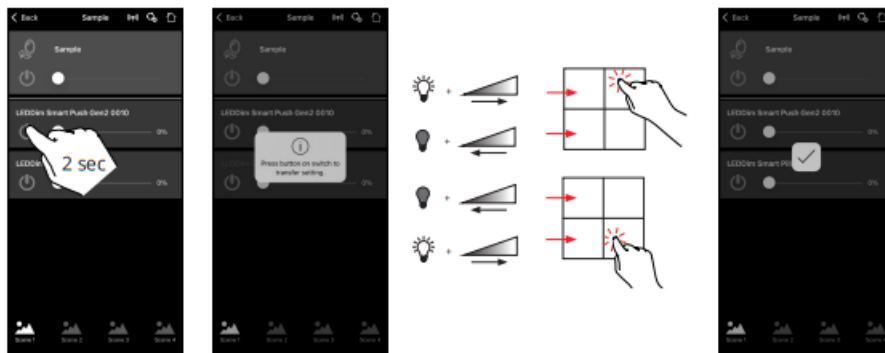

Advanced Settings

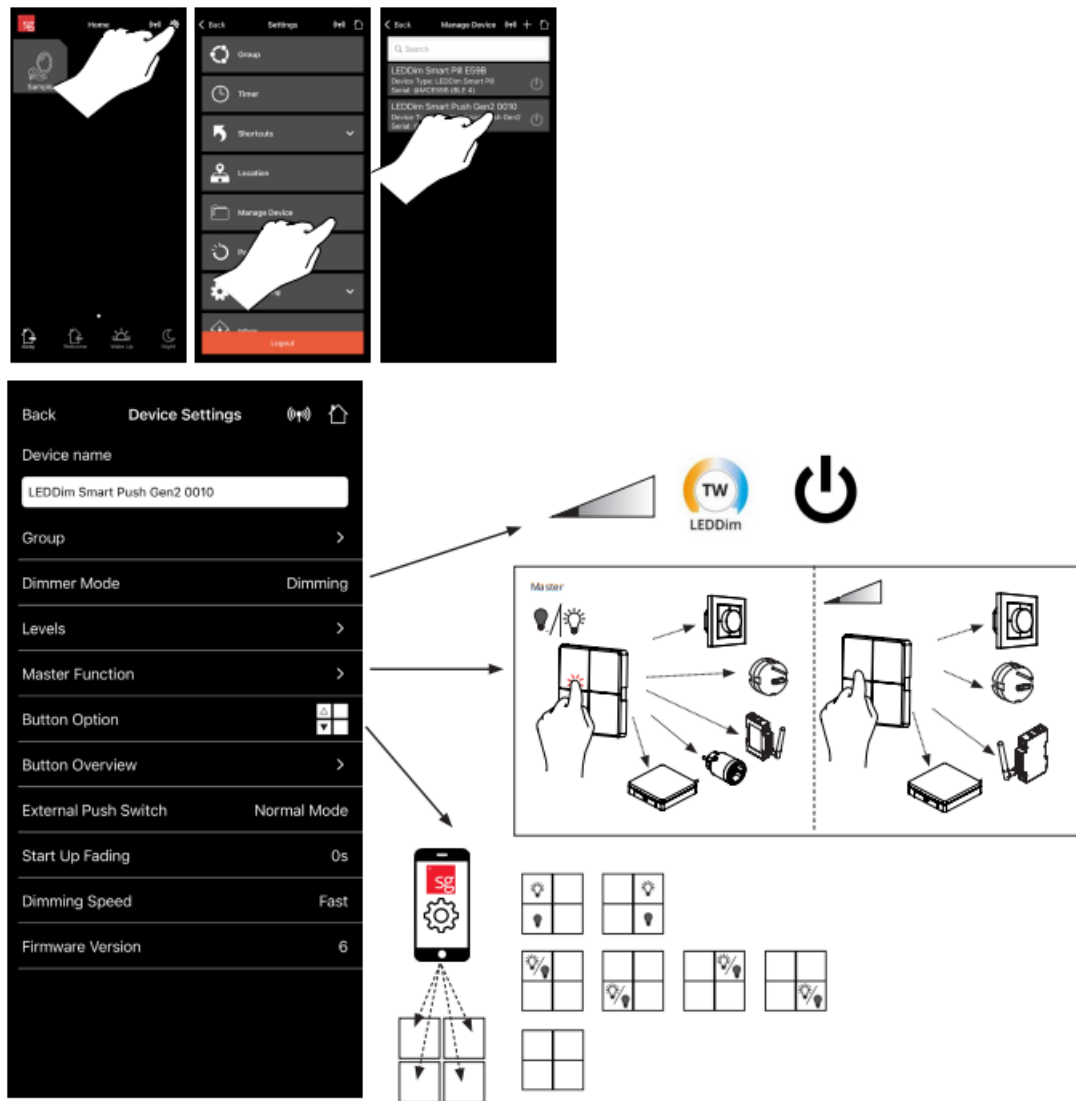

UNITED KINGDOM
 SG Lighting LTD
 Tel: +47 37 50 03 00
info@sglighting.co.uk
www.sglighting.co.uk

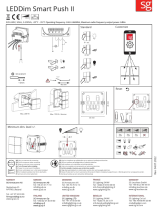

[SG Lighting LEDDim Smart Push II](#) [pdf] Instruction Manual
LEDDim Smart Push II, Smart Push II, LEDDim Smart, Push II

References

-  [Leuchten für dein Zuhause](#)
-  [SG Armaturen | Voorpagina](#)
-  [SG Armaturen | Framsida](#)
-  [SG Armaturen | SG Armaturen](#)
-  [SG Armaturen | Forside](#)
-  [SG Armaturen | Hjem](#)
-  [SG Armaturen | Start-seite](#)
-  [SG Armaturen | Front UK](#)
-  [SG Armaturen | Voorpagina](#)