



SMART CD Player



SHANLING EC SMART CD Player User Guide

[Home](#) » [SHANLING](#) » SHANLING EC SMART CD Player User Guide 

Contents

- [1 SHANLING EC SMART CD Player](#)
- [2 Product Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Security Instructions](#)
- [5 Laser Warning](#)
- [6 Parts Name](#)
- [7 Using EC Smart](#)
- [8 Remote Control Diagram](#)
- [9 Operating instructions](#)
- [10 Accessories](#)
- [11 ABOUT COMPANY](#)
- [12 Frequently Asked Questions \(FAQ\)](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)



SHANLING EC SMART CD Player



Product Specifications

- **Brand:** EC Smart
- **Model:** CD
- **Power Input:** 5V/2A
- **Connectivity:** Bluetooth, SD, USB, AUX, CD
- **Ports:** Type-C USB, 3.5mm Line-Out
- **Laser Class:** Class 1
- **Country of Origin:** China

Product Usage Instructions

Security Instructions:

1. Do not repair, disassemble, or modify the device without permission.
2. Avoid extreme hot, cold, dusty, or humid conditions. Keep away from liquids.
3. Avoid dropping, friction, or crashing against hard objects. Prevent violent vibration or impact.
4. Listen to music at a proper volume to avoid hearing damage. Turn down the volume before using headphones.
5. Do not clean with chemicals or detergents to prevent damage to the surface and coating.

Laser Warning:

1. Avoid opening the enclosure as the laser beam can damage the eyes. Only allow qualified technicians to perform repairs.
2. This product is classified as a Class 1 laser product. Check the label on the rear for identification.
3. The laser components can generate radiation above the Class 1 limit.

Using EC Smart Stereo CD Player:

1. Inserting Disc:

1. Rotate the control panel left up to 90 degrees.
2. Align the disc with the CD Drive mount and press gently into position.
3. Rotate the control panel back to its original position.

2. Vertical & Horizontal Use:

For vertical use, remove the stand with a 3mm hex key. For horizontal use, keep the stand attached.

3. Remote Control Diagram:

Use the CD button on the remote to operate. Long press to switch to standby mode. Control various functions like power, CD play, Bluetooth, etc.


Security Instructions

1. Don't repair, disassemble, or modify the device without permission.
2. Please don't use this device in extremely hot, cold, dusty or humid circumstances. Avoid any exposure to liquids.
3. Prevent device from falling, friction, or crashing against hard objects during use, otherwise surface scratch, data loss or other hardware damages will be caused. Please also avoid violent vibration or impact.
4. Please enjoy the music at a proper volume to avoid impairing your hearing and damaging the sound system. Before plugging your headphones into the device, please first turn down the volume.
5. Don't clean this device with chemicals or detergents, otherwise, its surface and top coating may be damaged.

Laser Warning

1. Since the laser beam in this player can damage the eye, please do not open the enclosure. Only a qualified technician should carry out repairs.
2. This player is classified as a Class 1 laser product, and is identified as such on the label located on the rear of the enclosure.
3. The laser components of this product can generate laser radiation above the Class 1 limit.


Parts Name

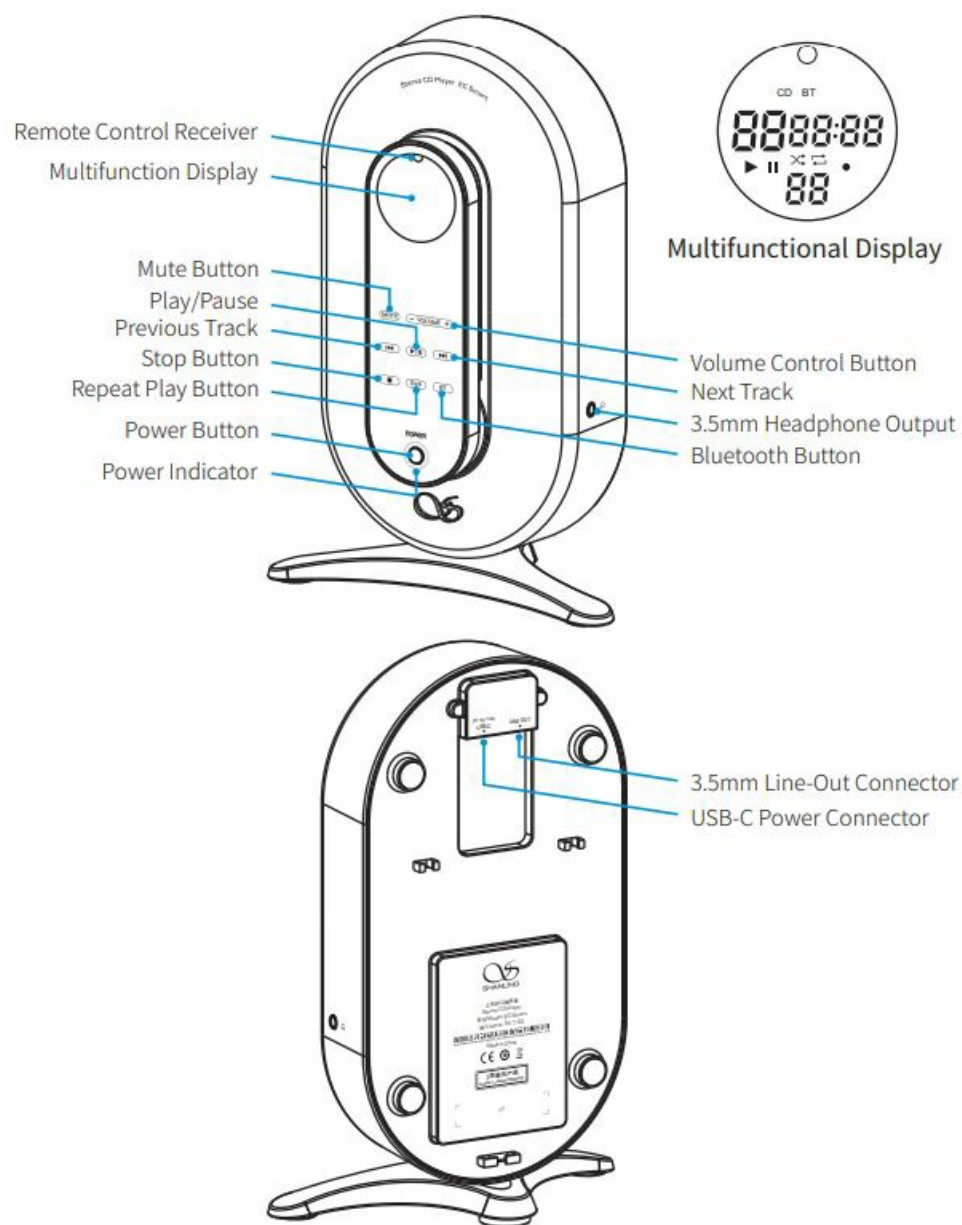


Using EC Smart

Inserting Disc

1. Rotate the control panel to the left, up to 90 degrees.
2. Align the disc with the CD Drive mount and press it gently into the position.
3. Rotate the control panel to its original position.

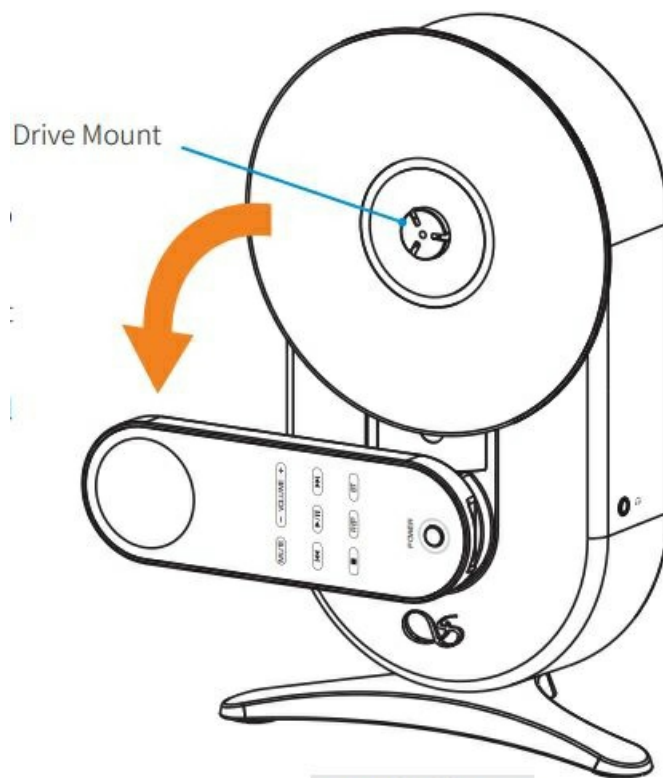


Vertical Use

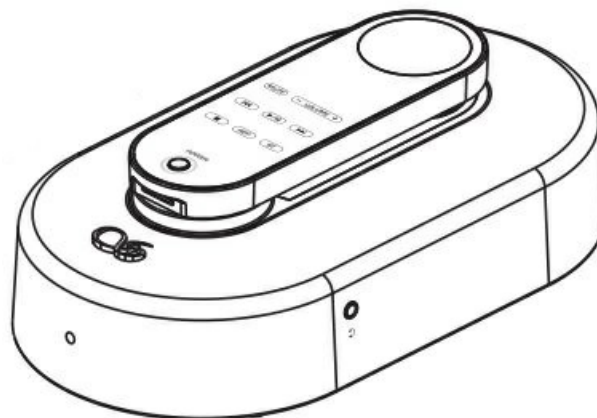


Horizontal Use

Removable Stand

Use a standard 3mm hex key to remove the mounting bolt.

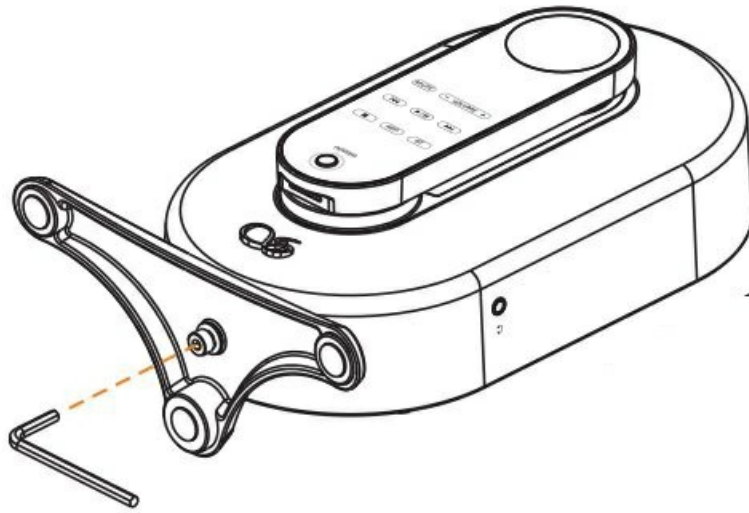

Remote Control Diagram

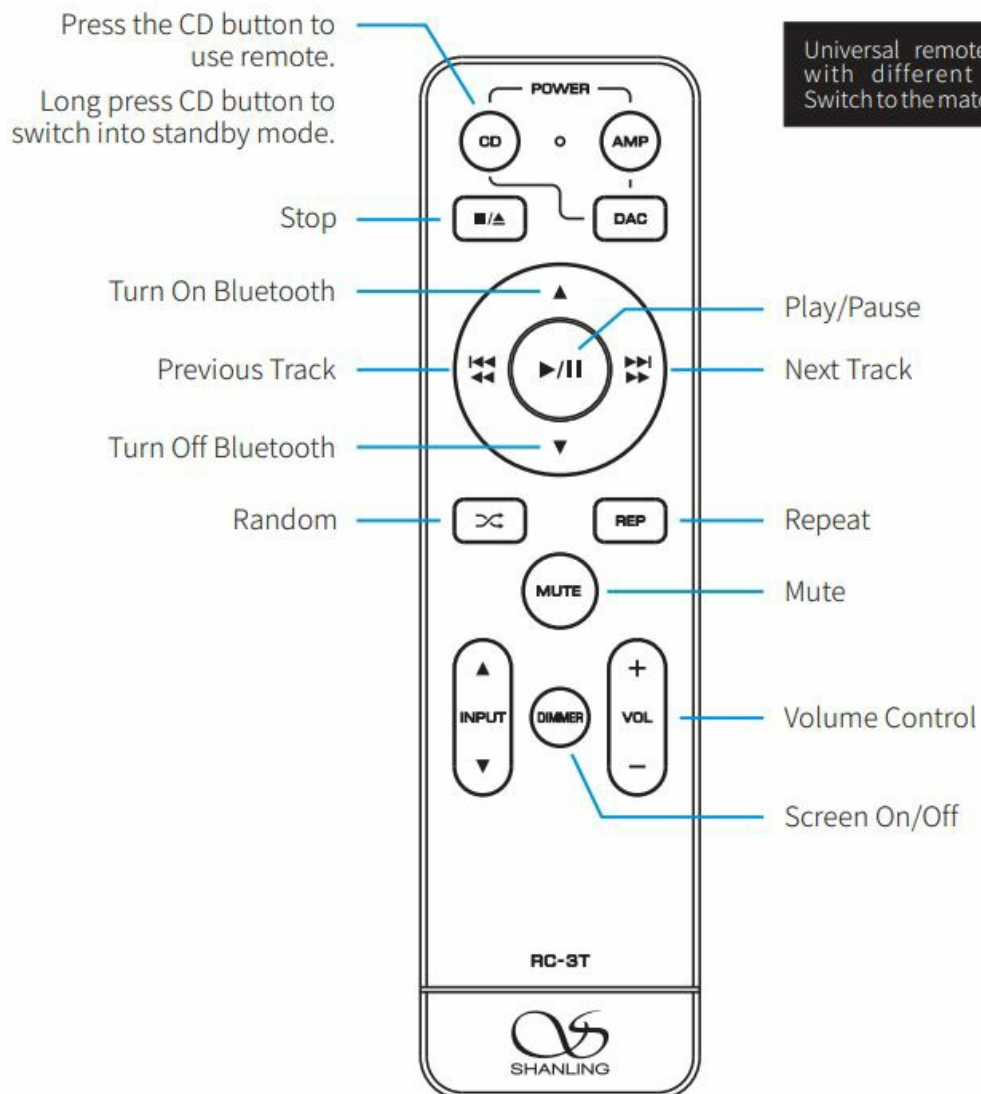

Note:

1. Use the remote within a 10m distance and less than 30-degree angle.
2. Some buttons on the universal remote server do not have functions with EC Smart.

Operating instructions

Power ON/OFF

1. Connect the device to a 5V/2A USB-A charger using the provided USB Cable.
2. Press and hold the [CD] button on the remote or press and hold [POWER] button on the device. Indicator will change from red to green and the device will turn on.
3. Press and hold the [CD] button on the remote or press and hold [POWER] button on the device. Indicator will change to red and the device will turn off.
4. Unplug the USB cable if the device will not be used for long period.

Use the volume buttons on the device or remote to change the volume.

Stop Playback

Press the [■] button on the device or remote to stop the playback.

Start / Pause Playback

Press the [▶/II] button on the device or remote to start or pause the playback.

Previous Track

Press the [◀◀] button on the device or remote. If the playback progresses for more than 5 seconds, playback will start from the beginning of the track. Press it again to jump to the previous track.

Next Track

Press the [▶▶] button on the device or remote to jump to the next track.

Bluetooth Connection

1. Make sure your Bluetooth device is in pairing mode and positioned right next to the EC Smart. Press the [BT] button on the EC Smart to begin pairing. "BT" will start flashing on its screen. Wait for the devices to pair successfully.
2. After the first pairing, EC Smart will automatically search for a paired Bluetooth device and connect to it.
3. EC Smart will automatically connect to the first available paired device after turning on the Bluetooth function.
4. If you want to connect to a different Bluetooth device, make sure other paired devices are turned off.

Repeat

Press the [REP] button on the device or remote to continuously replay all tracks from the disc. The display will show "↺" an icon. Press the button again to disable.

Random Playback

Press the [X] button on the device or remote to play tracks in random order. Display will show "X" icon. Press the button again to disable.

Mute Playback

1. Press the [MUTE] button on the device or remote to mute playback. Volume level indicator will start flashing and output will be muted.

2. Press the button again to resume playback.

Screen On/Off

Press the [DIMMER] button on the remote control to turn the screen on or off.

Accessories

- **Quick Start Guide:** 1
- **Warranty Card:** 1
- **USB A to Type-C cable:** 1
- **3.5mm to RCA Cable adapter:** 1
- **Remote Control:** 1

ABOUT COMPANY

- **Company:** Shenzhen Shanling Digital Technology Development Co., Ltd.
- **Address:** No.10, Chiwan 1 Road, Shekou Nanshan District of Shenzhen City, China.
- **QQ Group:** 667914815; 303983891; 554058348
- **Telephone:** [400-630-6778](tel:400-630-6778)
- **E-mail:** info@shanling.com
- **Official Website:** www.shanling.com

Frequently Asked Questions (FAQ)

- **Can I use this CD player without the remote control?**

Yes, you can operate the CD player manually using the buttons on the device itself.


- **How do I switch between different input modes like CD, Bluetooth, or AUX?**

Use the corresponding buttons on the device or remote control to switch between different input modes.

- **Is it safe to leave the CD player in standby mode for a long time?**

It is recommended to turn off the CD player completely if not in use for an extended period to save power and prevent any potential hazards.

Documents / Resources

	<p>SHANLING EC SMART CD Player [pdf] User Guide EC-Smart-V1.1, EC Smart V1.1, EC SMART CD Player, EC SMART, CD Player</p>
---	---

References

- 
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.