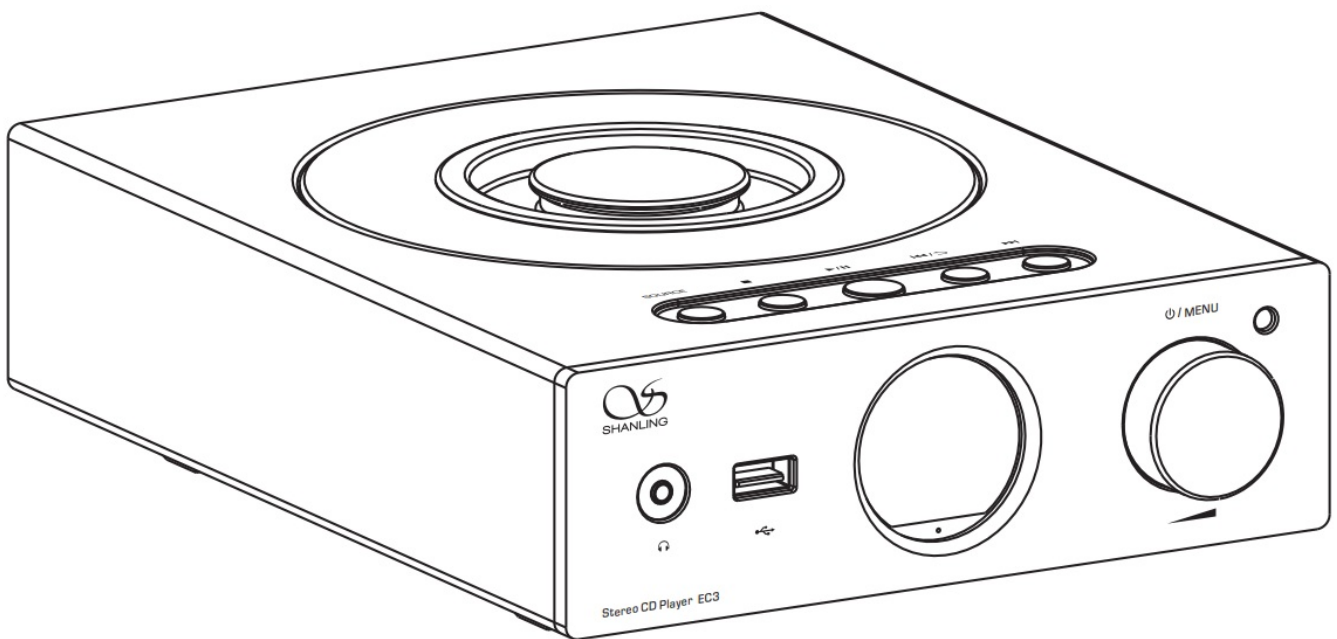 




SHANLING EC3 CD Player Top-Loading Compact Player User Guide

[Home](#) » [SHANLING](#) » SHANLING EC3 CD Player Top-Loading Compact Player User Guide 

SHANLING EC3 CD Player Top-Loading Compact Player



Contents

- [1 Safety Instructions](#)
- [2 Safety Precautions](#)
- [3 Laser Warning](#)
- [4 Parts Name](#)
- [5 Remote Control Diagram](#)
- [6 Operating instructions](#)
- [7 APP Control](#)
- [8 Specifications](#)
- [9 Accessories](#)
- [10 Customers Support](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

Safety Instructions

1. Don't repair, disassemble or modify the device without permission.
2. For good ventilation, a minimum of 10cm clearance shall be maintained at the back and both sides and 20cm at the top of the player.
3. Allow no water dripping or splashing into the player. Place no object containing liquid on the player, e.g. Vase.
4. Do not cover any ventilation hole with newspaper, cloth, curtain, etc. in case of ventilation blocking.
5. Allow no exposed flame source on the player, e.g. burning candle.
6. The player shall be connected to AC power output socket with grounding protection.
7. If power plug and appliance coupler are used as disconnecting device, the disconnecting device shall be easily operable.
8. The waste battery must be treated according to relevant local battery wasting regulations.
9. Only applicable for safe use in the area with elevation under 2000m. See Fig. 1 for the sign.
10. Only applicable for safe use under non-tropical climate conditions. See Fig. 2 for the sign. Fig. 1 Fig. 2



Fig. 1



Fig. 2

Safety Precautions

CAUTION		
	RISK OF ELECTRIC SHOCK DO NOT OPEN	

Caution: Risk of electric shock. DO NOT OPEN.



The sign with arrowed lightning inside an equilateral triangle warns the user that the player has high voltages inside which can cause electric shock.



The sign with an exclamation mark inside an equilateral triangle warns the user that the player has important operation and maintenance instructions.

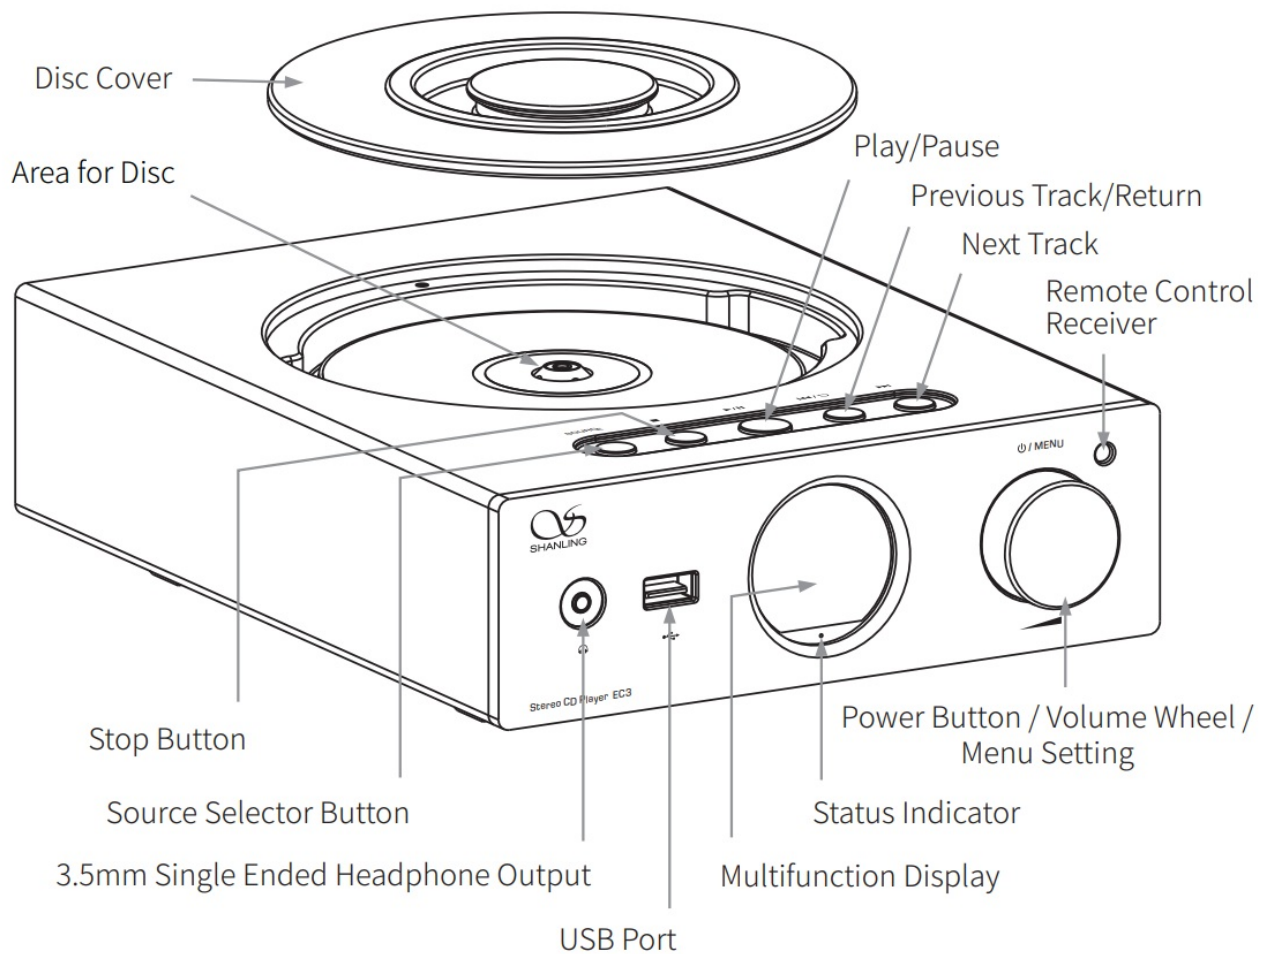 
Laser Warning

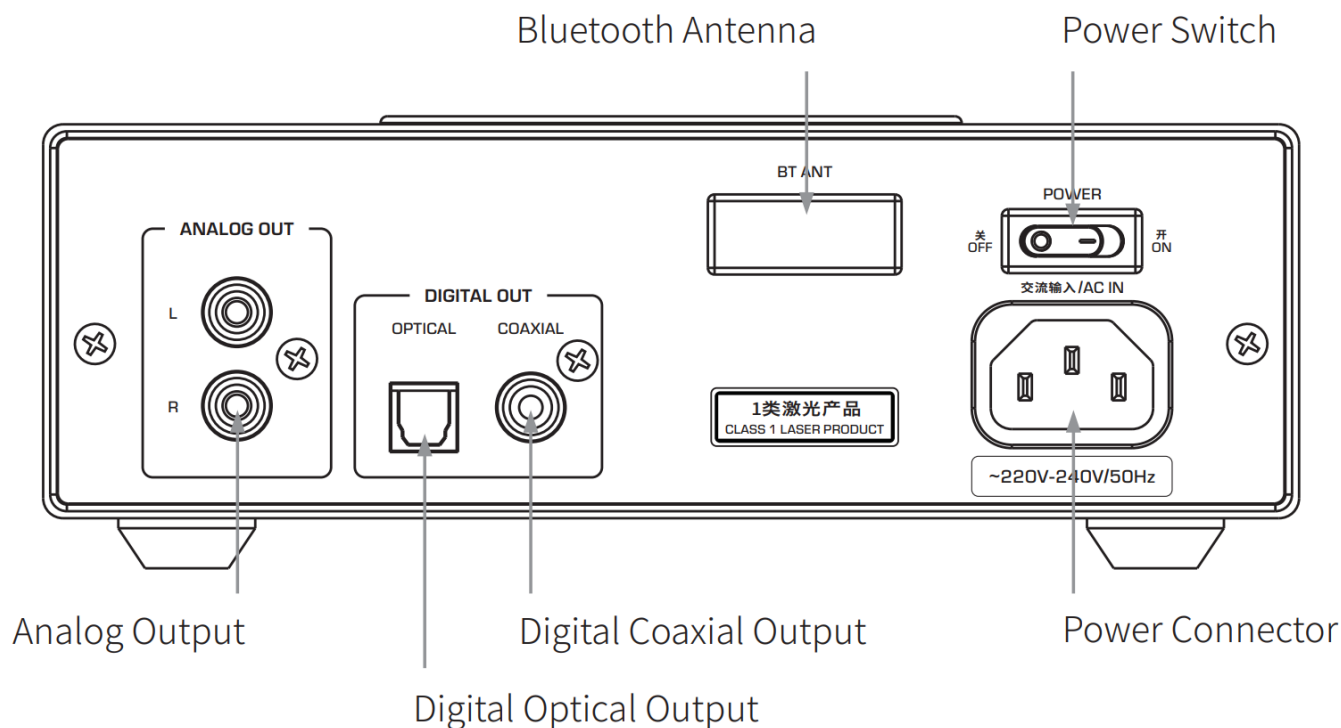 
1. Since the laser beam in this player can damage the eye, please do not open the enclosure. Only a qualified technician should carry out repairs.
2. This player is classified as a Class 1 laser product, and is identified as such on the label located on the rear of the enclosure.

CLASS 1 LASER PRODUCT

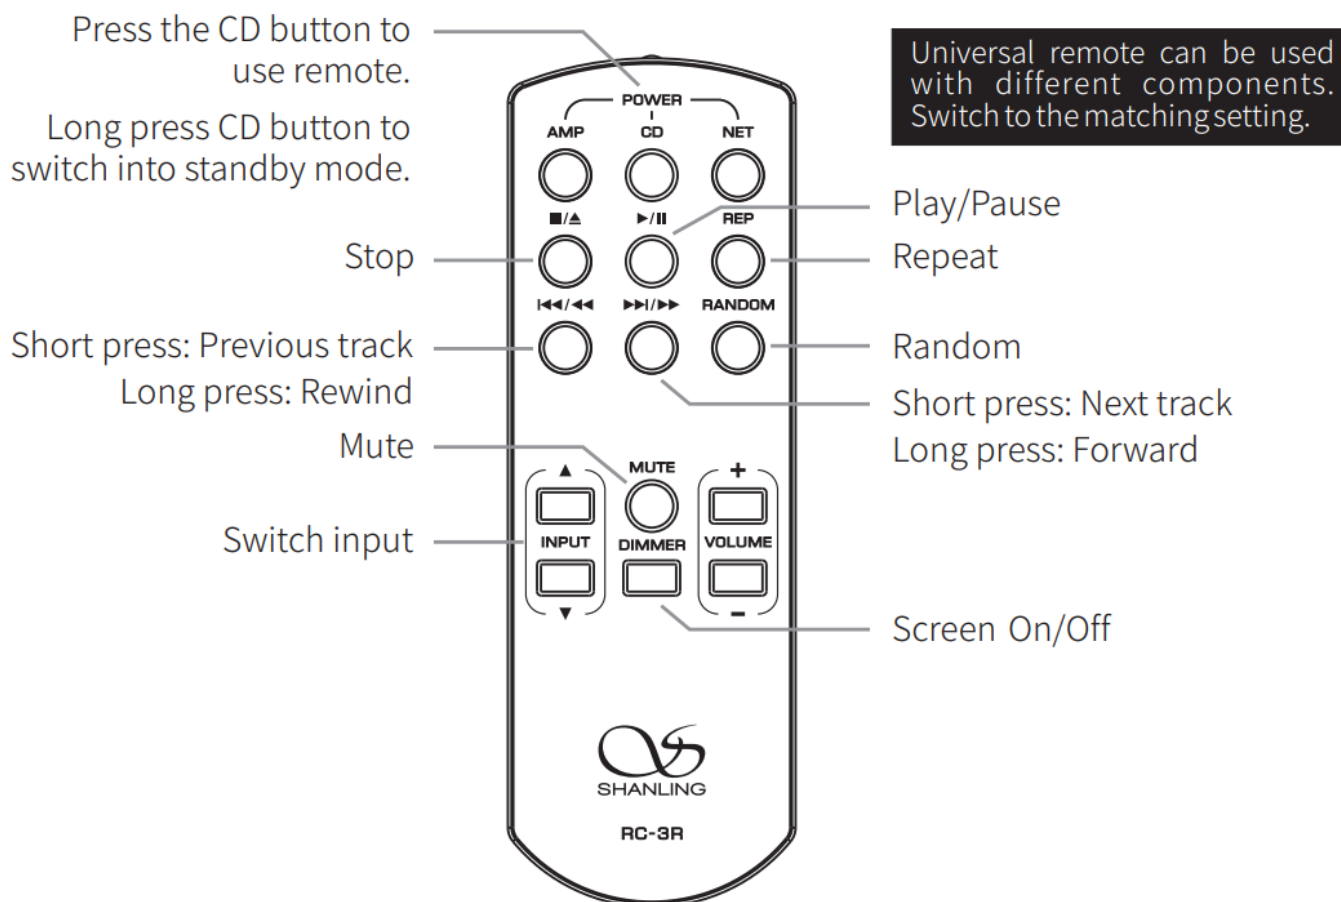 
3. The laser components of this product can generate laser radiation above the Class 1 limit.

Parts Name



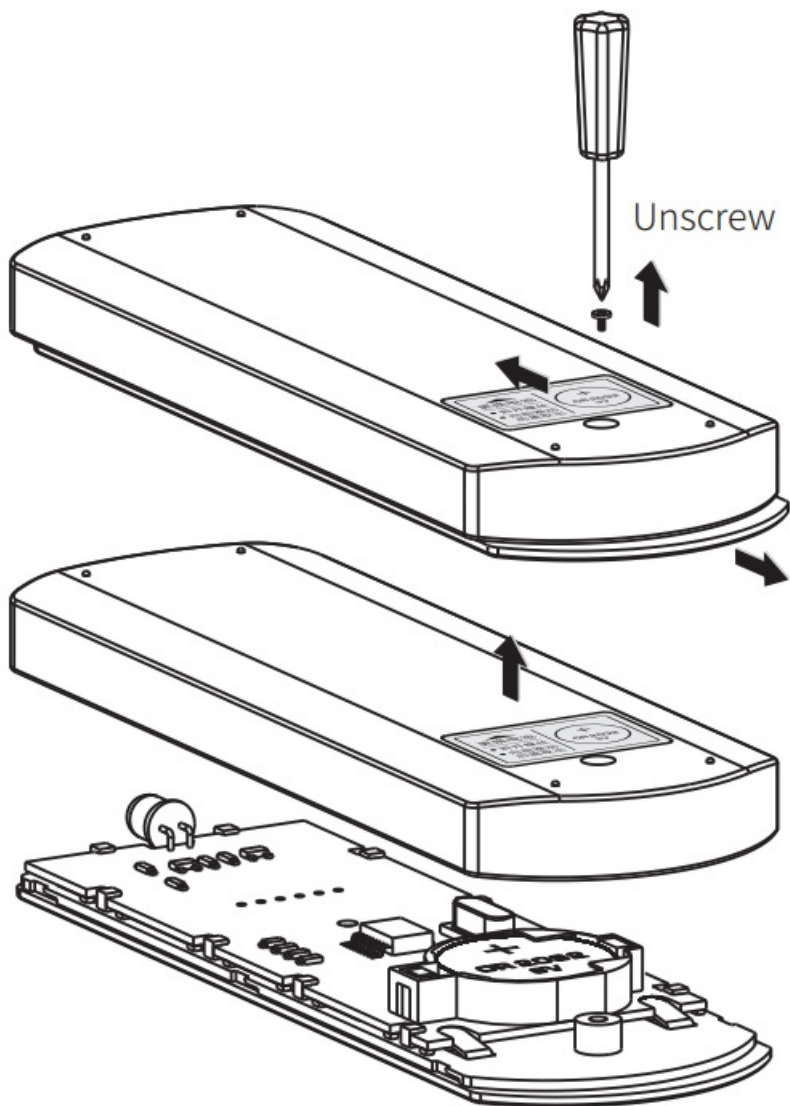 


Remote Control Diagram



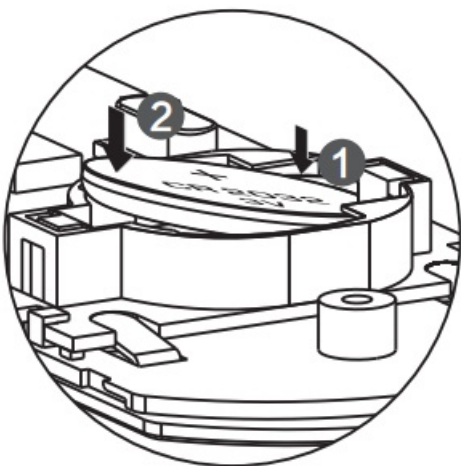 
Note:

1. Use remote within 10m distance and less than 30 degree angle.
2. Some buttons on universal remote server no functions with EC3.





Note

1. When changing battery, insert right side first.
2. Then press in left side.


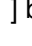


Operating instructions

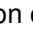
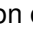
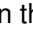
Turn ON/OFF

1. Connect the power cord and signal cable of the player.
2. Put the power button on the rear side of the player into On position. Indicator on display should turn red/blue and then red.
3. Press down the [ / **MENU**] volume wheel for 2 seconds. Indicator will turn blue and device power On.
4. Press down the [ / **MENU**] volume wheel for 2 seconds. Indicator will turn red and device power off.
5. Put the power button on the rear side into OFF position to completely power off the player.

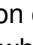
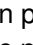
Select Input Source

Press [SOURCE] or [ INPUT ] buttons on machine or remote to cycle between CD, USB Drive and Bluetooth input.

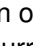
Stop Playback

1. Press the [] button on the player or press [ / ] button on the remote control to stop the playback.
2. When changing the disc, be sure to always stop the playback before removing the disc cover.

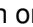
Pause Playback

Press the [ / ] button on player or remote to pause playback. Press the button again to resume playback. " II " Icon will be displayed while playback is paused.

Previous Track

Press the [] button on player or remote. If the current track played for less than 3 seconds, it will switch to previous track. If the current track played for more than 5 seconds, it will jump to the beginning of the current track. Press the button again to switch to previous track.



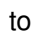
Next Track

Press the [] button on player or remote to switch to the next track.

Rewind / Fast Forward

Long press the [ / ] or [ / ] button to rewind or fast forward in the current track.

Menu Setting

Press in on the volume wheel to [ **MENU**] enter the System Settings menu.
Rotate the knob to move through menu.
Press the knob to confirm.
Press the [ / ] button to return to previous menu.

USB Driver Playback


1. It's recommended to use USB drives formatted to FAT32.
2. Drives up to 2TB are supported.
3. Support up to PCM 384kHz and DSD256.
4. Supported formats: DSD,DXD,APE,FLAC,WAV,AIFF/AIF,DTS,MP3,WMA AAC,OGG,ALAC,MP2,M4A,AC3,OPUS,TAK,CUE

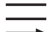
Bluetooth Input

1. Switch the source / input to Bluetooth mode.
2. Open Bluetooth settings on your device and search for new devices.
3. Player will show up as "Shanling EC3".
4. Pair it with your device and let it connect.




Repeat

If you want to play the current track repetitively, press [REP] button on remote control once. Display will show "  " .

If you want to play the entire disc repetitively, press [REP] button on remote control again. Display will show "  " .

To cancel repeat, press the button again. Display will show "  " .


Random Playback

1. Press the [RANDOM] button. Display will show "  " .
2. Press the [RANDOM] or [ / ] button to end random playback


Screen On/Off

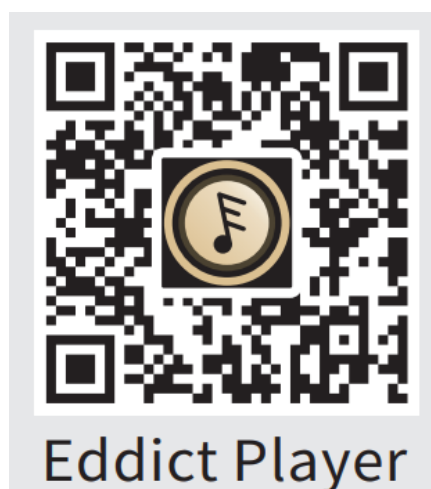 
Press the [DIMMER] button on the remote to turn display On/Off.

Mute Playback

1. Press the [MUTE] button to mute playback. Display will show "  " .
2. Press the [MUTE] button again to resume playback.

APP Control

1. Press the [ MENU] knob to enter the settings menu.
2. Go to Bluetooth settings and turn on Bluetooth.
3. Turn on the Sync Link function in the settings menu. " "
4. Insert USB drive and switch source to the USB Drive input.
5. On your phone, open Eddict player app, go to Sync Link function and turn on Client mode. Select "Shanling EC3" from list of available devices.
6. Click on "Scan Music" to scan for music files on the USB Drive.
7. Now you can control music playback on your EC3.



Scan code to download the Eddict Player app

Specifications

Technical Parameters	Output Level: 2.3V Frequency Response: 20Hz – 20KHz (± 0.5 dB) Signal to Noise Ratio: 116dB Distortion: 0.001% Dynamic Range: 116dB
General Parameters	Power Consumption: 15W Dimensions: 188 x 255 x 68mm Weight: 2.4kg

Accessories

Quick Start Guide: 1
Warranty Card: 1
Power Cord: 1
Remote Control: 1
Disc Cover: 1

Customers Support



Company: Shenzhen Shanling Digital Technology Development Co., Ltd.

Address: No.10, Chiwan 1 Road, Shekou Nanshan District of Shenzhen City, China.

QQ Group: 667914815; 303983891; 554058348


Telephone: 400-630-6778

08:00-12:00; 13:30-17:30

Due to continuous improvement, every specification and design is subject to change at any time without further notice.



Documents / Resources

	<p>SHANLING EC3 CD Player Top-Loading Compact Player [pdf] User Guide</p> <p>EC3 CD Player Top-Loading Compact Player, EC3, CD Player Top-Loading Compact Player, To p-Loading Compact Player, Compact Player, Player</p>
--	---

References

- 