



# ***Shark*** CYCLONE™



**814100191C CH701 SERIES**

## Contents [ [hide](#) ]

1 FEATUREDS

2 CHARGING YOUR SHARK™ VACUUM

3 USING YOUR SHARK® VACUUM

4 WARRANTY REPAIR INFORMATION

5 ACCESSORIES

6 TROUBLESHOOTING

7 BATTERY INDICATOR

8 MAINTENANCE

9 TECHNICAL SPECIFICATIONS

10 Documents / Resources

10.1 References

## FEATUREDS

A Air-Intake Nozzle

B Dust Cup Release Button

C Filter

D Charging Indicator Light

 
E On/Off Switch

F Vacuum Body

G USB-C Charger

H Upholstery Tool


I Crevice Tool\*

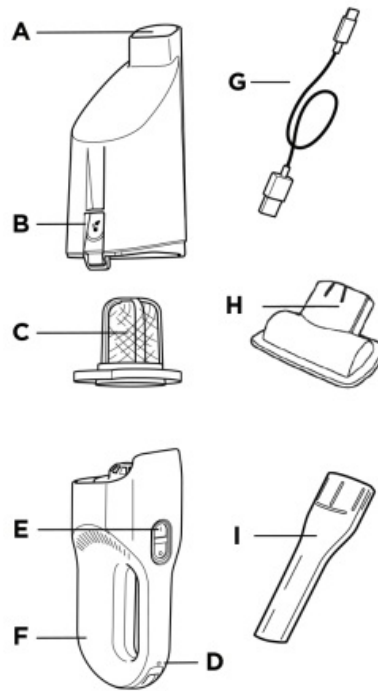

Accessory type and quantity may vary depending on the model

The images shown in this manual are for illustrative purposes only and may be subject to change.

## **IMPORTANT SAFETY INSTRUCTIONS – SAVE THESE INSTRUCTIONS**

 **WARNING:** TO REDUCE THE RISK OF INJURY, USER MUST READ INSTRUCTION MANUAL + HOUSEHOLD USE ONLY

### **WARNING**

To reduce the risk of injury, fire, electric shock, and property damage resulting from improper use of the appliance, carefully observe the following instructions. This unit contains electrical connections and moving parts that potentially present risk to the user. POWER SUPPLY, CHARGING ADAPTER, AND VACUUM CONTAIN ELECTRICAL CONNECTIONS. WHEN USING AN ELECTRICAL APPLIANCE, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

1. There are NO serviceable parts.
2. DO NOT use to vacuum any liquids.
3. DO NOT immerse in water or other liquids.
4. If vacuum is damaged, discontinue use.
5. To avoid fire, explosion, or injury, inspect vacuum and charging dock for any damage before use.  
DO NOT use damaged vacuum or charging dock.
6. DO NOT use outdoors or on wet surfaces. Use only on dry surfaces.

7. If vacuum cleaner is not working as it should, or has been dropped, damaged, or used outdoors, or immersed in water, contact a service center.
8. DO NOT handle charger or vacuum cleaner with wet hands.
9. DO NOT leave vacuum cleaner unattended while powered on.
10. Keep vacuum away from heated surfaces.
11. Always turn off vacuum before connecting charging adapter.
12. DO NOT incinerate appliance, even if it is severely damaged, as lithium-ion battery may explode or catch fire.
13. Use only with Listed/Certified Information Technology (Computer) Equipment, Listed/Certified TE Power Supply, or Listed Class 2 Power Unit GENERAL USE
14. DO NOT carry the charger by the cord or yank to disconnect from an outlet; instead grasp the plug and pull to disconnect.
15. Keep charger cord away from heated surfaces.
16. Use only as described in this manual.
17. Keep your work area well lit
18. To avoid unintentional starting, always turn off the vacuum cleaner before picking it up or carrying it, and before attaching or detaching the charger, dust cup, filter, or any accessories.
19. DO NOT put any objects into openings.
20. DO NOT use if any opening is blocked: Keep free of dust, lint, hair, or anything that may reduce airflow.
21. DO NOT use without dust cup and filter in place.
22. Persons with reduced physical, sensory, or mental capabilities may only use the vacuum with supervision of prior safety instruction and an understanding of the hazards involved. Children may not clean or maintain the vacuum without supervision. This vacuum is not a toy.
23. DO NOT use if arrow is retracted; if the arrows become locked, turn off the vacuum cleaner, clear all obstructions and power on again.
24. Keep nozzle away from hair, face, fingers, uncovered feet, or loose clothing.
25. Only use manufacturer's recommended attachments.
26. DO NOT charge at temperatures below 50°F (10°C) or above 104°F (40°C). Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
27. Store the appliance indoors. DO NOT use or store it below 32°F (0°C). Ensure the appliance is at room temperature before pairing.

## **DUST CUP/FILTER/ACCESSORIES**

Before turning on the vacuuum:

28. Make sure filter is thoroughly dry after routine cleaning.
29. Make sure dust cup and filter are in place after routine maintenance.
30. Make sure accessories are free of blockages and keep openings away from face and body.
31. Use only Shark brand filters and accessories.

## **GENERAL CLEANING**

 
32. DO NOT vacuum up hard or sharp objects such as glass, nails, screws, or coins that could damage the vacuum cleaner.
33. DO NOT vacuum up drywall dust, fireplace ash, or embers.
34. DO NOT use as an attachment or power tool for dust collection.
35. DO NOT vacuum up smoking or burning objects such as hot coals, cigarette butts, or matches.
36. DO NOT vacuum up flammable or combustible materials (e.g., oil, gasoline, or kerosene) or use: vacuum in areas where they may be present.
37. DO NOT vacuum up toxic solutions (e.g., chlorine bleach, ammonia, or drain cleaner).
38. DO NOT use in an enclosed space where vapors are present from paint, paint thinner, moth-proofing substances, flammable or other explosive or toxic materials.
39. DO NOT immerse vacuum cleaner in water or other liquids.
40. Use extra care when cleaning on stairs.

## **LITHIUM-ION BATTERY**

41. The battery is the power source for the appliance. DO NOT carry the appliance with your finger on the power button. DO NOT charge appliance with the power on.
42. Charge only with USB-C connection. Using Unapproved sources may cause risk.
43. Use appliance only with included lithium-ion battery. Use of any other battery may cause risk of injury and fire.
44. Under abusive conditions liquid may be ejected from the battery. Avoid contact with liquid, as it may cause irritation or burns. If contact occurs, flush with water. If liquid contacts eyes, seek medical help.
45. Store the appliance indoors. To maintain battery life, DO NOT use or store battery at temperatures below 32°F (0°C) or above 104°F (40°C).
46. DO NOT expose appliance to fire or temperature above 266°F (130°C) as it may cause explosion.

47. There are NO serviceable parts. To ensure safety, DO NOT attempt to repair the appliance.
48. DO NOT use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or suffocation.


## CHARGING YOUR SHARK® VACUUM

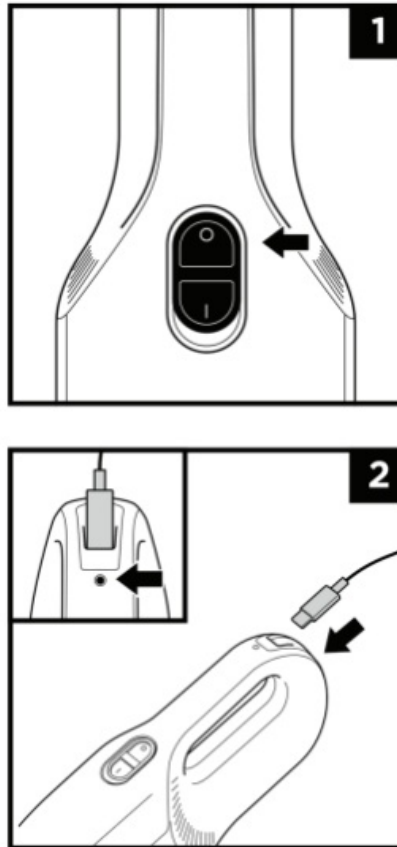

1. Make sure to switch the unit into the “O” position to power off before charging.
2. Plug the USB-C end of the charging cord into the port on the handle. Plug the USB end of the charging cord into a compatible USB outlet cube or adaptor (not included) and plug into a wall outlet.

**NOTE:** Lithium-ion battery takes approximately 6 hours to charge completely.

## USING YOUR SHARK® VACUUM

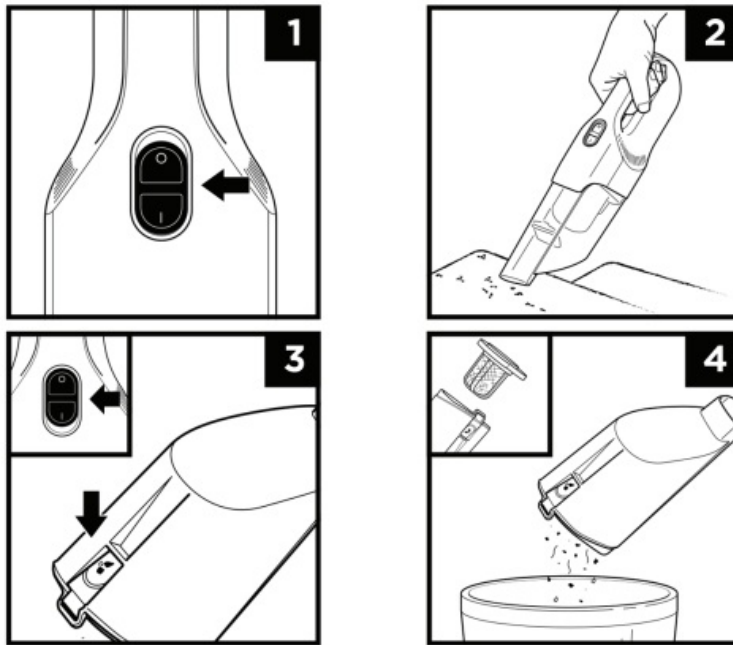 

1. Slide the switch into “I” position to power on.
2. Run the nozzle over the surface to be cleaned.
3. To empty the dust cup, first slide the switch into “0” position to power off. Then press the dust cup release button on the back of the hand vac and pull off the dust cup.
4. Remove the filter from the dust cup by pulling the tab in the center and then empty the debris into the trash.
5. Once debris is emptied, place the filter back in place and reattach the dust cup.

### **REFURBISHED PRODUCT LIMITED NINE- TY DAYS WARRANTY**

The Refurbished Product Service Center offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished This product that has been refurbished is warranted against any electronic or mechanical defects for a penod of NINE Y DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished tem, the warranty does not apply to any cosmetic appearance items such as scratch- es. Should a defect occur, the Refurbished Product Service Center wil repair or, at its option, replace de- fective unitiparts with new of rebuilt materials without charge for efther parts or labor. Replacement unitpparts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instriictions. in the owner’s manual or any product which has been opened, altered, or tampered with This warranty does not cover costs for removal and or installation of the unit for repair. Under

no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise. This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of Incidental or consequential damages, hence the above exclusion and imitations may not apply.

Refurbished Product Service Center

9043 Siempre Viva Rd Suite 110/120, San Diego CA 92154

## WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to [www.ConsumerService-Refurbish.com](http://www.ConsumerService-Refurbish.com) or call the Refurbished Product Service Center at [562-946-3531](tel:562-946-3531) to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to Refurbished Product Service Center, Attn: Customer Service Department 9043 Siempre Viva Rd Suite 110/120, San Diego CA, 92154 Your unit will be promptly repaired and returned to you We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information

(Keep for your permanent records)

NAME\_\_\_\_\_

ADDRESS:\_\_\_\_\_

CITY:\_\_\_\_\_

STATE:\_\_\_\_\_

ZIP CODE:\_\_\_\_\_

PHONE:\_\_\_\_\_

E-MAIL\_\_\_\_\_

MODEL:\_\_\_\_\_

 
SERIAL NO.\_\_\_\_\_

## ACCESSORIES



## INSERTION AND REMOVAL

1.

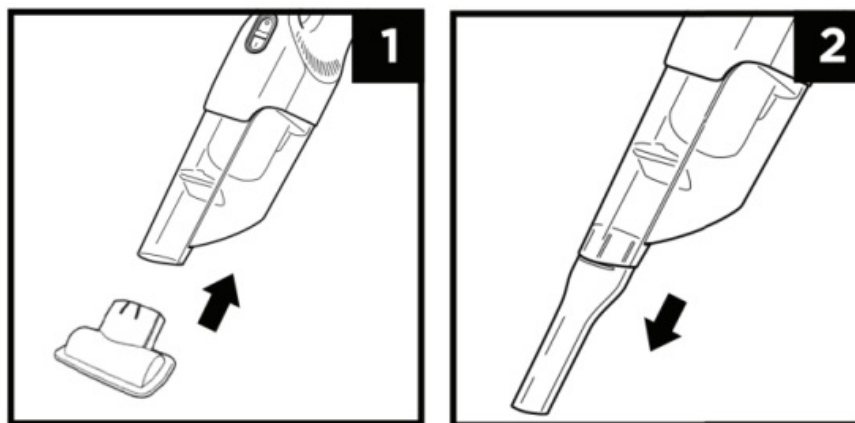

To install an accessory, align it with the nozzle, then slide it on.

2. To remove an accessory, slide it straight off the nozzle.

## TROUBLESHOOTING

Problem	Solution
The vacuum will not operate	Battery needs to be recharged. Lithium-ion battery takes approximately 6 hours to charge completely. Try using a different electrical outlet to charge.
Vacuum will not pick up or suction is weak	Dust cup is full. Empty the dust cup. The filter needs to be cleaned or replaced. Vacuum needs to be recharged.
Dust is escaping from the vacuum	Empty the dust cup. The filter may be installed incorrectly. Remove the filter, then reinstall it correctly. Check the filter for holes or punctures. The filter will need to be replaced if there is a hole or puncture. An obstruction may be blocking the dust cup lid, keeping it from closing correctly. Clear any obstructions and ensure the lid is completely closed.

## BATTERY INDICATOR

Pulsing Light	Low Battery	If the power switch is in the (I) position but the power doesn't turn on and the battery indicator light on the hand vac is pulsing, this means the battery power is too low. Slide the power switch to the (0) position and charge the battery before using the vacuum.
Pulsing Light (while plugged in)	Vacuum Charging	To charge the vacuum, connect charging cord to unit and plug into wall outlet. The light will turn off when the unit is fully charged.
No Light	Fully Charged	When the vacuum is fully charged, the indicator light will turn off. (It takes approximately 6 hours for a full charge).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
4. Consult the dealer or an experienced radio/TV technician for help.

This Device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

 
1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may

cause undesired operation.


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

## MAINTENANCE


### CLEANING THE DUST CUP

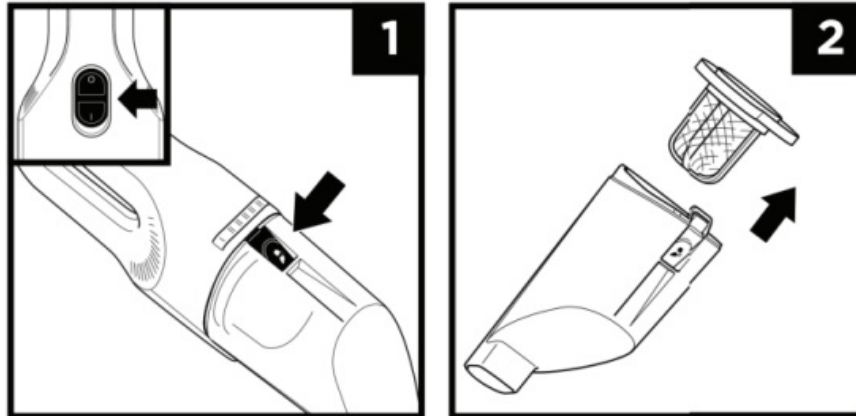

 1. Slide the switch to the “O” position to power off. Press the dust cup release button and pull out the dust cup.
2. Carefully take the filter frame out of the dust cup and remove the filter.

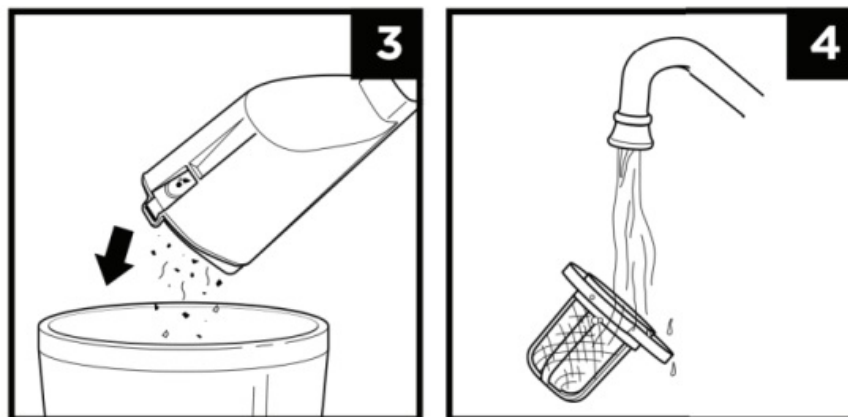

 3. Empty the dust cup into the trash.
4. Hand-rinse the filter in cold water and let it air-dry for at least 24 hours before reinstalling. Air-dry only. DO NOT use a hair dryer or clothes dryer.

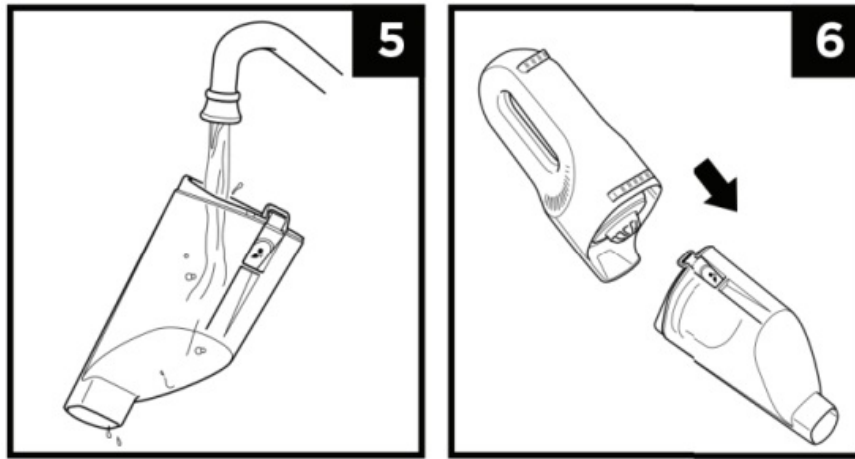

To clean the interior of the dust cup, rinse it with water. Place it on its side with the lid open to air-dry for at least 24-48 hours before reinstalling.

5. When the filter is dry, reinstall into the dust cup, then reattach the dust cup to the main body.

DO NOT wash any parts or accessories in a dishwasher.

**NOTE:** For best results, replace the filter every 6 to 9 months.

The images shown in this manual are for illustrative purposes only and may be subject to change.

## BATTERY REMOVAL AND DISPOSAL

This product uses a rechargeable and reusable lithium-ion battery. When the battery no longer holds a charge, it should be removed from the vacuum and recycled. DO NOT incinerate or compost the battery.

When your lithium-ion battery needs to be replaced, dispose of it or recycle it in accordance with local ordinances or regulations. In some areas, it is illegal to place spent lithium-ion batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.

For more information on battery removal for disposal, please visit [sharkclean.com/batterysupport](http://sharkclean.com/batterysupport)



LITHIUM-ION BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY



The RBRC™ (Rechargeable Battery Recycling Corporation) seal on the lithium-ion battery indicates that the costs to recycle the battery at the end of its useful life have

already been paid by SharkNinja. In some areas, it is illegal to place spent lithium-ion batteries in the trash or municipal solid waste stream and the RBRC program provides an environmentally conscious alternative.

RBRC, in cooperation with SharkNinja and other battery users, has established programs in the United States and Canada to facilitate the collection of spent lithium-ion batteries. Help protect our environment and conserve natural resources by returning the spent lithium-ion battery to an authorized SharkNinja service center or to your local retailer for recycling. You may also contact your local recycling center for information on where to drop off the spent battery, or call 1-[800-708-7398](tel:800-708-7398),



### **READ OWNER'S MANUAL**

SHARK is a registered trademark of SharkNinja Operating LLC.

PETEXTRACT and SHARK CYCLONE are trademarks of SharkNinja Operating LLC.

RBRC is a trademark of Rechargeable Battery Recycling Corporation.

This product may be covered by one or more U.S. patents. See [sharkninja.com/patents](https://sharkninja.com/patents) for more information.

Illustrations may differ from actual product.

## **TECHNICAL SPECIFICATIONS**

CH700 Series: 7.2V

Charging Adapter part number:

XCHRGCH700

**NOTE:** In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process.

For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

**PRINTED IN MEXICO**


**Elbrd: J.M. / SC: 20-03-2025**

**OBPN: N/A / SHDML: CH701\_E2GB**

# 814100191C



## Documents / Resources

	<p><a href="#">Shark CH701 Series Handheld Vacuum with Hyper Velocity [pdf]</a> Owner's Manual</p> <p>CH701_E2GB, 814100191C, CH701 Series Handheld Vacuum with Hyper Velocity, CH701 Series, Handheld Vacuum with Hyper Velocity, Vacuum with Hyper Velocity, Hyper Velocity</p>
---	---

## References

- [User Manual](#)

■ Shark

◆ 814100191C, CH701 Series, CH701 Series Handheld Vacuum with Hyper Velocity, CH701\_E2GB, Handheld Vacuum with Hyper Velocity, Hyper Velocity, Shark, Vacuum with Hyper Velocity

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

---

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.