



Contents [[hide](#)]

- [1 SHARK Sena Mesh Wave Intercom System](#)
- [2 Product Usage Instructions](#)
- [3 BEFORE GETTING STARTED](#)
- [4 ABOUT THE SHARK MW](#)
- [5 Package Contents](#)
- [6 BASIC OPERATION](#)
- [7 PAIRING WITH BLUETOOTH DEVICES](#)
- [8 USING WITH A SMARTPHONE](#)
- [9 MESH INTERCOM](#)
- [10 WAVE INTERCOM](#)
- [11 AUDIO MULTITASKING](#)
- [12 FIRMWARE UPDATE](#)
- [13 TROUBLESHOOTING](#)
- [14 FAQ](#)
- [15 Documents / Resources](#)
 - [15.1 References](#)




SHARK Sena Mesh Wave Intercom System




Product Usage Instructions


- SHARK MW is a versatile device equipped with various buttons and connectors for seamless operation.
- It comes with a range of accessories for enhanced functionality.
- Follow the specified button taps and presses to perform various functions like power on/off, volume adjustment, and configuration menu access.
- Voice prompts and LED indicators provide feedback on actions.
- Pair the SHARK MW with Bluetooth devices for the first time to establish connections.
- The device supports pairing with multiple devices, but allows only one additional device for simultaneous connection.



























QUICK REFERENCE

 : (+) button

 : Mesh Intercom button

 : (-) button

 : Center button

Type	Operation	Button	Duration
Basic operations	Power on	 & 	Press for 1 second
	Power off	 & 	Single tap
	Volume up/down	 or 	Single tap
Phone	Phone pairing		Press for 5 seconds
	Answer phone call		Single tap
	End phone call		Single tap
			Press for 2 seconds
	Reject phone call		Press for 2 seconds
	Activate voice assistant		Press for 3 seconds
	Speed dial		Press for 3 seconds
	Play/Pause music		Press for 1 second
	Track forward/back	 or 	Press for 1 second
Mesh Intercom™	Mesh Intercom on/off		Single tap
	Mute/unmute mic		Press for 1 second
	Channel selection		Double tap
	Mesh grouping		Press for 5 seconds
	Mesh Reach-Out request		Triple tap
	Reset mesh		Press for 8 seconds
Wave Intercom™	Wave Intercom on		Double tap
	Wave Intercom off		Single tap
	Switch to Mesh Intercom		Single tap
Configuration menu			Press for 10 seconds

BEFORE GETTING STARTED

SHARK Helmets

- Download the SHARK Helmets app from the Google Play Store or the App Store.



WAVE Intercom App

- Download the WAVE Intercom app from the Google Play Store or the App Store.

 


- For detailed information on the Wave Intercom, please refer to the Wave Intercom User Guide at sena.com.

SHARK Helmets Device Manager

- Download the SHARK Helmets Device Manager from www.sharkhelmets.com.

CLICK ANY SECTION TO BEGIN

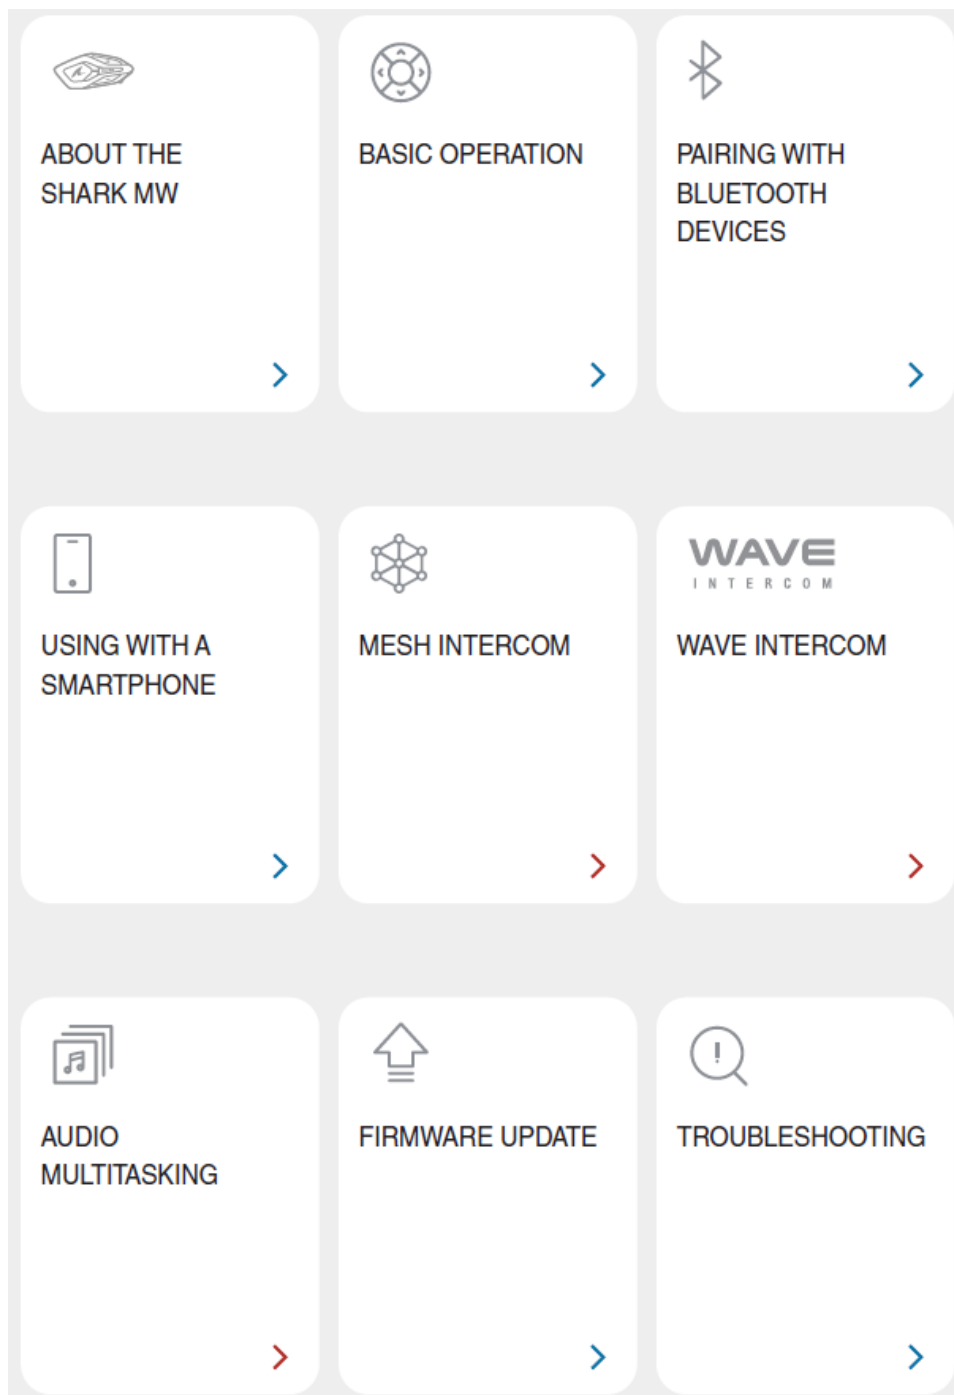


ABOUT THE SHARK MW

 Key Features




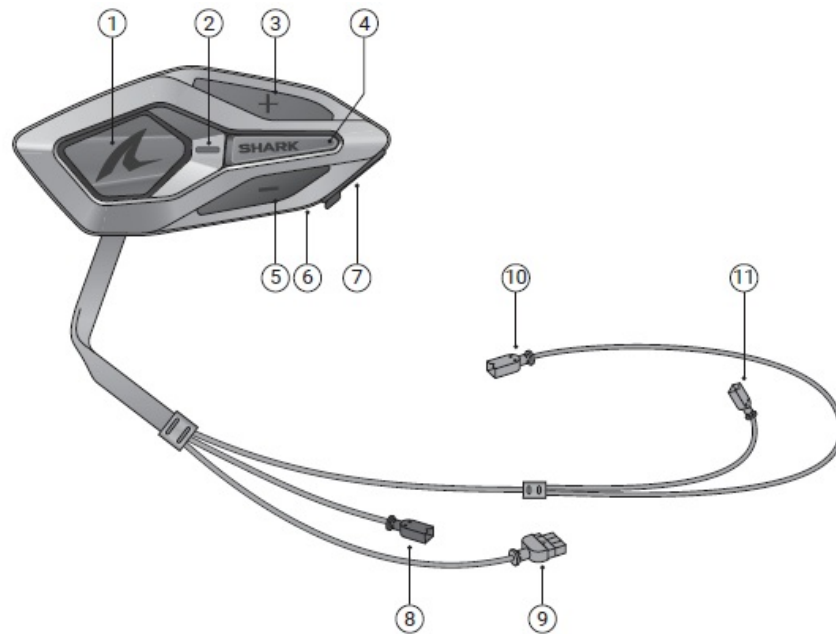



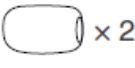




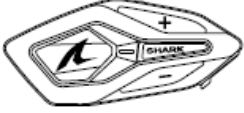


- Mesh Intercom 3.0 – delivers improved sound quality, a more robust connection, and extended talk time
- Dual version Mesh – Mesh 2.0 for backward compatibility
- Wave Intercom Compatible
- Audio Multitasking
- SHARK fit design
- Bluetooth® version 5.2

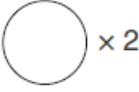- Over-the-Air (OTA) firmware update





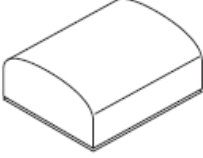

1. Center button
2. Status LED
3. (+) button
4. Mesh Intercom button
5. (-) button
6. Charging LED
7. USB-C charging port
8. Wired microphone connector
9. Battery connector
10. Speaker (L) connector
11. Speaker (R) connector


Package Contents

 <p>SHARK MW</p>	 <p>Double sided adhesive tape</p>	 <p>Speakers</p>
 <p>Velcro pads for speakers</p>	 <p>Wired-boom microphone</p>	 <p>Wired microphone</p>
 <p>Extension cable for wired-boom microphone</p>	 <p>Microphone sponges</p>	 <p>Velcro pad for wired-boom microphone</p>
 <p>Wired-boom microphone holder</p>	 <p>Velcro pad for wired-boom microphone holder</p>	 <p>Battery</p>
 <p>Adhesive foam for battery</p>	 <p>USB-C charging cable</p>	 <p>Allen Wrench</p>

BASIC OPERATION

	<p>Tap</p> <p>Tap the button the specified number of times</p>
	<p>Press and Hold</p> <p>Press and hold the button for the specified amount of time</p>
	<p>Voice Prompt</p>
	<p>LED</p>

 
Charging

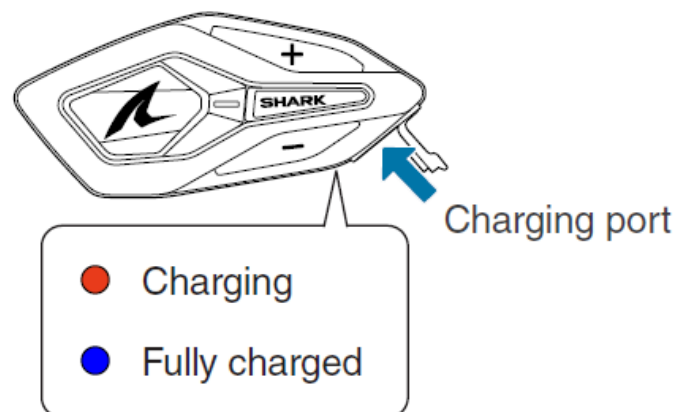


It takes 2.5 hours to fully charge.

- Any third-party USB charger can be used, as long as it is approved by the FCC, CE, IC, or other locally recognised regulatory agencies.
- Using a unapproved charger may cause fire, explosion, leakage, and other hazards, potentially reducing the battery's lifespan or performance.

 Power On

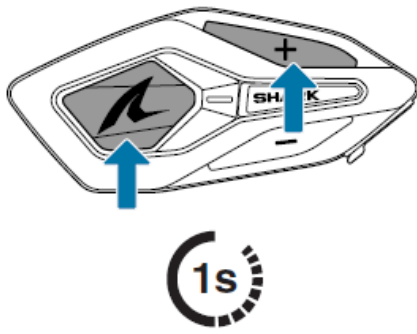

Power Off

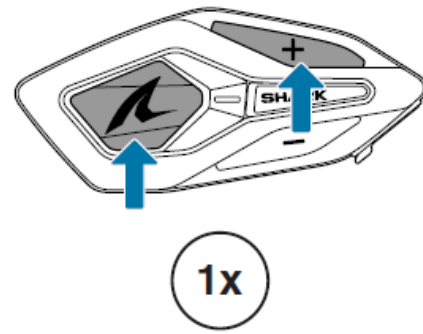 


Volume




Configuration

 Enter Configuration

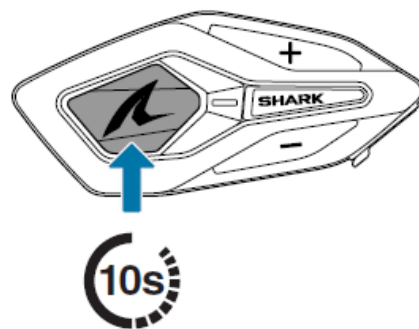


🔊 "Configuration menu"

 Navigate

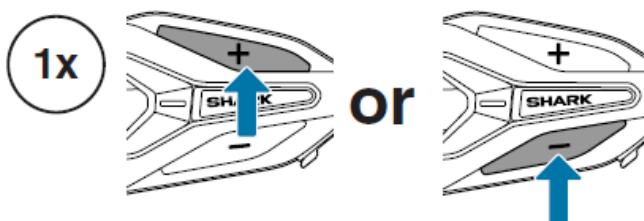

Confirm

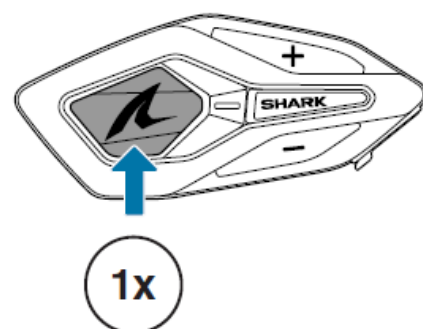 


PAIRING WITH BLUETOOTH DEVICES


- When using the SHARK MW with other Bluetooth devices for the first time, they need to be paired.
- The SHARK MW can pair with multiple devices, including two mobile phones and one GPS.
- However, it supports only one additional device, alongside a mobile phone, for simultaneous connection.

Phone Pairing

 1.

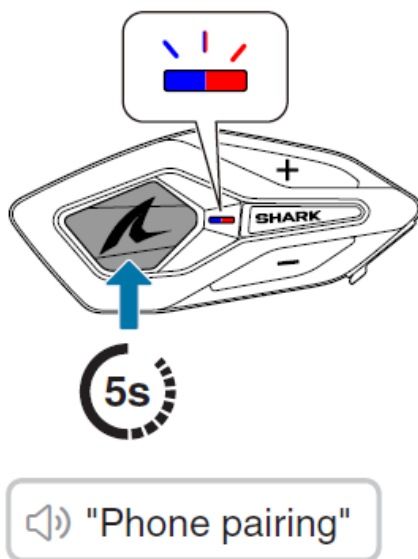

 
2.

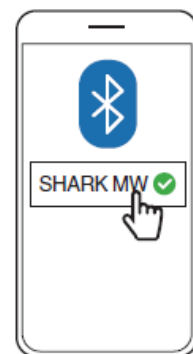

- When you turn on the SHARK MW for the first time or reboot it after a factory reset, the SHARK MW will automatically enter phone pairing mode.
- To cancel phone pairing, press any button.


Second Mobile Phone Pairing

 1.

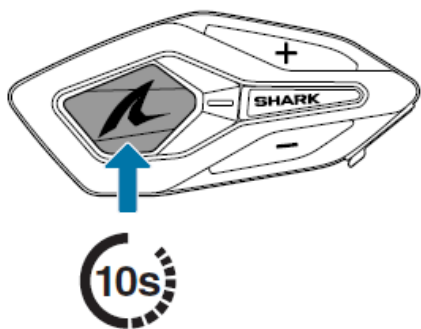


🔊 "Configuration menu"

 2.

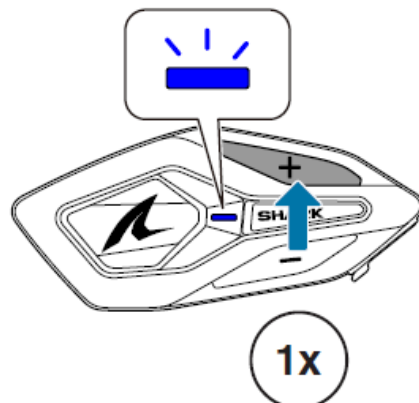


🔊 "Second mobile phone pairing"

 3.

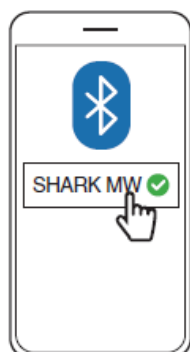


GPS Pairing

 1.

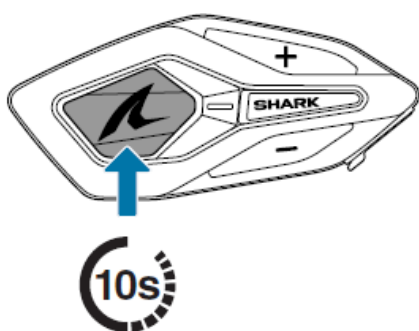


🔊 "Configuration menu"

 2.

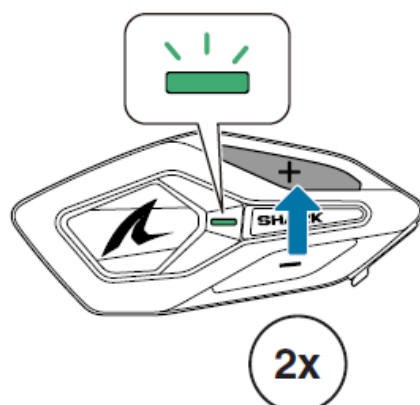

🔊 "GPS pairing"

 
3.

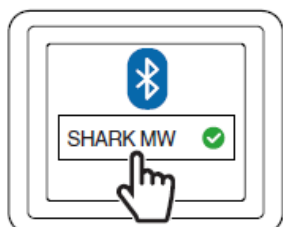


USING WITH A SMARTPHONE

Making and Answering Calls

 
■ Answer a Call

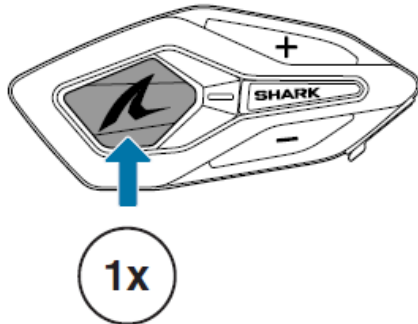


■ End a Call

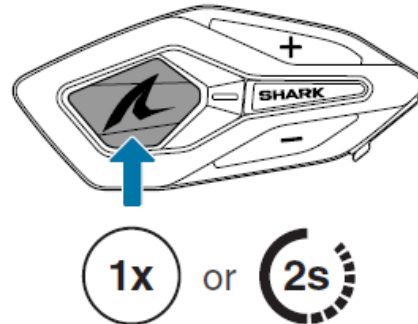 

■ Reject a Call

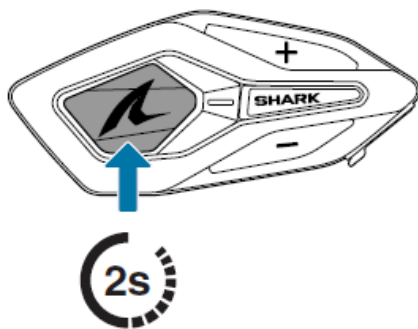 

■ Activate Voice Assistant

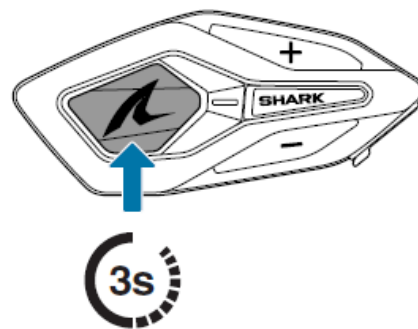 


Speed Dial

Assign Speed Dial Presets

- Speed dial presets can be assigned using the SHARK Helmets app.


Use Speed Dial Presets

 1. Enter the speed dial menu.

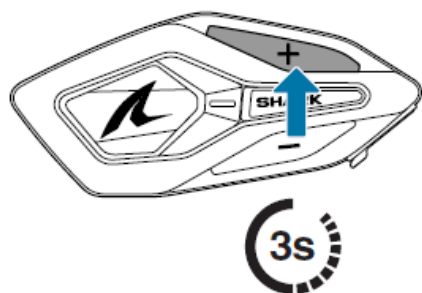


🔊 "Speed dial"

 1x

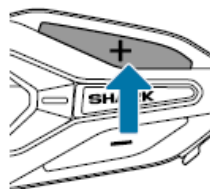


or

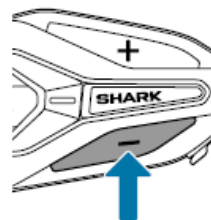 

- ① Last number redial
- ② Speed dial (1→2→3)
- ③ Cancel

 
2. Navigate forward or backwards through speed dial preset.
3. Tap the centre button to confirm.

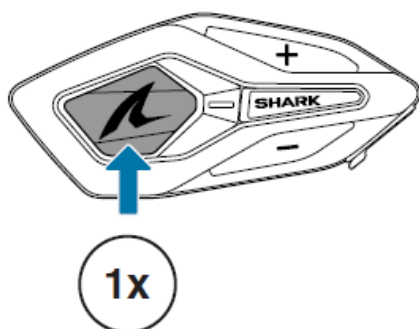

🔊 "Speed dial(#)"


Music

 ■ Play/Pause Music

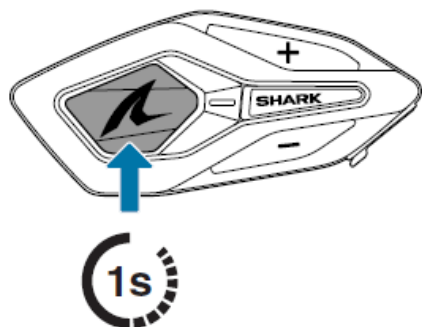


■ Track Forward/Backward

 1s

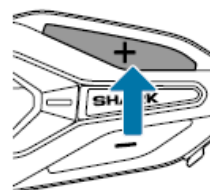

or

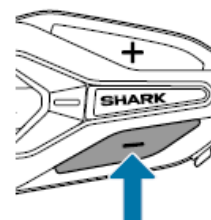 


MESH INTERCOM


The SHARK MW provides two Mesh Intercom modes:

- Open Mesh™ for open group intercom conversations.
- Group Mesh™ for private group intercom conversations.

 Open Mesh

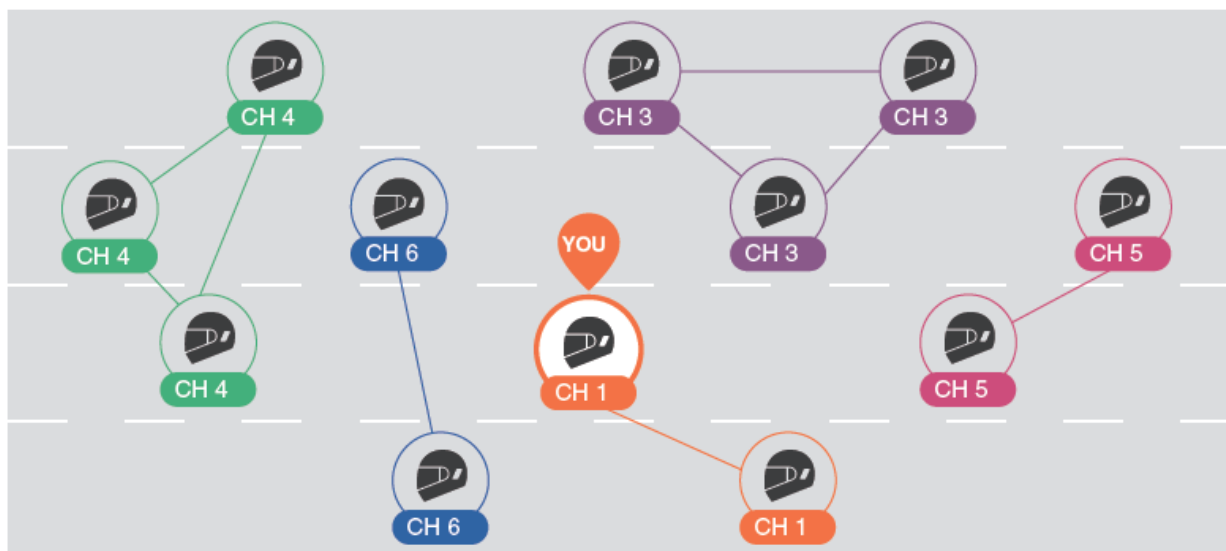

Group Mesh

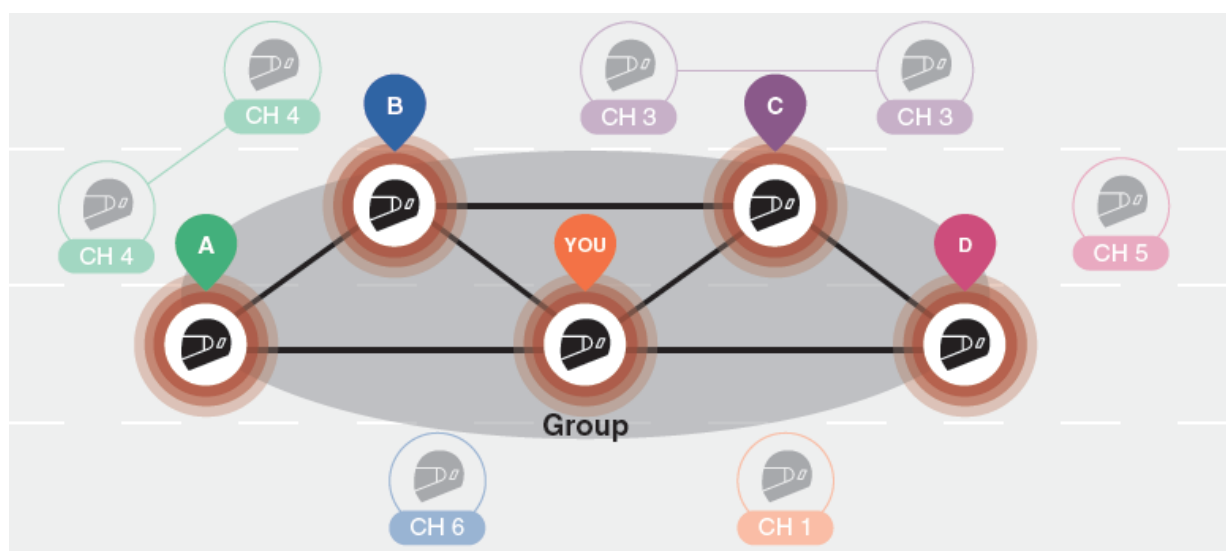 

Mesh Version Switch

 
Switch to Mesh 2.0 for Backwards Compatibility

- Mesh 3.0 is the latest Mesh Intercom technology, but to communicate with legacy products using Mesh 2.0, please switch to Mesh 2.0 using the SHARK Helmets app.


Open Mesh

- You can freely communicate with virtually unlimited users in each of the 6 available channels. The default Mesh Intercom channel is 1.

Mesh Intercom On/Off

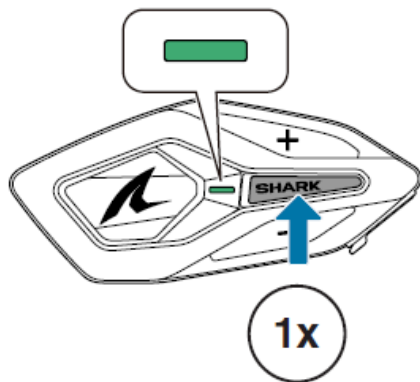

 
On: "Mesh intercom on,
Open Mesh, channel 1"

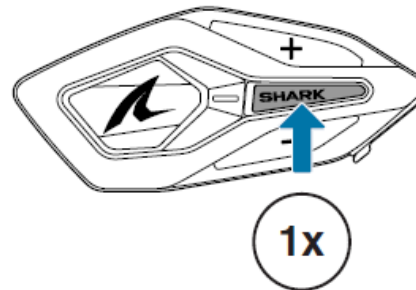

Off: "Mesh intercom off"

Mute/Unmute Mic

 - Press the Mesh Intercom button for 1 second to mute/unmute the microphone during Mesh Intercom communication.

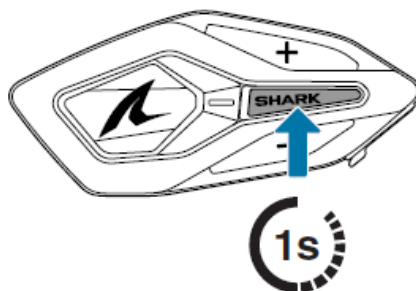


Mute: "Mic off"


Unmute: "Mic on"

Channel Selection

 - Enter the channel setting.

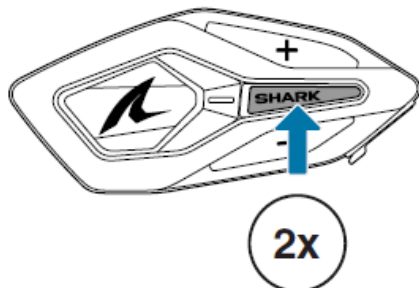


"Channel setting, 1"

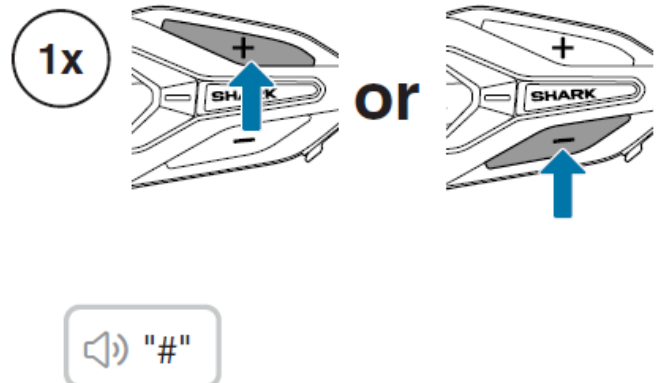 

"#"

 - Navigate between channels.
- Confirm and save the channel.

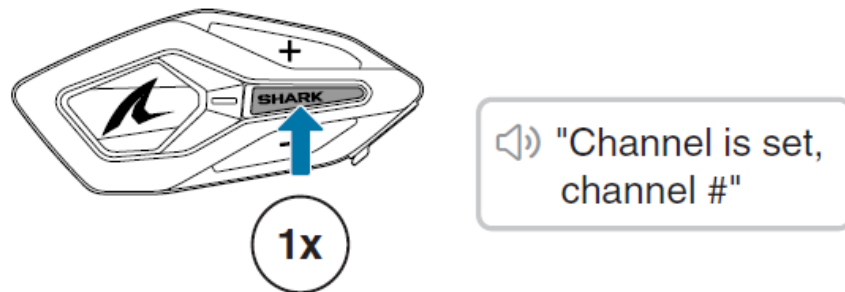


- The channel will be automatically saved if no buttons are pressed for 10 seconds on a specific channel.
- The channel will be saved even if the SHARK MW is turned off.

Group Mesh

- By using group mesh, a private conversation group can be created for up to 24 participants.

 Create a Group Mesh

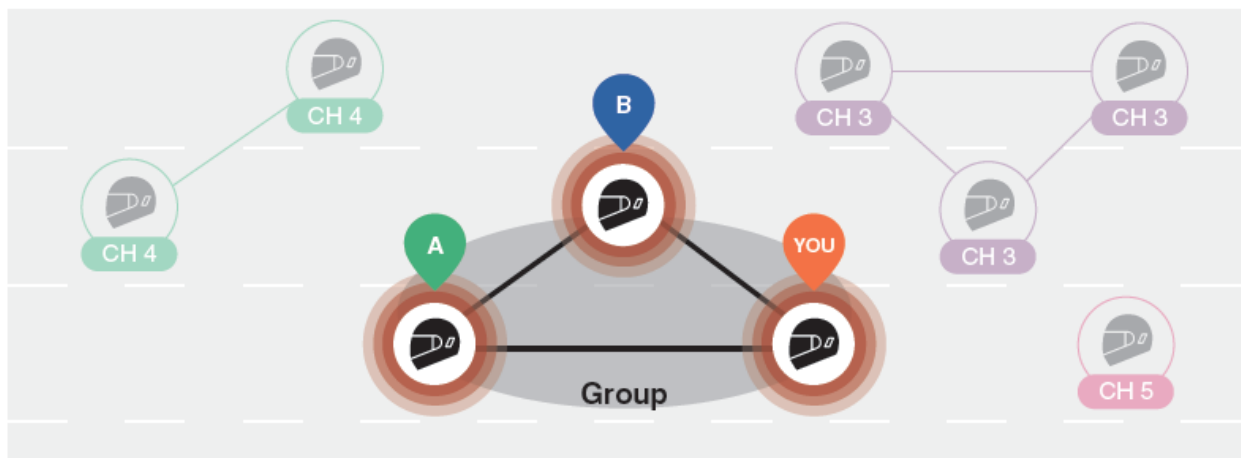

1. Users (You, A, and B) enter the mesh grouping by pressing the Mesh Intercom button for 5 seconds while staying in the open mesh. They don't need to be on the same open mesh channel to create a group mesh together.

 


2. When mesh grouping is completed, it automatically switches from open

mesh to group mesh.

 "Group Mesh"


- If you want to cancel mesh grouping, tap the Mesh Intercom button.

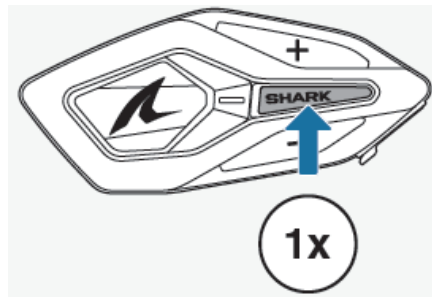

- If the mesh grouping is not successfully completed within 30 seconds, users will hear a voice prompt saying, "Grouping failed."

Join an Existing Group Mesh

 - While you are in a group mesh, you can invite other users in open mesh to join the group.

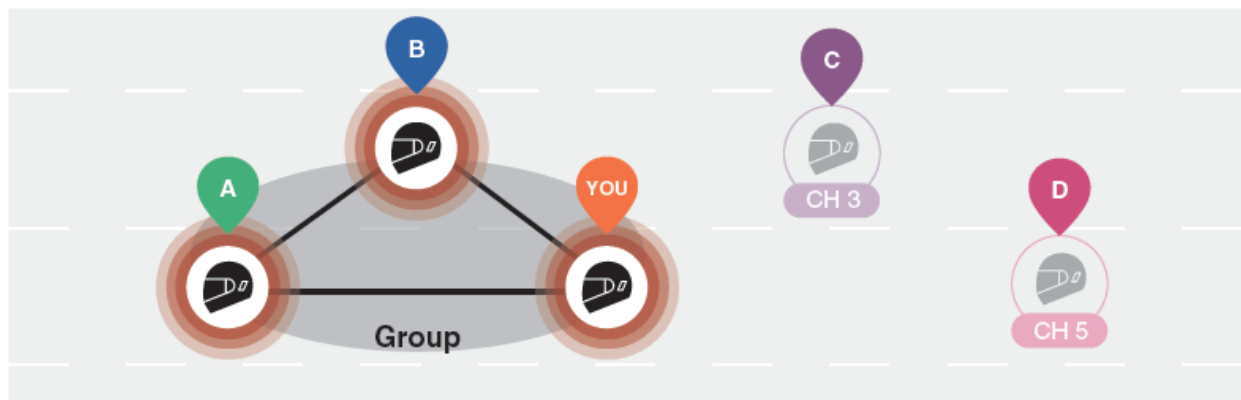


You are already in group mesh with A and B, and the other users, C and D, are in open mesh.

1. You and the other users, C and D, enter mesh grouping by pressing the Mesh Intercom button for 5 seconds.



 
2. When mesh grouping is completed, the other users, C and D, automatically join the group mesh while leaving the open mesh.

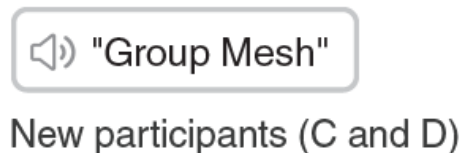

- If the mesh grouping is not successfully completed within 30 seconds, the current user (You) will hear a low tone double beep and the new users (C and D) will hear a voice prompt saying, "Grouping failed."

Toggle Open/Group Mesh

 - You can toggle between open mesh and group mesh without resetting the mesh.

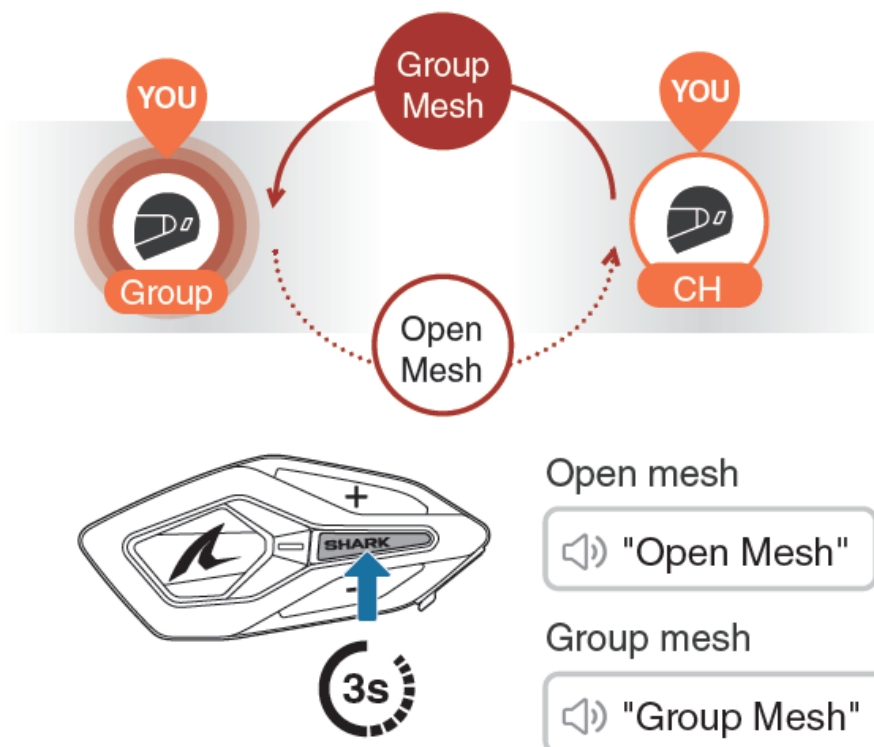

- If you have never participated in group mesh, you cannot toggle between

 
open mesh and group mesh. You will hear a voice prompt saying, "No group available."


Mesh Reach-Out Request


You (caller) can send a Mesh Reach-Out request to turn on Mesh Intercom to nearby* friends who have it turned off.

1. If you want to send or receive a Mesh Reach-Out request, you need to enable it in the SHARKHelmets app.
2. You can send a Mesh Reach-Out request using the Mesh Intercom button or the SHARKHelmets app.

Caller

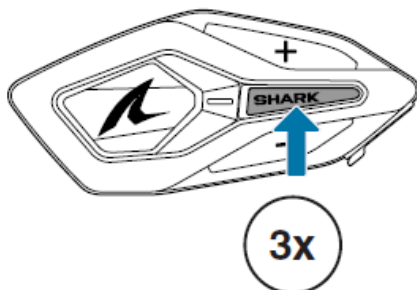

 **Caller:** "Mesh reach-out request"

 
 **Nearby Friends:** "Mesh intercom requested"


3. Friends who receive the Mesh Reach-Out request need to manually turn on their Mesh Intercom.

Up to 330 ft in open terrain

Reset Mesh

- If the SHARK MW resets the mesh while in open mesh or group mesh, it will automatically return to open mesh, channel 1.

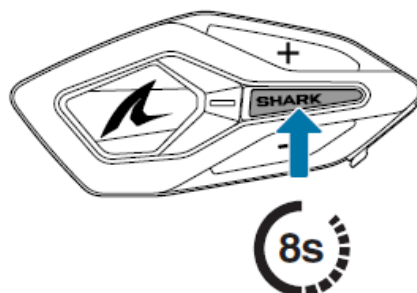

 "Reset Mesh"

 
WAVE INTERCOM

- Wave Intercom enables open communication using cellular data.
- For detailed information, please refer to the Wave Intercom User Guide on sena.com.

Wave Intercom On/Off

Open the WAVE Intercom app, then double-tap the Mesh Intercom button to join Wave Intercom.


- You must open the app before starting Wave Intercom.

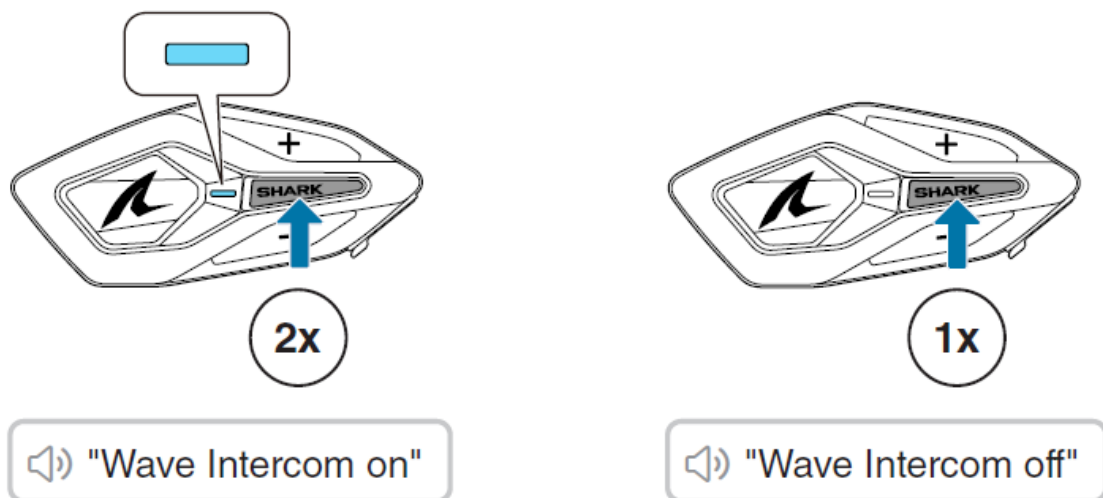


- When you start Wave Intercom, you will automatically connect with users in the Wave Zone.
- The Wave Zone covers a 1-mile radius in North America and a 1.6-km radius in Europe.
- To end Wave Intercom, single-tap the Mesh Intercom button.

Switch between Wave Intercom and Mesh Intercom

 - You can easily switch between Mesh Intercom and Wave Intercom with a single tap on the center button.

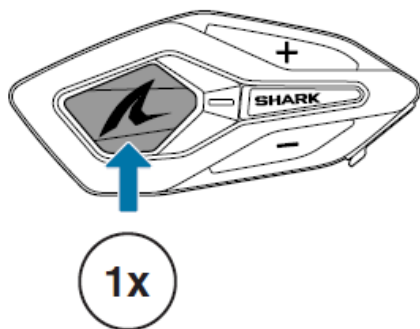

 **Wave to Mesh:** "Wave Intercom off. Mesh Intercom on."

 **Mesh to Wave:** "Mesh Intercom off. Wave Intercom on."

AUDIO MULTITASKING

- Audio multitasking on the SHARK MW allows you to listen to music while having a Mesh Intercom conversation.
- For more details, go to Device Settings on the SHARKHelmets app to configure the settings.

Intercom-Audio Overlay Sensitivity

- The music will be lowered to play in the background if you talk over the intercom while the overlaid audio is playing. You can adjust the intercom sensitivity to activate this background audio mode. Level 1 has the lowest sensitivity and level 5 has the highest sensitivity.
- If your voice is not louder than the sensitivity of the selected level, the overlaid audio will not be lowered.

Audio Overlay Volume Management

- The music overlaid audio reduces in volume whenever there is an ongoing intercom conversation.
- If audio overlay volume management is enabled, the volume level of the overlaid audio will not be reduced during an intercom conversation.

FIRMWARE UPDATE

Over-the-Air (OTA) Update

- You can update the firmware via Over-the-Air (OTA) directly from the settings

in the SHARKHelmets app.

 
SHARK Helmets Device Manager

- You can upgrade the firmware using the SHARK Helmets Device Manager.

TROUBLESHOOTING

Factory Reset


- To restore the SHARK MW to its factory default settings, simply use the factory reset feature.

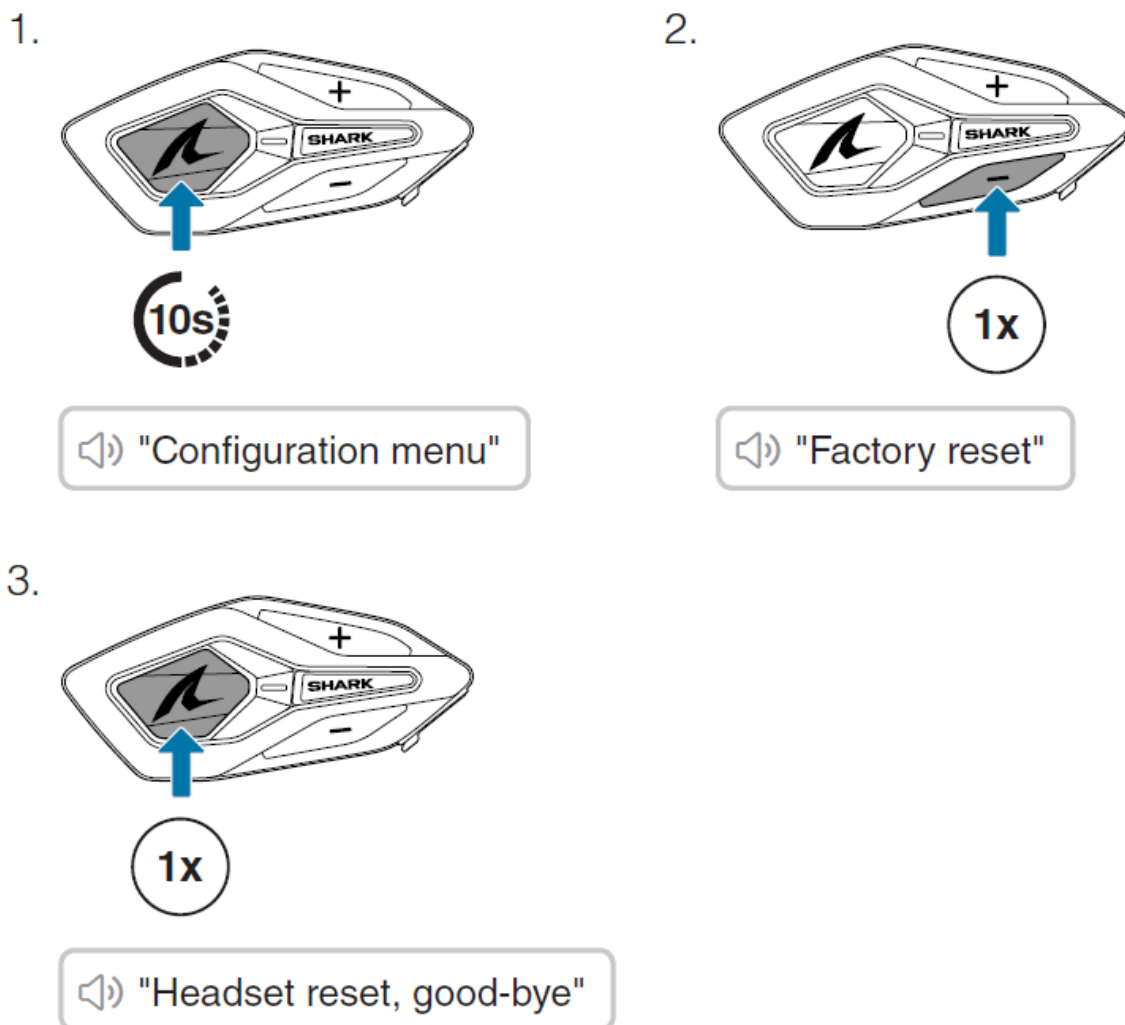

Fault Reset

- If the SHARK MW is on but not responding, you can perform a fault reset to restore normal functionality.

 - Ensure the USB-C charging cable is disconnected, then press the center button and (+) button simultaneously for 8 seconds.

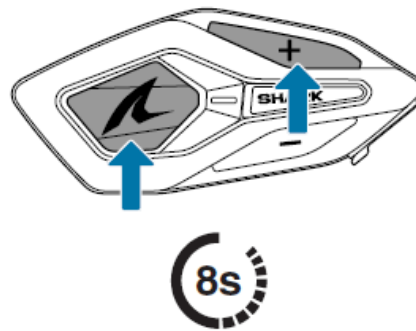

All settings will remain unchanged.

FAQ

How do I power on the SHARK MW?

To power on the SHARK MW, press the centre button for 1 second.


How long does it take to fully charge the SHARK MW?

The SHARK MW takes approximately 2.5 hours to fully charge.

Can I pair multiple mobile phones with the SHARK MW simultaneously?

The SHARK MW can pair with two mobile phones and one GPS device simultaneously. However, it supports only one additional device alongside a mobile phone for simultaneous connection.

Documents / Resources

 <p>USER GUIDE #102-000-00000-1.1.1</p> <p>SHARK Sena Mesh</p> <p>SHARK</p>	<p>SHARK Sena Mesh Wave Intercom System [pdf] User Guide</p> <p>Sena Mesh Wave Intercom System, Mesh Wave Intercom System, Wave Intercom System, Intercom System</p>
--	--

References

- [User Manual](#)

Shark

Intercom System, Mesh Wave Intercom System, Sena Mesh Wave Intercom System, Shark, Wave Intercom System

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

[Post Comment](#)

Search:

[Search](#)

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.