

SHARP CP-LSBP1 High Performance Portable Speaker User Manual

Home » Sharp » SHARP CP-LSBP1 High Performance Portable Speaker User Manual

Contents [hide

- 1 SHARP CP-LSBP1 High Performance Portable Speaker
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 Important safety instructions
- **5 Precautions**
 - 5.1 Service and Repair
- 6 Special instructions for handling the Lithium-ion battery pack
- 7 Disposal of equipment and batteries
- 8 CE and UKCA statement
- 9 Box contents
- 10 Connections and Controls
- 11 Initial set up
- 12 Good charging habits
- 13 Power bank operation
- 14 Charger
- 15 Specifications
 - 15.1 Charger
- 16 Documents / Resources
 - 16.1 References
- 17 Related Posts



SHARP CP-LSBP1 High Performance Portable Speaker



Before using your product, read all safety instructions. For instructions in the languages listed below, download the online Quick Start Guide: www.sharpconsumer.com/audio/CPLSBP1/



Product Information

High Performance Portable Speaker

The High Performance Portable Speaker, model CP-LSBP1, is a class II equipment with a double insulation system that does not require a safety connection to electrical earth (ground). It operates on alternating current (AC) with a rated voltage of 100-240V 50/60Hz power outlet. The energy efficiency level of the product is VI. The polarity of the DC power connector is indicated in the user manual.

The product is available in several languages including English, German, Spanish, French, Italian, Dutch, Polish, and Russian. The term SumoBox and the SumoBox logo device are registered trademarks of Sharp Consumer Electronics Poland sp. z o.o.

Product Usage Instructions

- Before using the product, read all safety instructions and heed all warnings in the user manual.
- The product is for indoor use only.
- Ensure that the power plug is always easily accessible and do not attach extension cables.
- Place the product on a flat, stable surface with no part of the main unit overhanging an edge.
- Avoid exposing the product to direct sunlight or any other apparatus that produces heat or flames.
- Do not expose the charger to rain, water, or moisture and do not place objects filled with liquids on or near the charger.
- Disconnect all cables and connectors of the product before a storm or lightning strikes.
- Clean the product with a soft and clean cloth only. Do not use chemicals or detergents.
- Supervise children when using the product to ensure they do not play with it.
- If the power cord is damaged, do not operate the unit and consult your dealer. Do not stretch or bend the power cord or place heavy objects on it.
- Dispose of batteries according to European Directive 2013/56/EU and do not dispose of them with normal household waste. The symbol Cd, Hg, and Pb underneath the wheelie bin symbol shows whether the battery contains cadmium (Cd), mercury (Hg), or lead (Pb).

If you encounter any issues with the product, refer to the user manual for service and repair instructions. The product is not to be opened as it may result in electric shock.

Trademarks

SUMOBOX

The term "SumoBox" and the SumoBox logo device are registered trademarks of Sharp Consumer Electronics Poland sp. z o.o.

Important safety instructions

Please follow all safety instructions and heed all warnings. Keep this manual for future reference.

- Refers to class II equipment. This symbol indicates that this product has a double insulation system and does not require a safety connection to electrical earth (ground).
- Refers to alternating current (AC). This symbol indicates that the rated voltage marked with the symbol is AC voltage.
 - Refers to direct current (DC). This symbol indicates that the rated voltage marked with the symbol is DC voltage.
- ♦ For indoor use only
 - · Energy efficiency marking with level VI
- The polarity of DC power connector

Precautions

Damage

Please inspect the unit for damage after unpacking. If it is damaged in any way do not operate the unit and

consult your dealer.

Power connection and accessibility

Do not handle the power cord with wet hands as it may cause an electric shock. If the power plug does not fit
into your outlet, do not force the plug into an electrical socket. Switch off the unit completely before unplugging.
Disconnect the power cord if it is not used for a long time. Ensure that the power plug is always easily
accessible. Do not attach extension cables.

Poer source

• Ensure that the unit is plugged into an AC 100-240V 50/60Hz power outlet. Using higher voltage may cause the unit to malfunction or even catch fire.

Power cord protection

• Do not damage the power cord, do not place any heavy objects on it, do not stretch it or bend it. Damage to the power cord can result in fire or electric shock. If the power cord is damaged, it must be replaced.

Child safety

• Always follow basic safety precautions when using this product, especially when children are present. Children should be supervised to ensure that they do not play with the product.

Location

• When in use this product should be placed on a flat, stable surface with no part of the main unit overhanging an edge.

Insertion hazards

• Never let anyone push anything into holes, slots or any other openings in the product's casing as this could result in an electric shock.

Heat and operating temperature

• Do not install near any heat sources such as radiators, stoves or other apparatus that produce heat. Avoid exposure to direct sunlight.

Naked flames

• To prevent the risk of fire, keep candles or open flames away from this product.

Water, moisture and liquid entry

• To prevent the risk of fire or electric shock, do not expose this charger to rain, water or moisture. Do not place objects filled with liquids on or near this charger.

Storms and lightning

- Storms are dangerous for all electric products.
- If the power is struck by lightning, the product might get damaged, even if it is turned off. You should disconnect all the cables and connectors of the product before a storm.

Maintenance

- Unplug the power cable from the power source before cleaning the product. Use a soft and clean cloth to clean the outside of the unit.
- · Never clean it with chemicals or detergent.

Service and Repair

CAUTION

- 1. RISK OF ELECTRIC SHOCK
- 2. DO NOT OPEN
- This product does not contain any parts that are serviceable by the user. Exposing the internal parts inside the
 device may endanger your life. In case of a fault, contact the manufacturer or authorised service department.
 The manufacturers guarantee does not extend to faults caused by repairs carried out by unauthorised third
 parties.

Power Adapter

- If the unit will not be used for a period of time it it recommended to switch the unit off and remove the AC power plug from the mains outlet.
- Only use the supplied mains adaptor as failure to do this may result in a safety risk and/or damage to the unit.

Special instructions for handling the Lithium-ion battery pack

- Follow instructions carefully. This will reduce the risk of explosion, electric shock and possibly serious injury or death
- Only use approved Sharp power adapter to charge battery pack. Use a power source with the voltage specified
 on the nameplate of the charger.
- The charger and battery pack are specifically designed to work together.
- Do not operate the charger with a damaged cord or plug.
- Do not place the battery pack near fire or heat.
- Exposure to fire or temperature above 60°C may cause the battery pack to explode.
- Do not charge the battery pack in a damp or wet location.

- Do not charge in the presence of flammable liquids or gases.
- Ensure the battery pack is never immersed into water.
- Do not charge in an area of extreme heat (above 40°C) or cold (below 10°C).
- It will work best at normal room temperature.
- Do not crush, drop or damage the battery pack.
- Do not use a battery pack or charger that has been dropped or received a sharp blow.
- Damage to the battery pack may cause the battery pack to explode. Properly dispose of the battery pack immediately by following instructions on how to dispose of battery pack or contact service centre for advice.
 Do not open, modify or attempt to repair a battery pack.
- The battery may give off fumes if it becomes damaged or is used incorrectly.
- Ensure the area is well ventilated and seek medical attention should you experience any adverse effects.
- The battery may leak liquid if it becomes damaged or is used incorrectly.
- If you come into contact with any liquid from the battery accidentally, rinse off immediately with mild soap and water. If the liquid comes into contact with your eyes, rinse with water and seek medical attention.
- Keep battery pack away from small metal objects to avoid shortening battery terminals.

Disposal of equipment and batteries

This product does not contain any parts that are serviceable by the user. Electronic products and batteries should not be mixed with general household waste. Household users should contact either the retailer where they purchased this product, or their local government office for details of where and how they can take these items for environmentally safe recycling. The batteries should be removed by an authorized Sharp service centre and disposed according to local regulations. Do not dispose as household waste or in a fire as they may explode.

This symbol means that the product contains batteries covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste. Cd, Hg and Pb underneath the wheelie bin symbol shows whether the battery contains, cadmium (Cd), mercury (Hg) or lead (Pb).



This symbol on a product means that the product is covered by European Directive 2012/19/EU and must not be disposed of or dumped with your other household waste.

• These symbols on the products, packaging and/ or accompanying documents mean that used electrical and electronic products should not be mixed with general household waste.


CE and UKCA statement

- Hereby, Sharp Consumer Electronics Poland sp. z o.o. declares that this audio device is in compliance with the
 essential requirements and other relevant provisions of RED Directive 2014/53/EU and UK Radio Equipment
 Regulations 2017.
- The full CE text and UKCA declaration of conformity are available at sharpconsumer.eu, enter the download section of your model and choose "Declaration of Conformity".

Box contents


- CP-LSBP1 battery pack
- Charger
- 2 pin (type C) plug adapter
- 3 pin (type G) plug adapter
- User documentation


Connections and Controls

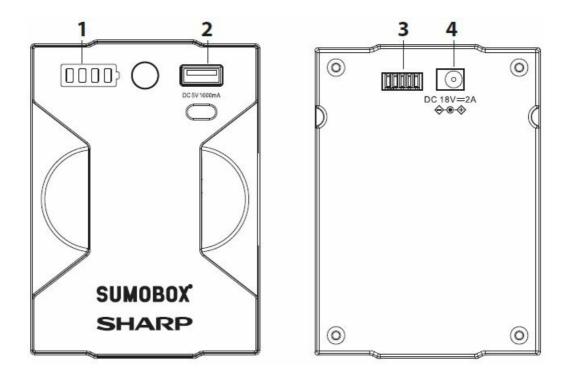

- 1. Battery Status LED: Press the button to see the battery status.
- 2. USB Charging Port (5V 1000mA): Allows mobile devices to be charged.
- 3. Connection to SumoBox
- 4. DC 18V Input: Allows charging of the battery when not installed in the SumoBox.


Initial set up

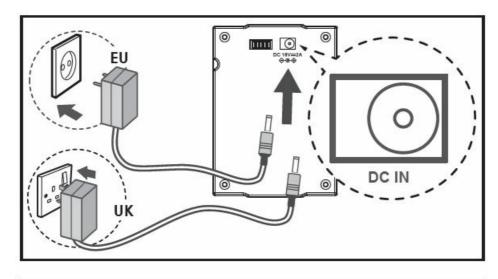

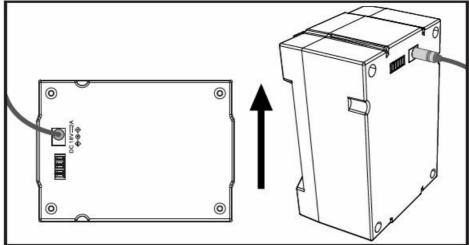

- Charge the supplied CP-LSBP1 battery pack with the included charger. Ensure you use the correct plug adapter for your region.
- Charge the battery for a minimum of four hours.


NOTE: When charging with the included charger, please keep the battery upright. When charging with the included charger, the battery level LED will blink at the current power level. When the battery is fully charged, the LEDs on the battery pack will turn off.

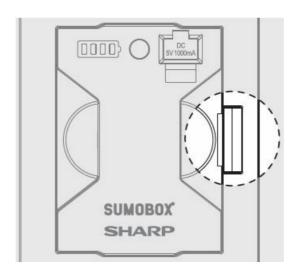

Alternatively, you can install the CP-LSBP1 battery pack into the SumoBox and connect to the SumoBox to the mains power supply. Charge the battery for a minimum of four hours. When inserting into the SumoBox, ensure the battery clip engages to secure it in place.

NOTE: When the SumoBox is connected to the mains supply and the CP-LSBP1 battery is installed, the battery will automatically recharge. Once charged, to avoid power consumption, ensure the switch on the SumoBox is set to the "off" position and then unplug the SumoBox.


You can press the battery status button to see the power level of the battery

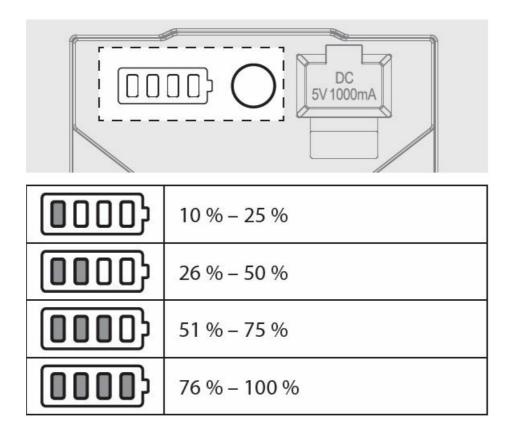

Good charging habits


- 1. Use only the supplied Sharp charger (18V 2A DC).
- 2. Charge before the batteries capacity runs below 25% Lithium-ion batteries have a limited number of charge cycles, so it's best to charge the battery before it is completely depleted to extend its lifespan.
- 3. Avoid overcharging once the battery is fully charged, unplug it from the charger to avoid overcharging, which can also shorten the battery's lifespan.
- 4. If left unused, a fully charged battery will lose its charge over time.
- 5. Store in a cool, dry place extreme temperatures can damage the battery, so make sure to store it in a cool, dry place, ideally at room temperature.
- 6. If you plan to store your device for longer than six months, charge the battery to 50% every six months to keep it fresh.

Power bank operation

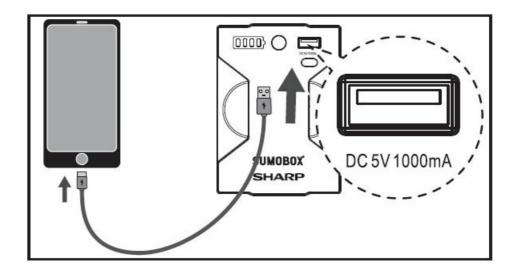

The CP-LSBP1 can operate as a power bank to charge devices via its USB-A port. Please do not exceed the capacity of the battery pack when charging external devices using the USB-A 5V 1000mA output. Generally, devices charged or powered by USB should require no more than 1000mA. If your device requires more than 1000mA, then do not charge the device with the CP-LSBP1 battery pack.

Charger

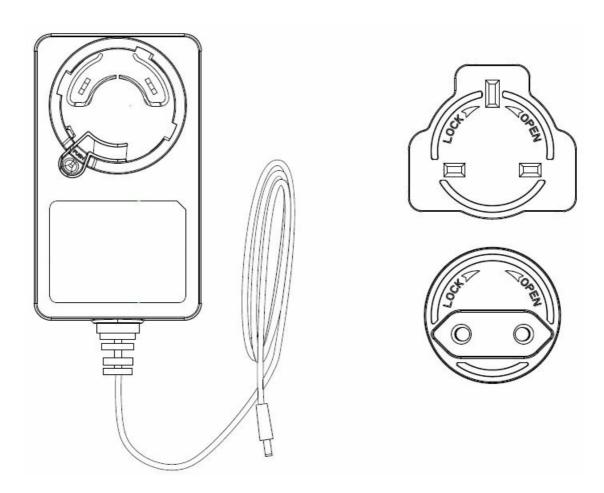

Specifications

• Battery pack: CP-LSBP1

Model: CP-LSBP1Type: Lithium-ionRated capacity

Input: 14.8V 5.0Ah 74WhOutput: 18V 2A DC in

Charger

Model: GKYZC0200180EUType: Class 2 power supply

• Input: 100-240v ~50/60Hz 1.5A Max

• Output: 18V 2A DC

• Manufacturer: Shenzen Shi Guangkaiyuam Technology LTD

• Address: 2 floors, 41 TianSheng Road, TianLiao village, GongMing Street, Guangming, Shenzhen,

Guangdong, P.R.China • **Tel:** 86-755-23400787

Sharp Consumer Electronics

• Poland sp. z o.o. Ostaszewo 57B, 87-148 Łysomice, Poland

· Made in China

• www.sharpconsumer.eu

Documents / Resources



SHARP CP-LSBP1 High Performance Portable Speaker [pdf] User Manual CP-LSBP1 High Performance Portable Speaker, CP-LSBP1, High Performance Portable Speaker, Performance Portable Speaker, Speaker

References

- SumoBox: Battery Pack and Charger | CP-LSBP1 Sharp Europe
- Sharp Consumer Products Europe Sharp Europe

Manuals+, home privacy