

SHARP EM-14 Multi-Purpose Blender Instruction Manual

Home » Sharp » SHARP EM-14 Multi-Purpose Blender Instruction Manual



Please see the date of manufacture marked on the product

Thank you for your trust in products of Thai City Electric Co., Ltd. In order to use products in efficiency way. Please read the instruction manual carefully before using this appliance. REVA-2566

MODEL: EM-M4 (No grinder)



Scan for cookbook http://www.thaicity.co.th/ebook/25

Contents

- **1 SAFETY INSTRUCTION**
- **2 WARNING**
- **3 INSTRUCTION FOR USE**
- **4 DESCRIPTION OF PARTS**
- **5 SPECIFIC INFORMATION**
- **6 HOW TO USE**
- **7 MOTOR PROTECTION SYSTEM**
- **8 USING YOUR BLENDER**
- **9 CLEANING AND MAINTENANCE**
- 10 HOW TO KEEP THE POWER CORD
- 11 Documents / Resources

SAFETY INSTRUCTION

Please read the warning and instruction for use carefully before using this appliance and comply strictly for your own safety and to prevent the damage that may occur on your property.

WARNING


- 1. Do not use sharp material such as polished fiber to clean this appliance. Wipe it with soft damp cloth.
- 2. Do not ringed or immerse the major housing in water because it may cause electric shock end material damage.
- 3. Aways swish off before removing the blender jug from jug Support
- 4. Do not plug in if you have wet hands because it may cause injury from leakage current.
- 5. Aways handle plug on safety part when plug in or unfit\uGu.
- 6. Never pull the power supply cord to disconnect plug from the wall outlet because it may cause the power cord damage.
- 7. Do not plug in other electronic equipment on the same wall outlet the wall outlet will overheat and lead to fie.
- 8. Keep the appliance out of reach of chidden to protect them from sharp blades.
- 9. High temperature ingredients should be cool down before filing in the blender uGu.
- 10. Do not exceed the maximum capacity of the blender jug.
- 11. Do not fi\ace any material or hand inside the blender jug when the unit s operating.
- 12. Aways unplug the appliance from the wall outlet before cleaning or when not in use.

INSTRUCTION FOR USE

- 1. The appliance is intended to be used for commercial applications, for example in kitchens of restaurants, canteens, hospitals and commercial enterprises such as bakeries, but not for continuous mass production of food.
- 2. This appliance is not intended for use by persons including Chiron) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction conceding use of the appliance by a person responsible for their safety.

- 3. If the power cord or plug is damaged. The power cord must be replaced by the manufacturer, its aftersales service or similarly qualified persons unorder 10 avoid conger a hazard.
- 4. Chidden should be supervised to ensure that they do not play with the appliance.

DESCRIPTION OF PARTS

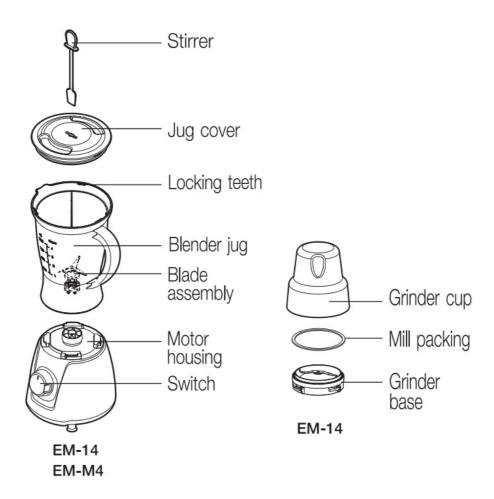

SPECIFIC INFORMATION


MODEL	EM-14	EM-M4
Blender jug capacity (ml)		
Grinder cup capacity (g)	50	-
Power consumption (W)	400	
Rated voltage M	220	
Rated frequency (Hz)	50	
Total weight (Kg)	1.	
Product dimension (WxHxD) (mm.)	198 x 360 x 175	
Switch	3 modes (PULSE/OFF/ON)	
Rust-free stainless steel blades	4 blades	
Accessories	Stirrer I	

"Detail is subject to change without prior notice.

HOW TO USE

Speed selection

Choose an appropriate speed for your desired food.

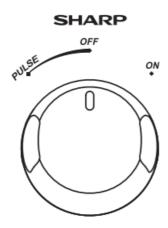

OFF	:Tum off	
ON	:For sold food i with food.	
PULSE	:For quick blending at a time for each pulse. (When release a hand, the button will tum to t e OFF position)	

Instructions for covering the jug cover onto the top of blender

Cover the blender jug cover (as shown in the picture) and attach locking teeth to blender by rotating in clockwise direction un close filmy.



Instructions for using the stirrer

Insert the stirrer through the hold on the jug cover to stir the ingredients in blender jug.




MOTOR PROTECTION SYSTEM


In the event of an overload conation, the motor protection system will shut down the motor immediately. To reset the appliance in case of auto stop protection due to overload, follow the steps below:


- 1. Tum off the appliance and then unplug.
- 2. Remove some of the ingredients or add some fique to reduce the load.
- 3. Allow the appliance to cool down for 15 minutes.
- 4. Connect the power plug to the power supply.
- 5. Tum on the appliance to start processing again.

USING YOUR BLENDER

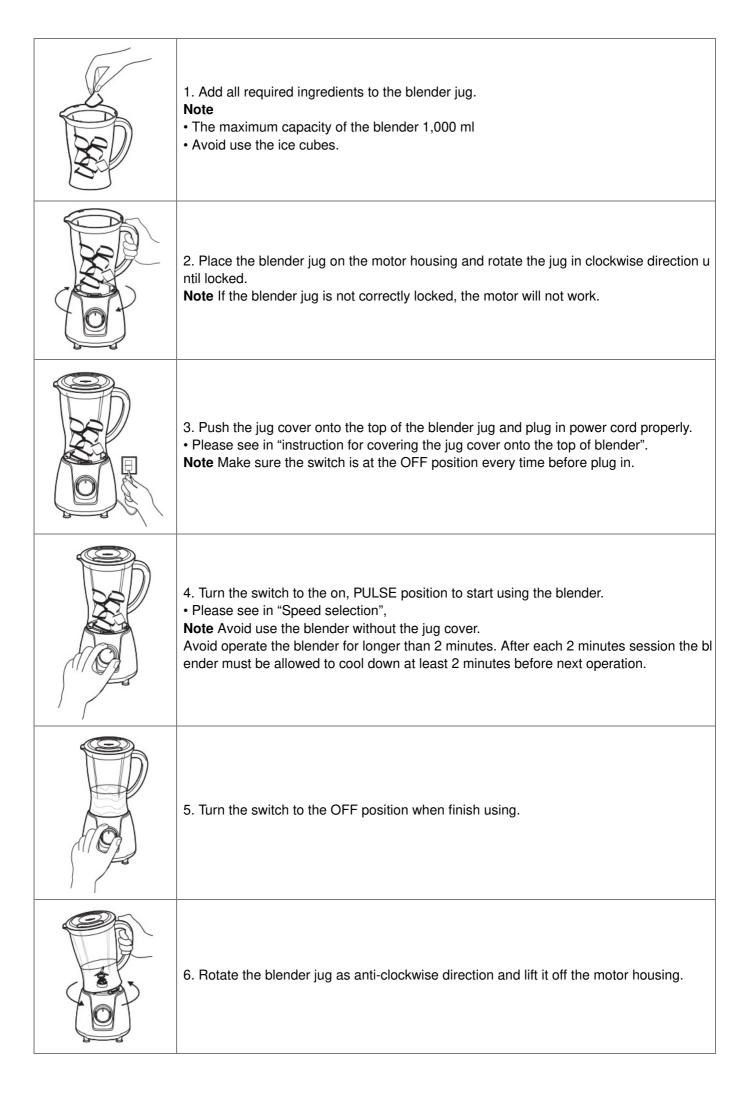


USING YOUR GRINDER (Except Model EM-M4)

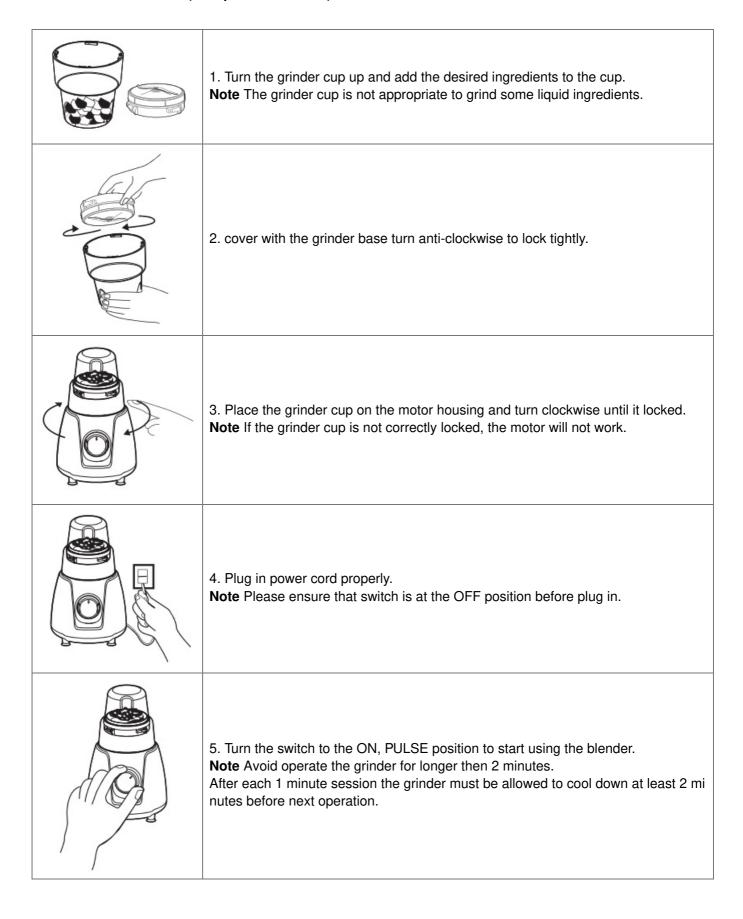

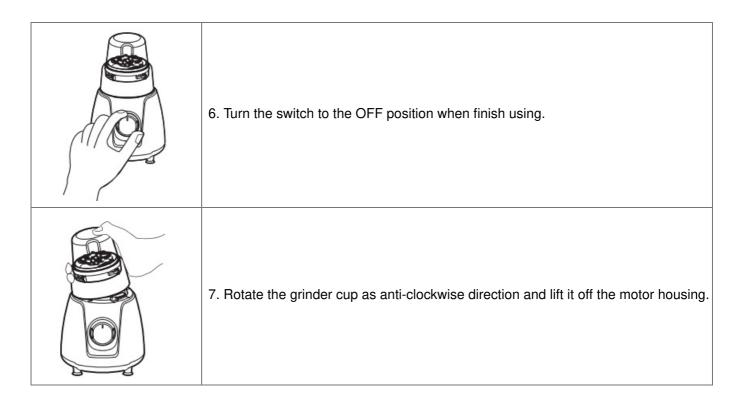

CLEANING AND MAINTENANCE

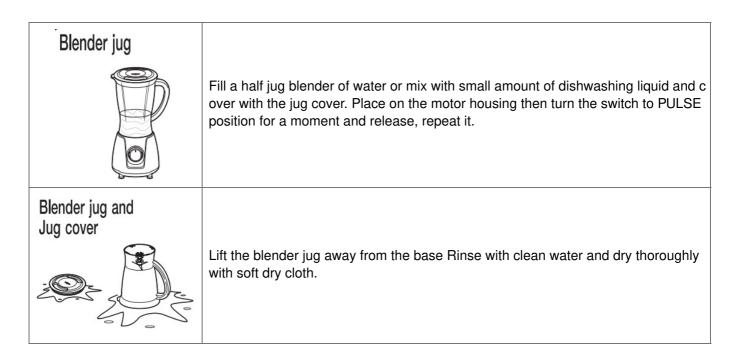


Note Take care when handing the sharp blade. It may cause injury particularly when cleaning. **Grinder base and grinder cup (Except Model EM-M4**

Rinse with clean water and dishwashing liquid, use soft brush to d dry thoroughly with soft dry cloth.




Motor housing

Use a clean damp cloth to clean the motor housing.

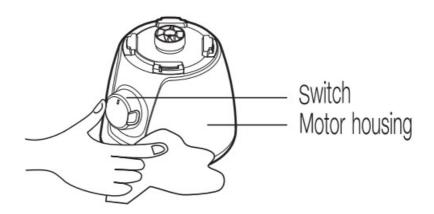

HOW TO KEEP THE POWER CORD

After use, keep the power cord into cord storage and insert the power cord into lock position.

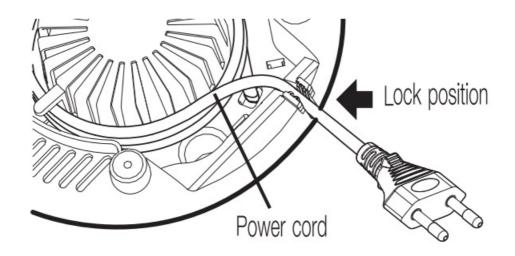

Note

Avoid keep the power cord when the motor housing is still hot. Periodically check the power cord and plug for any sign of damage.

SHARP

MANUFACTURED BY FEDERAL ELECTRIC CORP., LTD.

97 Moo 20 Sala DEng, Bang Nam Piao, Chachoengsao 24000

Sole Distributor in Thailand

THAI CITY ELECTRIC CO., LTD.

1643/4 New Phetchaburi Rd., Iviakkasan, Ratchathewi, Bangkok 10400Tel. 0 2333 311iCall Center o 2254 5000 E-mail: callcenter@thaicity.co.th





Documents / Resources



<u>SHARP EM-14 Multi-Purpose Blender</u> [pdf] Instruction Manual EM-14, EM-14 Multi-Purpose Blender, Multi-Purpose Blender, Blender

Manuals+,