



GA771WJSA Sharp Remote Control Instructions

[Home](#) » [Sharp](#) » GA771WJSA Sharp Remote Control Instructions 

Contents

- [1 GA771WJSA Sharp Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 KEYS FUNCTION](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

SHARP

GA771WJSA Sharp Remote Control



Product Information

- **Specifications**
 - **Brand:** Sharp
 - **Model:** GA771WJSA
 - **Compatibility:** Sharp TV Replacement Remote Control
 - **Colour:** Black
 - **Dimensions:** Not specified
 - **Weight:** Not specified

Product Usage Instructions

- **Power On/Off**
 - To turn on the TV, press the “Power” button. To turn off the TV, press and hold the “Power” button for a few seconds.
- **Channel Selection**
 - Use the number buttons (1-9, 0) to directly enter the channel number. Press the “Ch+” or “Ch-” buttons to navigate through channels sequentially.
- **Volume Control**
 - Adjust the volume level using the “Vol+” and “Vol-” buttons. Press the “VolMute” button to mute/unmute

the sound.

- **Input Selection**

- Press the “AV” button to switch between different input sources. Use the arrow buttons (Up, Down, Right, Left) to navigate through the available options, and press “OK” to confirm the selection.

- **Smart Features**

- Access the Smart features by pressing the “Smart” button. Use the arrow buttons to navigate through the options and press “OK” to select. Press the “Smart Guide” button for quick access to the TV’s interactive program guide.

- **Sleep Timer**

- To set a sleep timer, press the “Sleep” button. Use the arrow buttons to adjust the timer duration, and press “OK” to activate the sleep timer. The TV will automatically turn off after the set time.

- **FAQ (Frequently Asked Questions)**

- **Q:** How can I change the input source on my Sharp GA771WJSA remote?
- **A:** To change the input source, press the “AV” button on the remote. Use the arrow buttons to navigate through the available options, and press “OK” to confirm the selection.
- **Q:** How do I access the Smart features on my Sharp GA771WJSA remote?
- **A:** To access the Smart features, press the “Smart” button on the remote. Use the arrow buttons to navigate through the options, and press “OK” to select.
- **Q:** How do I adjust the volume on my Sharp GA771WJSA remote?
- **A:** Use the “Vol+” and “Vol-” buttons on the remote to increase or decrease the volume level. Press the “VolMute” button to mute or unmute the sound.

KEYS FUNCTION



Originale		Sostituto	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Source		AV
	ATV		Shift + Smart
	DTV		Smart
	EPG		Guide
	Radio		TV/R

Originale		Sostituto	
	▼/O)/I/II/I+II		Dual
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	P.Info		Info
	[i+]		List
	AV Mode		Format
	[<>]		Eject
	Eco		3D
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok

Originale		Sostituto		Originale		Sostituto	
	End		Exit		Option		Options
	Back		Back		Rec		Rec
	Red		Red		Rec Stop	 + 	Shift + Stop
	Green		Green		Stop		Stop
	Yellow		Yellow				
	Blue		Blue				
	[≡]		Text				
	[≡?]	 + 	Shift + Subt				
	[...]		Subt				
	[≡+]	 + 	Shift + Options				
	[≡o]	 + 	Shift + Dual				
	[≡◆]	 + 	Shift + TV/R				
	Sleep		Sleep				
	Power Aquos Link	 + 	Shift + Power				
	<<		<<				
	Play		Play				
	>>		>>				

<https://tutti-i-telecomandi.it/it/Sharp/1055079-30416-telecomando-di-sostituzione-per-Sharp-GA771WJSA.html>.

Documents / Resources

	Sharp GA771WJSA Sharp Remote Control [pdf] Instructions GA771WJSA Sharp Remote Control, GA771WJSA, Sharp Remote Control, Remote Control, Control
	Sharp GA771WJSA Sharp Remote Control [pdf] Instructions GA771WJSA Sharp Remote Control, GA771WJSA, Sharp Remote Control, Remote Control, Control

References

- [M Telecomando sostituto di SHARP GA771WJSA](#)
- [User Manual](#)

