



SHARP PS-919 Party Speaker System User Manual

[Home](#) » [Sharp](#) » SHARP PS-919 Party Speaker System User Manual 

SHARP



User manual
PS-919
Party Speaker System
Trademarks



The Bluetooth® word, mark, and logos are registered trademarks owned by Bluetooth SIG, Inc.










 
Contents

- [1 Important safety instructions.](#)
- [2 What is included in the box](#)
- [3 Panels & Controls](#)
- [4 Operation instruction.](#)
 - [4.1 NOTES:](#)
 - [4.2 NOTES:](#)
- [5 Technical specification.](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Important safety instructions.



Please, read these safety instructions and respect the following warnings before the appliance is operated:

	The lightning flash with the arrowhead symbol, within an equilateral triangle, is intended to alert the user to uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude as to cause electric shock to persons.
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important maintenance (servicing) instructions in the literature accompanying the appliance.
	Use only the power supply listed in the user manual.
	This symbol means that the product should be disposed of in an environmentally friendly manner and not as old waste.
	AC voltage
	DC voltage
	Class II equipment
	For indoor use only
	Energy efficiency marking with level VI
	The polarity of d.c. power connector

In order to prevent fire always keep candles and other open flames away from this product.



Warning:

- Always follow basic safety precautions when using this appliance, especially when children are
- Children should be supervised to ensure that they do not play with the
- Do not damage the power cord, neither do not place any heavy objects on it, do not stretch it or bend it. Also do not attach extension cables. If the supply cord is damaged, fire or electric shock may
- If the supply cord is damaged, it must be replaced by the manufacturer, a service agent or similarly qualified persons in order to avoid a hazard.
- Ensure that the unit is plugged into an AC 220-240V 50Hz power Using higher voltage may cause the unit to malfunction or even fire catching.
- If the power plug does not fit into the socket, do not force
- Turn off the unit before unplugging it from the power source to completely switch it
- Connecting or disconnecting the power cord with wet hands may cause electric
- NOTE: To disconnect the system completely if it not to be used for a long time, remove the AC power plug from the wall

- Ensure that the mains plug is always easily
- This product does not contain any parts that are serviceable by the In case of a fault, contact the manufacturer or authorized service department. Exposing the internal parts inside the device may endanger your life. The manufacturer's guarantee does not extend to faults caused by repairs carried out by unauthorized third parties.
- Do not use this product immediately after Wait until it warms up to room temperature before using it.
- Ensure this product is used in moderate climates only (not in tropical/ subtropical climates).
- Place product on a flat, stable surface that is not subject to
- Ensure the product and its parts is not overhanging the edge of the supporting
- To reduce the risk of fire, electric shock or damage to this product, do not expose it to direct sunlight, dust, rain and moisture. Never expose it to dripping or splashing and do not place objects filled with liquids on or near the
- Do not place objects filled with liquids, such as vases, on the apparatus.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not place the product where the humidity is high and ventilation is
- Don't mount this product on a wall or
- Do not place the unit near TVs, speakers and other objects that generate strong magnetic
- Do not leave the unit unattended when it is in
- Allow at least 30 cm clearance from the rear and the top of the unit and 5 cm from each Do not block any ventilation openings of this product. Always ensure that the ventilation openings are not covered with items such as newspapers, table-cloths, curtains, etc.
- **NEVER** let anyone, especially children, pushes anything into holes, slots

or any other openings in the unit's casing as this could result in a fatal electric shock.

- Storms are dangerous for all-electric If the mains or aerial wiring is struck by lightning, the appliance might get damaged, even if it is turned off. You should disconnect all the cables and connectors of the appliance before a storm.

Maintenance

- Unplug the power cable from the power source before cleaning the
- Use a soft and clean rag to clean the outside of the unit. Never clean it with chemicals or

Power Adapter

- To disconnect the unit from the mains supply, unplug the lead from the mains
- Only use the supplied mains adaptor as failure to do this may result in a safety risk and/or damage to the

Built-in Battery Care

- Your product is powered by a built-in rechargeable
- The battery can be charged and discharged hundreds of times, but will eventually wear
- Unplug the charger from the electrical plug and the product when not in

- Do not leave a fully charged battery connected to a charger, since overcharging may shorten its
- If left unused, a fully charged battery will lose its charge over
- Leaving the product in hot or cold places, such as in a closed car in the summer and winter conditions, will reduce the capacity and lifetime of the
- Always try to keep your device in a cool, moisture-free environment that's less than 32°C.
A product with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.
- If you plan to store your device for longer than six months, charge the battery to 50% every six months to keep it fresh. Store the device at temperatures between 5 °C and 20 °C.

Battery warning!

- The battery used in this product may present a risk of fire or chemical burn if
- Do not attempt to open the product or replace the battery. It is built-in and not changeable. Use of other batteries may present a risk of fire or explosion and the warranty will be
- Dispose of batteries according to local Please recycle when possible. Do not dispose of as household waste or in a fire as they may explode.
- Batteries may explode if
- Charging the battery using a supplied charger or under the charging condition specified in user Charging the battery under any other conditions may cause the battery to overheat, emit hydrogen gas, leak, ignite or burst.

CAUTION!

1. Important safety considerations

- Do not expose batteries to high temperatures and do not place them on locations where the temperature might increase quickly, e.g. near the fire or on the direct
- Do not expose batteries to excessive radiant heat, do not throw them into the fire, do not disassemble them, and do not try to recharge un- rechargeable They could leak or explode.

2. To prevent deterioration or damage to the battery

- Do not drop or be subject to strong physical

3. To ensure long battery life

- Do not discharge

How to remove the battery for disposal

RISK OF INJURY. WEAR GLOVES WHEN WORKING!

The battery should be removed by an authorized Sharp service center. Not doing so will invalidate any guarantees and warranties on your device.

1. Remove the metal speaker grille on the front of the unit by gently prising it off with a flat head
2. Remove the 7 rubber screw covers on the front of the unit and unscrew the screws using a Philips
3. Remove 1 screw from the bottom of the front half of the

4. Open the main
5. Locate the circuit board on the back part of the
6. Remove the 4 screws in the corners of the circuit board which are holding it in Lift the circuit board out carefully.
7. Disconnect the battery pack connector from the circuit
8. Gently pull the battery pack away from the circuit board by peeling it off the adhesive pad holding it in place.

Disposal of this equipment and Batteries.

- Do not dispose of this product or its batteries as unsorted municipal Return it to a designated collection point for the recycling of WEEE in accordance with local law. By doing so, you will help to conserve resources and protect the environment.



- Most of the EU countries regulate the disposal of batteries by law. Contact your retailer or local authorities for more information.
- The shown above appears on electrical and electronic equipment and batteries (or the packaging) to remind users of this. If “Hg” or ‘Pb’ appears below the symbol, this means that the battery contains traces of mercury (Hg) or lead (Pb),
- Users are requested to use existing return facilities for used equipment and batteries.



 
CE Statement:

- Hereby, UMC Poland Sp. z o.o. declares that this audio device is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/EU. The full text of the EU declaration of conformity is available by following the link <http://www.sharpconsumereu/documents-of-conformity>

What is included in the box

1 x PS-919
1 x Power Adapter
1 x EU AC plug for power adapter 1 x UK AC plug for power adapter 1 x User Manual
1 x Quick start guide 1 x Warranty Card

Panels & Controls

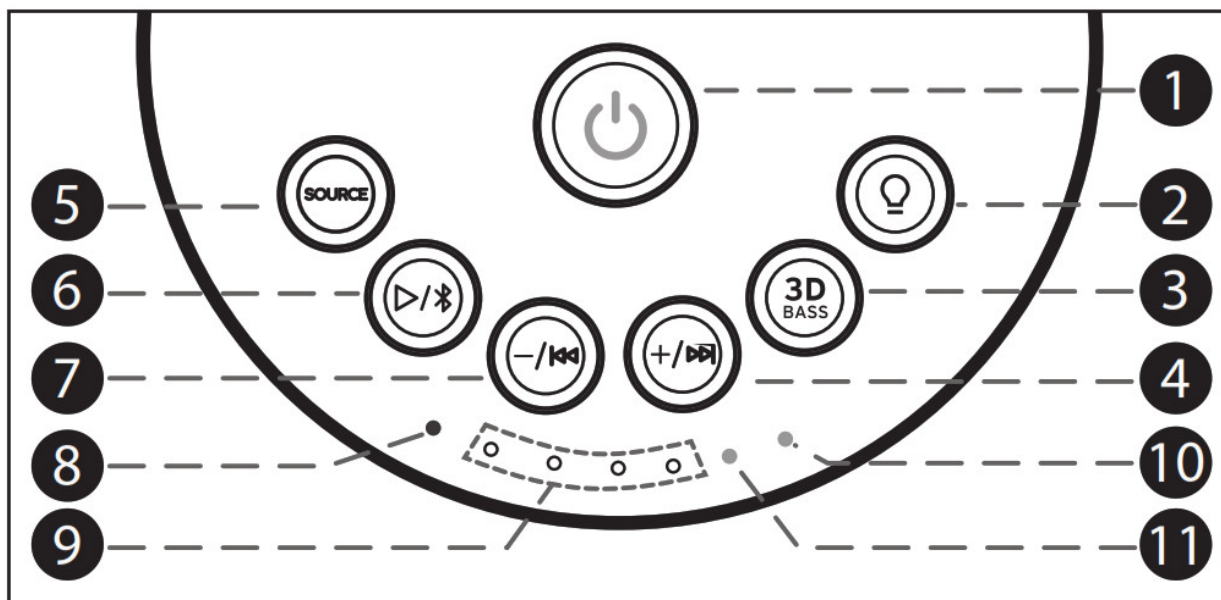

TOP VIEW

1. **button** – Press the button to turn on the unit. Long press the button to turn off the unit.
2. **button** – Short press: changes the front light mode Long press (2 sec): changes the sidelight mode Longer press (4 secs): switch all the lights off
3. **3D Pass button** – Shortly press the button to toggle between Bass & 3D surrounding modes:
 Bass Off, 3D Off – orange LED is off
 Bass On, 3D Off – orange LED continuously light
 Bass Off, 3D On – orange LED slowly flashing

A long press of the button will switch off both modes: Bass Off, 3D Off.

4. **button** – Press the button to turn up the playing volume. Long press the button to skip to the next playing track.
5. **SOURCE button** – Press the button repeatedly to switch the playback mode: Bluetooth, AUX, USB. A long press of the button will activate the TWS/Duo mode function.

 
Note that the USB mode can only be selected if a USB stick is plugged into the unit.

6. **button** – Press the button to play or pause the playback. A long press of the button will disconnect the BlueTooth connection.
7. **button** – Press the button to turn down the playing volume. Long press the button skip to the previous playing track.
8. **SOURCE INDICATOR** – Switch to Bluetooth mode, the blue light turns on and starts flashing when Once paired, the blue light stops flashing. Switch to USB mode, the blue light flashes rapidly three times, then goes off, then two seconds later, three times, and so on. Switch to AUX mode, the blue light flashes slowly and continuously
9. **BATTERY STATUS INDICATORS**
10. **3D/Bass indication** – When Bass Off and 3D surround Off LED is When Bass On and 3D surround Off orange

LED continuously light. When Bass Off and 3D surround On orange LED slowly flashing

11. **RECHARGING INDICATOR** – When the charger is connected, red light turns When the device is fully charged, the red light turns off.

REARVIEW

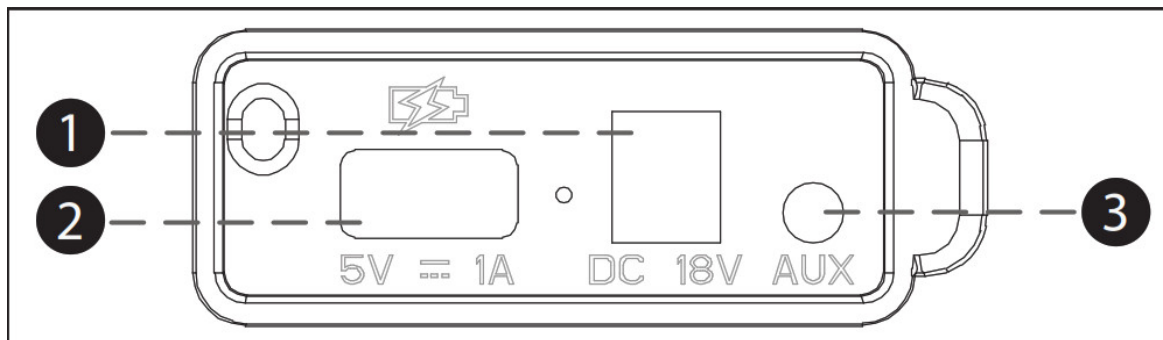


1. **DC 18V** – AC Adapter input
2. **USB PORT** – USB port supports playback and Read audio files in MP3 format in USB storage device in capacity up to 32GB (FAT32). Or Charge your mobile device through the 5V/1A USB port.
3. **AUX IN JACK** – Connect the 5mm audio cable to enjoy the external audio music.

Operation instruction.

Charging the Speaker

 This speaker uses built-in batteries. Before using it, charge the batteries by connecting the AC adapter. Connect the AC power adapter (supplied) to the DC 18V input port on the rear of the unit, and then to the wall outlet.

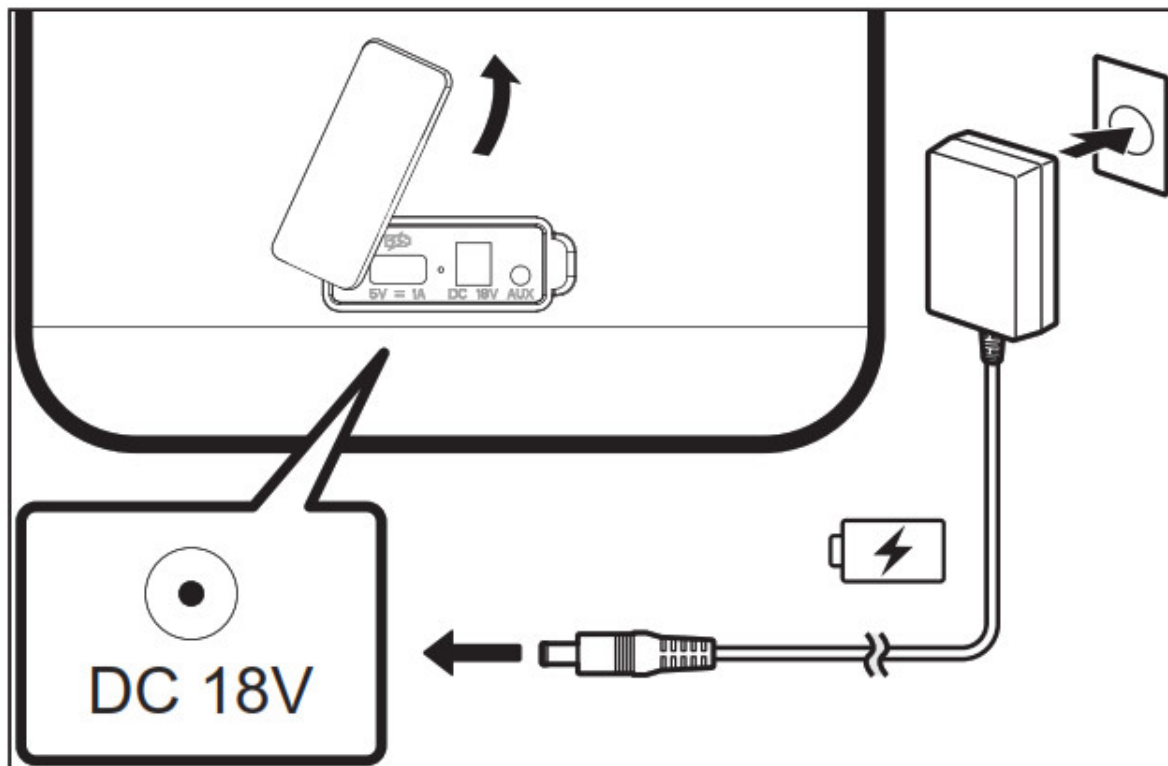

CAUTION: Only use the AC adapter supplied with this device. Only use the supplied power supply. If you do not use this adapter, charging is unavailable, or the charging time may differ. And it may cause damage to the device.

Power On the Speaker

Press the **POWER ON/OFF** button on the top panel of the unit to power on.

The first time to use it, the “Source indicator” flashes blue, indicating that the unit is in pairing mode.

TIPS:

- In order to disable or enable the **voice messaging**, please press and hold the SOURCE button for 3 seconds during power-up
- When you power on the speaker again after Bluetooth setup, the unit will search for the previously paired device. Once found, it will be paired with that device

Power Off the Speaker

Press the POWER ON/OFF button to turn off the unit.

After 15 mins with no activity/connection, the unit will automatically power off to conserve battery.

Bluetooth Connection

1. Press the SOURCE button repeatedly to switch to Bluetooth Unit will say “Bluetooth”.
2. Make sure that the unit is in pairing
3. Enable Bluetooth on your device to be paired with the Select “**Sharp PS-919**,” from the available devices (enter the password “**0000**,” if necessary) to start pairing and connecting with the unit.
4. After successful connection, the “Source indicator” indicator turns solid blue and you hear a voice prompt (“Connected”).
5. This unit is compatible with the voice assistant on your smart

NOTES:

- This speaker supports automatic connection with a previously paired device after power off and power on
- If you want to pair with a new Bluetooth device, you must disconnect the paired
- To disconnect the Bluetooth connection, long-press Or you can turn off the Bluetooth function in your smart device. The device will say “disconnected”.

Connect two PS-919 via Bluetooth (TWS)

TWS/True wireless Stereo – Duo Mode

- This allows for two PS-919 party speakers to be connected together as left and right stereo speakers for a real stereo The first connected speaker is the master one and the second the slave.
- Press and hold the SOURCE button on the second speaker until the speaker says “Duo Mode pairing” then release the
- Please wait until speakers say “Duo Mode connected”. The speakers are now connected to each

- Pair the master speaker with your
- For Bluetooth pairing to a Bluetooth-out enabled smart device search for Bluetooth Pairing name “Sharp PS-919” on your device and
- When you will power off one speaker in Duo Mode, both speakers will power
- When you Power on the speakers, they need to be turned on individu-
- When both speakers are powered on Duo Mode will automatically reconnect and you will hear “Duo Mode connected”.
- To disconnect Duo Mode press and hold the SOURCE button on the slave speaker until you hear “Duo Mode disconnected”

NOTES:

- It takes up to 1 minute to connect to Duo
- When you enjoy Duo Mode, Multiphone pairing is not The Master speaker connects only one Bluetooth device.
- In Duo Mode, you can connect only the Master speaker with the Bluetooth
- To change the Bluetooth device in Duo Mode, press and hold on the Master unit for 3 seconds to disconnect the current Bluetooth device and connect to the desired Bluetooth
- When you connect a Bluetooth device (iOS device etc.) to this unit or operate the device, the volume level can be synchronized between each

Listening to Music from External Device

The unit can be used to listen to music from many types of external devices.

1. Connect an auxiliary audio device to the unit through the 5mm audio input port.
2. Press the SOURCE button to repeatedly switch to AUX The blue light flashes slowly in Aux mode.
3. Play and control music on the audio device, and use the *and* buttons on the unit to adjust the volume.

USB Playback and Charging functions

The USB port on the rear panel of the unit supports playback and charging.

1. Insert the USB drive into the USB slot on the back of the unit.
2. The unit will enter to USB mode automatically.
3. Unit start play songs from the USB

NOTES:

- *The USB mode only can be entered when the USB device is*
 - *supports USB memory key up to 32GB*
 - *supported audio formats is MP3*
4. Mobile devices can be charged via the USB

Adjust the Light Effects

1. Short press the button on the top panel of the unit to change the flashing mode for the center There are 4 flashing effects:

- Colors gradually
- Dynamic flashing, the lights will flash with the
- Color rotating
- Monochrome rotating
- Off.

 
2. Long press (2 sec): changes the sidelight mode

3. Longer press (4 secs): switch all the lights off

Technical specification.



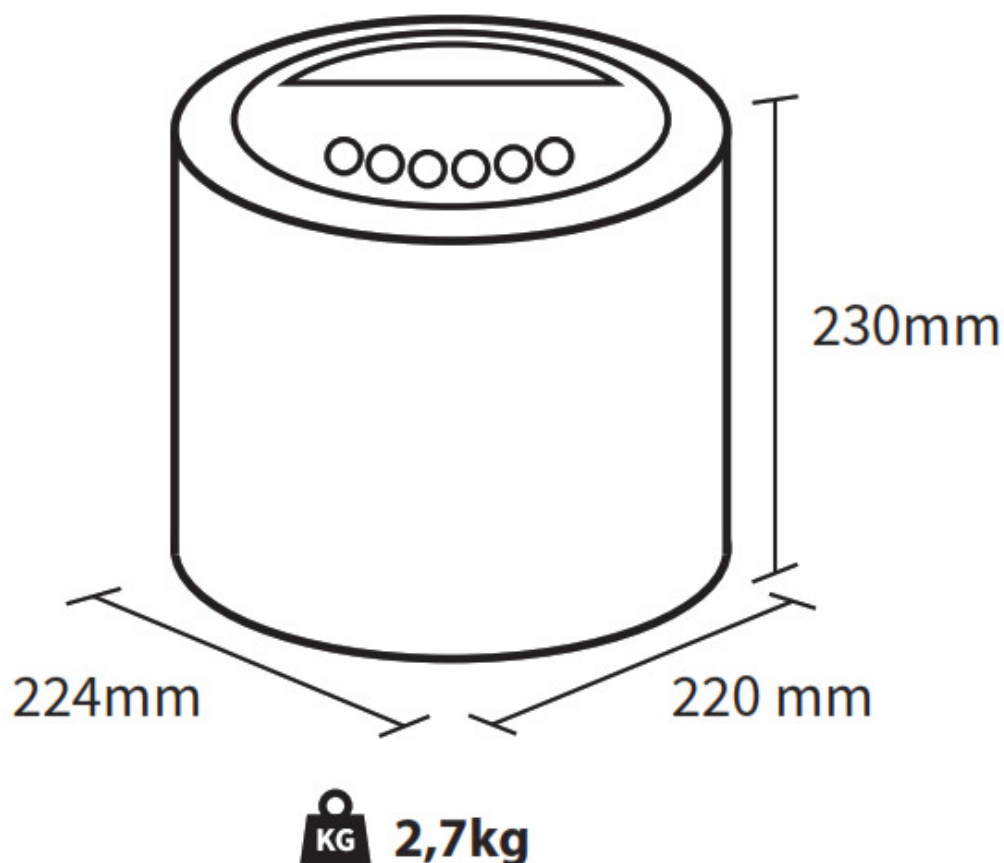

Model	PS-919
Output Power	2×18 + 36W RMS10%
Max. power consumption:	19W
Total max power output	130W
Frequency Response	70Hz – 12kHz
Battery	Built-in 4x2600mAh, 37,44Wh Li-ion battery pack
Operating temperature	5 °C to 35 °C
Operating humidity	5 % to 60 %
Water-proof	IPX5
Bluetooth	
Version	V 5.0
Maximum power transmitted	<20 dBm
Frequency bands	2402 MHz ~ 2480 MHz
Power Adapter	
Model name	HP24E-1801000-D
Input	100-240V~ 50/60Hz 0,8A
Output	DC 18V, 1000mA
Manufacturer	DONGGUAN HP-POWER TECHNOLOGY., LIMITED NO.8, Shui Lin Road, TangXia Town,523710 DongGuan City, Guang Dong Province, China

Notes: Design and specifications are subject to change without notice.



UMC Poland Sp. z o.o.
Ostaszewo 57B, 87-148 Łysomice,
Poland
Made in China
SAU/MAN/0106
www.sharpconsumer.eu

Documents / Resources

  User manual PS-919 <small>(EN) (DE) (FR) (IT) (PL) (RU)</small>	<p>SHARP PS-919 Party Speaker System [pdf] User Manual PS-919 Party Speaker System</p>
  Software upgrade manual PS-919 <small>(EN)</small>	<p>SHARP PS-919 Party Speaker System [pdf] Instructions PS-919BKV01, PS-919WHV01, PS-919BKV02, PS-919WHV02, PS-919 Party Speaker System, PS-919, PS-919 Party Speaker, Party Speaker System, Party Speaker, Speaker</p>

References

- [Sharp Consumer Products Europe - Sharp Europe](#)
- [Sharp Consumer Products Europe - Sharp Europe](#)

-  [Sharp Consumer Products Europe - Sharp Europe](#)

Manuals+.