



SHARP RD-480E Remote Control Instruction Manual

[Home](#) » [Sharp](#) » SHARP RD-480E Remote Control Instruction Manual 

Contents

- [1 SHARP RD-480E Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ \(Frequently Asked Questions\)](#)
- [5 Convenient Features](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

SHARP

SHARP RD-480E Remote Control



Product Information

Specifications:

- Product Name: Projector Lens Shutter
- Convenient Features: Turn off the light of the projector, Turn off the on-screen menu
- Language Options: English, German, French, Italian, Spanish, Portuguese, Finnish, Polish

Product Usage Instructions

Turning Off the Light of the Projector (LENS SHUTTER):

To turn off the light of the projector, follow these steps:

1. Locate the lens shutter control on the projector.
2. Slide the shutter to the “CLOSE” position to turn off the light.
3. To turn the light back on, slide the shutter to the “OPEN” position.

Turning Off the On-Screen Menu (On-Screen Mute):

If you want to turn off the on-screen menu, here's how to do it:


1. Press the “CTL” button on the remote control to access the on-screen menu.
2. Navigate to the mute option and select it to turn off the on-screen menu.
3. To display the menu again, repeat the steps and select the unmute option.

FAQ (Frequently Asked Questions)

- Q: How do I change the language settings on the projector?
A: To change the language settings, access the projector's main menu, navigate to settings, and select language options to choose your preferred language.
- Q: Can I use the lens shutter to completely turn off the projector?
A: The lens shutter is designed to turn off only the light of the projector. For complete shutdown, use the power button on the projector or remote control.


Convenient Features

Turn off the light of the projector (LENS SHUTTER)

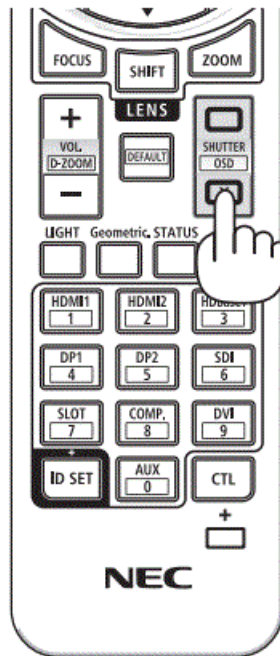

1. Press the SHUTTERCLOSE (☐ X) button on the remote control. The light source will turn off temporarily.
 Press the SHUTTER OPEN (☐) button to allow the screen to become illuminated again.
 - You can set the projection light to gradually fade in or out.

Turning Off the On-Screen Menu (On-Screen Mute)

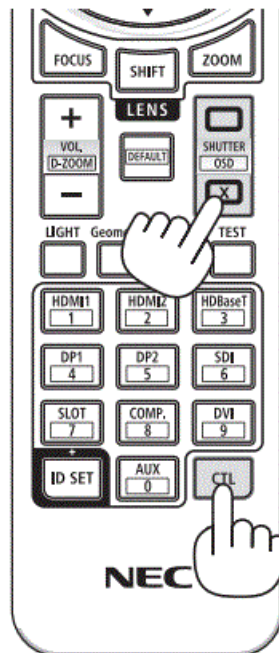

1. Hold down the CTL button on the remote control and press the OSDCLOSE (☐ X) button. The on-screen menu, input terminal, etc. will disappear.
 - To display the on-screen display, press the OSDOPEN (☐) button while holding down the CTL button on the remote control.

TIP:

- To confirm that the on-screen mute is turned on, press the MENU button. If the on-screen menu is not displayed

even though you

Press the MENU button, it means the on-screen mute is turned on.

- The on-screen mute is maintained even when the projector is turned off,
- Holding down the MENU button on the projector cabinet for at least 10 seconds will turn off the on-screen mute

Documents / Resources

	<p>SHARP RD-480E Remote Control [pdf] Instruction Manual RD-480E Remote Control, RD-480E, Remote Control</p>
---	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.