

SHARP SPC033 LED Digital Alarm Clock



Sharp SPC033 LED Digital Alarm Clock Instruction Manual

[Home](#) » [Sharp](#) » Sharp SPC033 LED Digital Alarm Clock Instruction Manual 

Contents

- [1 Sharp SPC033 LED Digital Alarm Clock](#)
- [2 FEATURES](#)
- [3 PRODUCT INSTRUCTIONS](#)
- [4 One-Year Limited Warranty](#)
- [5 FREQUENTLY ASKED QUESTIONS](#)
- [6 References](#)
- [7 Related Posts](#)

SHARP®


Sharp SPC033 LED Digital Alarm Clock



Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions carefully and store them in a safe place for future reference.

FEATURES

- Large 1.8" LED Display
- High or Low Alarm Volume
- High or Low Display Brightness
- 9 Minute Snooze
- Case Swivels 90°
- Optional Battery Backup (Requires One 9-volt Battery (Not Included))

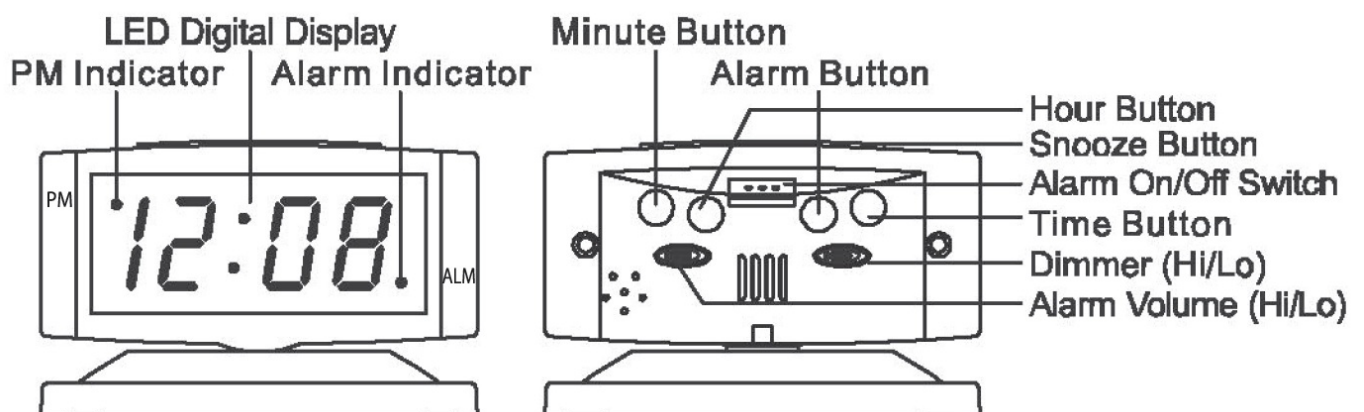

POWER SUPPLY

- Begin by plugging the power cord into a standard household outlet. The display will flash indicating the clock needs to be set

SETTING THE CLOCK

- While holding down the TIME button, press the HOUR button to advance to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- While holding down the TIME button, press the MIN button to advance to the correct minute. Release the button when the correct minute is shown or the delay, indicated by the PM light on the display.

SETTING THE ALARM

- While holding down the ALARM button, press the HOUR button to advance to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- While holding down the ALARM button, press the MIN button to advance to the correct minute.
- Release the ALARM button when the correct alarm time is shown on the display. To verify your alarm time setting, press and hold the ALARM button and the alarm time will appear on the display.
- When setting the alarm time be sure you are in the correct AM or PM time as indicated by the PM light on the display.

USING THE ALARM

- To activate the ALARM, pull the ALARM ON/OFF switch to raise it into the ON position. The ALARM ON indicator will light and the alarm will sound at the preset time.
- To silence the ALARM, press the ALARM ON/OFF switch into the OFF position

SETTING THE ALARM VOLUME

- Slide the ALARM VOLUME switch to either HIGH or LOW volume.

USING THE SNOOZE

- To use the Snooze, press down on the SNOOZE BAR when the alarm is sounding. The alarm will be silent temporarily but will resume sounding after 9 minutes. This can be repeated as often as you wish for up to one hour:

USING THE DIMMER

- Slide the DIMMER switch to either the HIGH or LOW setting to control the brightness of the clock display.

USING THE BATTERY BACKUP

- Insert one 9V battery into the battery compartment on the underside of the clock. The battery will hold the ALARM and TIME settings until power is restored. The alarm will sound at the selected time, only the display will not light to save battery power.



BATTERY CAUTION

- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Do not dispose of batteries in fire; batteries may explode or leak.
- Adult assembly required to replace and remove battery.

CARE OF YOUR CLOCK

- Store the clock without a battery when not in use. A soft cloth or a paper towel may be used to clean your clock. Do not use any corrosive cleanser or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

DIGITAL ALARM CLOCK

-  The lightning flash and arrowhead within the triangle is a warning sign alerting you of “dangerous voltage” inside the product.
- **CAUTION** RISK OF ELECTRIC SHOCK DO NOT OPEN
- **CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (ON BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
-  The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.
- **WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
- **CAUTION:** TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

PRODUCT INSTRUCTIONS

1. **Read Instructions-** All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** – The safety and operating should be retained for future reference.
3. **Heed Warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** – All operating and use instructions should be followed.
5. **Water and Moisture** – The appliance should not be used near water – for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or a swimming pool, and the like.
6. **Carts and Stands** – The appliance should be used only with a cart or stand that is recommended by the manufacturer.
 - An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. **Wall or Ceiling Mounting** – The appliance should be mounted to a wall or ceiling only as recommended by the

manufacturer.

8. **Ventilation** – The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings, or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. **Heat** – The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. **Power Sources**– The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** – The precaution should be taken so that the grounding or polarization means of an appliance is not defeated.
12. **Power-Cord Protection** – Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
13. **Cleaning** – The appliance should be cleaned only as recommended by the manufacturer.
14. **Nonuse Periods** – The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
15. **Object and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
16. **Damage Requiring Service** – The appliance should be serviced by qualified service personnel when:
 - The power supply cord or the plug has been damaged; or
 - Objects have fallen, liquid has been spilled into the appliance; or
 - The appliance has been exposed to rain; or
 - The appliance does not appear to operate normally or exhibit a marked change in performance; or
 - The appliance has been dropped, or the enclosure damaged.
17. **Servicing** – The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If customer service is needed, please email custserv_clocks@mzb.com or call toll-free at 1-[800-221-0131](tel:800-221-0131) and ask for Customer Service. Monday-Friday 9:00 AM – 4:00 PM EST

One-Year Limited Warranty

M.Z. Berger & Company warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase modifications of repairs, immersion in water or abuse are set covered by this warranty. If a defect covered by this warranty occurs during the warranty period, wrap your clock carefully and send it to the following address:

M.Z. Berger & Co., Inc. 353 Lexington Ave – 14th Fl. New York, NY 10016

You must include a Proof of Purchase, either the original receipt or a photocopy and a check or money order for USD \$6.00 to cover the cost of handling. Also, include your return address inside the package. M.Z. Berger will repair or replace the clock and return it to you. M.Z. Berger will not be liable for any loss or damage, including incidental or consequential damages of any kind; from any breach of warranty either expressed or implied relating

to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, this limitation may not apply to you.

Printed in China

Model SPC033

SHARP, is registered in the U.S. Patent and Trademark Office.

FREQUENTLY ASKED QUESTIONS

What brand manufactures the Sharp SPC033 LED Digital Alarm Clock?

The Sharp SPC033 LED Digital Alarm Clock is manufactured by Sharp.

What type of display does the Sharp SPC033 LED Digital Alarm Clock have?

The Sharp SPC033 LED Digital Alarm Clock features a digital display.

What special features does the Sharp SPC033 LED Digital Alarm Clock offer?

The Sharp SPC033 LED Digital Alarm Clock comes with a swivel base, brightness dimmer, large display, 90-degree swivel case, volume control, and LED display.

What are the dimensions of the Sharp SPC033 LED Digital Alarm Clock?

The dimensions of the Sharp SPC033 LED Digital Alarm Clock are 6.25 inches in width and 4 inches in height.

What are the power sources for the Sharp SPC033 LED Digital Alarm Clock?

The Sharp SPC033 LED Digital Alarm Clock can be powered by both corded electric and batteries.

Which rooms is the Sharp SPC033 LED Digital Alarm Clock suitable for?

The Sharp SPC033 LED Digital Alarm Clock is suitable for use in the bedroom, living room, dining room, kitchen, kids' room, nursery, bathroom, and home office.

What type of watch movement does the Sharp SPC033 LED Digital Alarm Clock have?

The Sharp SPC033 LED Digital Alarm Clock has an automatic watch movement.

What is the operation mode of the Sharp SPC033 LED Digital Alarm Clock?

The operation mode of the Sharp SPC033 LED Digital Alarm Clock is electrical.

What is the price of the Sharp SPC033 LED Digital Alarm Clock?

The price of the Sharp SPC033 LED Digital Alarm Clock is \$16.99.

What should I do if my Sharp SPC033 LED Digital Alarm Clock is not displaying the time correctly?

Firstly, ensure that the power source, whether corded electric or batteries, is properly connected and functional. Try resetting the clock by unplugging it or removing the batteries for a few minutes and then reconnecting.

How can I fix it if the alarm on my Sharp SPC033 LED Digital Alarm Clock is not sounding at the set time?

Check if the alarm is properly set and that the volume is adjusted to an audible level. Ensure that the alarm switch is in the correct position. If using batteries, replace them with fresh ones.

What steps should I take if the brightness dimmer function of my Sharp SPC033 LED Digital Alarm Clock is not working?

Ensure that the brightness dimmer settings are properly adjusted. Check if there are any obstructions blocking the dimmer sensor. Try resetting the clock to its default settings.

Why is my Sharp SPC033 LED Digital Alarm Clock not responding to button presses?

Clean the buttons and surrounding areas to remove any dirt or debris that may be interfering with their function. Ensure that the buttons are not stuck or damaged.

How can I troubleshoot it if my Sharp SPC033 LED Digital Alarm Clock stops working suddenly?

Check if the power source is properly connected and that the batteries, if used, are not depleted. Try resetting the clock by unplugging it or removing the batteries for a few minutes.

What should I do if the alarm on my Sharp SPC033 LED Digital Alarm Clock is ringing too softly?

Adjust the volume control to increase the alarm volume. Ensure that the alarm is set to the desired time and that the alarm switch is activated.

DOWNLOAD THE PDF LINK: [Sharp SPC033 LED Digital Alarm Clock Instruction Manual](#)

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.