


SHARP
SPC182 LED ALARM
CLOCK



SHARP SPC182 LED Alarm Clock User Manual

[Home](#) » [Sharp](#) » SHARP SPC182 LED Alarm Clock User Manual 

Contents

- [1 SHARP SPC182 LED Alarm Clock User Manual](#)
- [2 Controls](#)
- [3 Connecting to the power supply](#)
- [4 Setting the Time](#)
- [5 Setting the Alarm](#)
- [6 Using the Alarm](#)
- [7 Using the Dimmer](#)
- [8 Using the Snooze](#)
- [9 USB Charging](#)
- [10 Battery Back Up](#)
- [11 Care of Your Clock](#)
- [12 FCC Information](#)
- [13 Digital Alarm Clock](#)
- [14 Safety Instructions](#)
- [15 References](#)


SHARP

SHARP SPC182 LED Alarm Clock User Manual



Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.

Controls

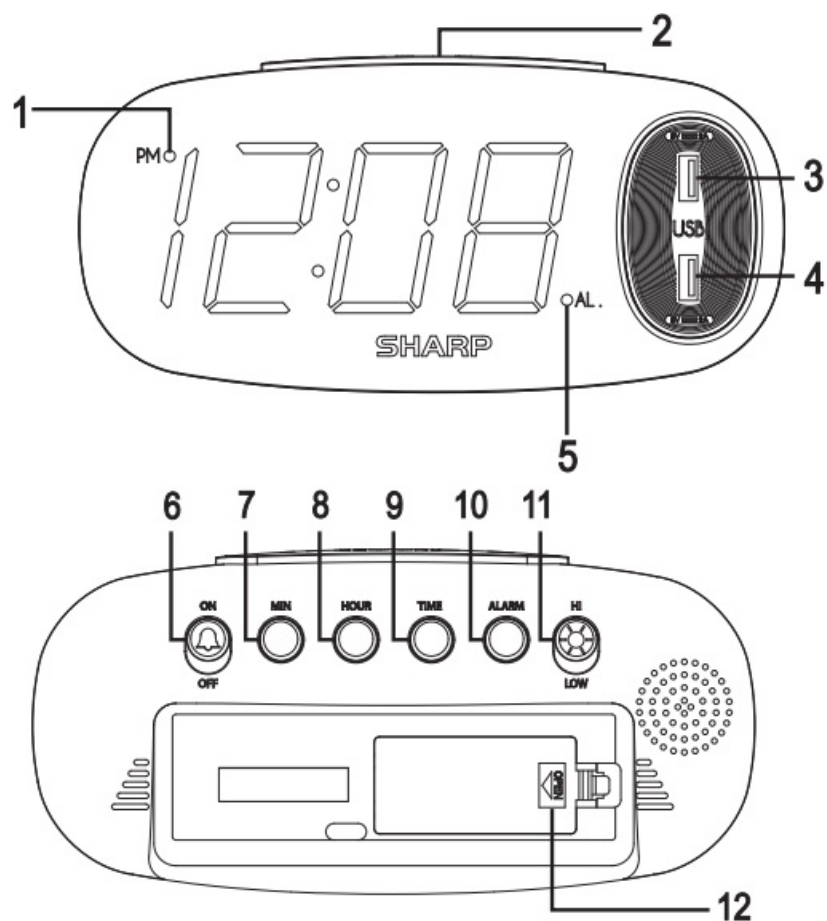

1. PM Indicator
2. SNOOZE Button
3. USB CHARGING PORT (2 AMP)
4. USB CHARGING PORT (2 AMP)
5. ALARM Indicator
6. ALARM ON/OFF Switch
7. MINUTE Button
8. HOUR Button

9. TIME Button
10. ALARM Button
11. DISPLAY DIMMER HI/LOW Switch
12. BATTERY Door

Connecting to the power supply

Begin by plugging in the power cord into a standard household outlet as indicated. The display will flash indicating the time is ready to be set.

Setting the Time

- Press and hold the TIME button down to activate time setting.
- While holding down the TIME button, press the HOUR button to advance to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- While holding down the TIME button, press the MINUTE button to advance to the correct minute.
- Release the TIME button when the correct time is shown on the display.
- Be careful setting the time. The PM indicator will appear on the upper left corner of the display when the time is past 11:59 A.M.

Setting the Alarm

- Press and hold the ALARM set button down to activate alarm setting.
- While holding down the ALARM button, press the HOUR button to advance to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- While holding down the ALARM button, press the MINUTE button to advance to the correct minute.
- Release the TIME button when the correct alarm time is shown on the display.

Using the Alarm

- Slide the ALARM ON/OFF switch to on ON position to activate the alarm and the alarm indicator will light.
- Slide the ALARM ON/OFF switch to OFF position to deactivate the alarm and the alarm indicator will no longer be visible.

Using the Dimmer

Slide the DISPLAY DIMMER HI/LOW switch to select the brightness of the LED display.

Using the Snooze

Press the SNOOZE button after the alarm sounds will cause the alarm to stop and the alarm will sound again in 9 minutes. This will happen each time the SNOOZE button is pressed.

USB Charging

To charge, connect your USB device to the USB port of this clock.

NOTE:

- Use only with devices that require 5V USB power.
- USB port provides a 2,000mA recharging current. Devices requiring more than 2,000mA should not be used.
- Charging time may vary for different devices.

Battery Back Up

- Remove the BATTERY COVER on the bottom of the case, insert 2 new “AAA” batteries (not included) in the direction of polarity symbols.
- Close the battery compartment by turning the battery cover counter-clock wise.

NOTE:

- Press button cannot work if only using backup battery.
- During a power failure, the display will not be lit. However, the time & alarm time will be stored and will continue to function.

Care of Your Clock

- Replace the back up battery annually, or store the clock without a battery.
- When not in use. A soft cloth or a paper towel may be used to clean your clock.
- Do not use any corrosive cleanser or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

Battery Warning

- Clean the battery contacts and also those of the device prior to battery installation.
- Follow the polarity (+) & (-) to place battery.
- Don't mix old and new batteries.
- Don't mix Alkaline, Standard (Carbon-Zinc), or Rechargeable (Nickel-Cadmium) batteries.
- Incorrect battery placement will damage the clock movement and battery may leak.
- Exhausted battery is to be removed from the product.
- Remove batteries from equipment which is not to be used for an extended period of time.
- Don't dispose of batteries in fire. Batteries may explode or leak.

FCC Information

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user

is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Digital Alarm Clock

This lightning flash and arrowhead within the triangle is a warning sign alerting you of “dangerous voltage” inside the product.

CAUTION: RISK OF ELECTRIC SHOCK

- DO NOT OPEN
- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (ON BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

Please read this before operating your unit.

Safety Instructions

1. **Read these instructions** – All the safety and operating instructions should be read before this product is operated.
2. **Keep these instructions** – The safety and operating instructions should be retained for future reference.
3. **Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow all instructions** – All operating and use instructions should be followed.
5. **Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for the replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as a power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Please keep the unit in a good ventilation environment.
16. **CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

WARNING:

- The mains plug is used as a disconnect device, the disconnect device shall remain readily operable. This equipment is a Class II or double-insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth. Do not install this equipment in a confined or building-in space such as a bookcase or similar unit, and remain a well ventilation condition. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- All above markings were located on the external enclosure of the apparatus, except for label of Date Code was pasted inside the battery compartment. The apparatus shall not be exposed to dripping or splashing and objects filled with liquids, such as vases, shall not be placed on the apparatus.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

WARNING: The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Download PDF: [SHARP SPC182 LED Alarm Clock User Manual](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.