

SHARP
SPC232 DIGITAL ALARM
CLOCK SLEEP SOUNDS



SHARP SPC232 Digital Alarm Clock Sleep Sounds User Manual

[Home](#) » [Sharp](#) » SHARP SPC232 Digital Alarm Clock Sleep Sounds User Manual 

Contents

- [1 SHARP SPC232 Digital Alarm Clock Sleep Sounds User Manual](#)
- [2 Controls](#)
- [3 Power Supply](#)
- [4 Setting The Time](#)
- [5 Setting The Alarm 1/2](#)
- [6 Using Alarm 1/2](#)
- [7 Choosing Your Wakeup Sound](#)
 - [7.1 Using The Snooze](#)
 - [7.2 Playing Soothing Sounds](#)
 - [7.3 Setting Sleep Function: Soothing Sounds](#)
 - [7.4 Using The Dimmer](#)
 - [7.5 Battery Backup](#)
 - [7.6 Care For Your Clock](#)
 - [7.7 Digital Alarm Clock](#)
 - [7.8 FCC Information](#)
 - [7.9 Safety Instructions](#)
 - [7.10 References](#)
- [8 Related Posts](#)

 
 
SHARP

 
SHARP SPC232 Digital Alarm Clock Sleep Sounds User Manual



Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.

Controls

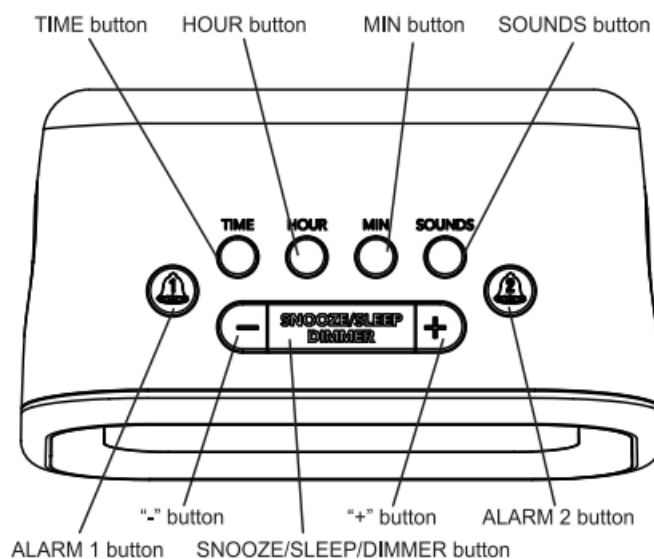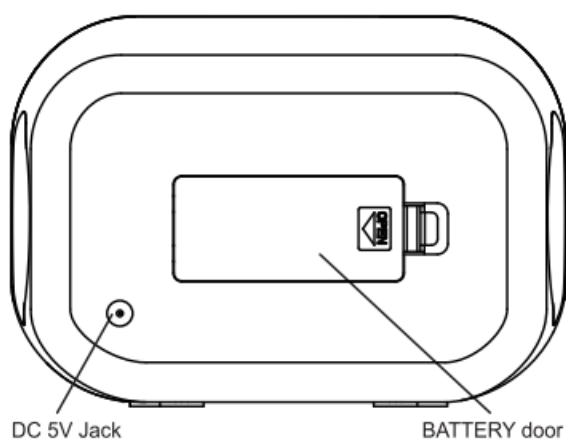

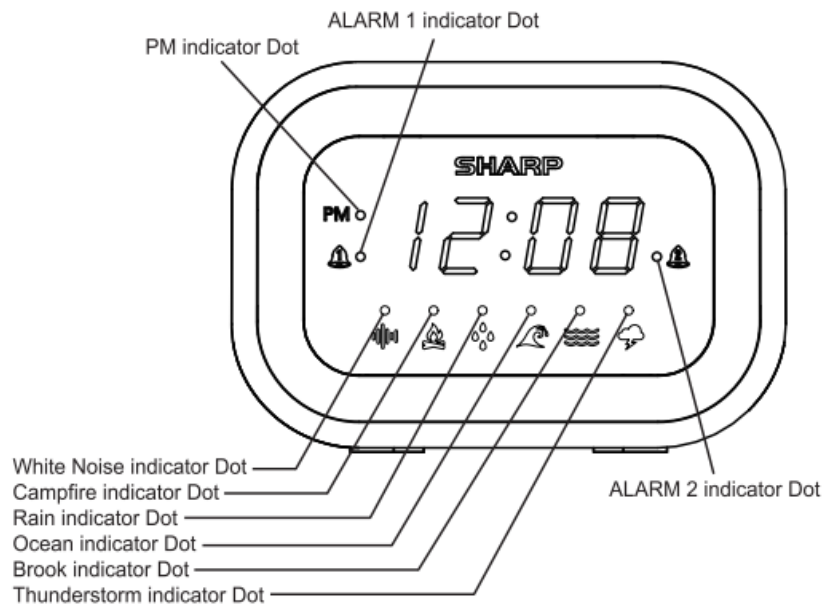

Power Supply

Insert the AC adaptor into a 120V AC ~ 60Hz mains outlet and the other end of cord into the DC 5V Jack on the back of the unit.

Setting The Time

- Press and hold the TIME button down to activate time setting.
- While holding down the TIME button, press the HOUR button to advance to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- While holding down the TIME button, press the MIN button to advance to the correct minute.
- Release the TIME button when the correct time is shown on the display.

Setting The Alarm 1/2

- Press and hold the ALARM 1/2 button down to activate alarm 1 setting.
- While holding down the ALARM 1/2 button, press the HOUR button to advance to the correct hour. The PM Indicator Dot will light when the hour is advanced into the PM time.
- While holding down the ALARM 1/2 button, press the MIN button to advance to the correct minute.
- Release the ALARM 1/2 button when the correct alarm time is shown on the display.

Using Alarm 1/2

- Press the ALARM 1/2 button, the ALARM 1/2 indicator dot will be lit and the alarm 1/2 will sound at the preset time.
- Press the ALARM 1/2 button again, the ALARM 1/2 Indicator dot will no longer be visible.
- The alarm will sound for 1 minute at the programmed time.

NOTE: The default is OFF setting.

Choosing Your Wakeup Sound

- After setting the alarm Press the SOUNDS button to cycle through which sound you prefer to wake to. (Beep / White Noise / Campfire / Rain / Ocean / Brook / Thunderstorm)
- When you have found your preferred sound press the SNOOZE/SLEEP/DIMMER button to confirm. Your saved sound indicator dot will be shown on the display, if no indicator dot is shown above the sound icons the alarm will sound to the default beep.

NOTE: Your last played sound will be used as your alarm sound.

Using The Snooze

- Pressing the SNOOZE/SLEEP/DIMMER button when the wake-up alarm is sounding will cause the alarm to pause and the alarm will sound again in 9 minutes.
- This will happen each time when the SNOOZE/SLEEP/DIMMER button is pressed.

Playing Soothing Sounds

- Press the SOUNDS button to play a soothing sleep sound.
- Press the SOUNDS button again to cycle through other sounds. (Beep / White Noise / Campfire / Rain / Ocean / Brook / Thunderstorm)
- While sound is playing you can use the“-” or“+” buttons to adjust sound volume.
- Turn off, and press the SNOOZE/SLEEP/DIMMER button.

Setting Sleep Function: Soothing Sounds

- While sound is playing, press and hold the SNOOZE/SLEEP/DIMMER button for 2 seconds to enter sleep mode at 60 minutes countdown.
- Press the“-” or“+” buttons again to select countdown time (60 – 45 – 30 – 15 – Off, mins).
- Turn off, press SNOOZE/SLEEP/DIMMER button again.

NOTE: When sleep time is done being adjusted it will switch back to time after 5 seconds.

Using The Dimmer

While the alarm is not sounding, press the SNOOZE/SLEEP/DIMMER button to control the brightness of the clock display.

NOTE: Three steps dimmer control (HIGH / MIDDLE / LOW), The default is HIGH setting.

Battery Backup

- Remove the BATTERY DOOR and insert 2 new “AAA” batteries (not included) in the direction of the polarity symbols.
- Please make sure the batteries are new and inserted correctly (alkaline batteries are recommended).

- The battery will hold the ALARM and TIME settings if the power is interrupted. There will be no display under battery power and the ALARM will sound at the correct time. If there is no battery and the power is interrupted, the display will flash 12:00 and the ALARM / TIME will need to be reset.

Care For Your Clock

The batteries should be replaced if the display or alarm becomes weak or dysfunctional. Store the clock without batteries when not in use. A soft cloth or a paper towel may be used to clean your clock. Do not use any corrosive cleaner or chemical solution on the clock. Keep the clock clean and dry to avoid problems.

Digital Alarm Clock

This lightning flash and arrowhead within the triangle is a warning signaling you of “dangerous voltage” inside the product.

CAUTION

- RISK OF ELECTRIC SHOCK DO NOT OPEN
- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (ON BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

Please read this before operating your unit.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Safety Instructions

1. **Read these instructions** – All the safety and operating instructions should be read before this product is operated.
2. **Keep these instructions** – The safety and operating instructions should be retained for future reference.
3. **Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow all instructions** – All operating and use instructions should be followed.
5. **Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings, Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for the replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Please keep the unit in a good ventilation environment.
16. **CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

WARNING:

- The mains plug is used as a disconnect device, the disconnect device shall remain readily operable. This equipment is a Class II or double-insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth. Do not install this equipment in a confined or building-in space such as a bookcase or similar unit, and remain a good ventilation condition. The ventilation should not be

impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.

- All the above markings were located on the external enclosure of the apparatus, except for the label of Date Code was pasted inside the battery compartment. The apparatus shall not be exposed to dripping or splashing and objects filled with liquids, such as vases, shall not be placed on the apparatus.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: The battery shall not be exposed to excessive heat such as sunshine, fire, or the like.

Download PDF: [SHARP SPC232 Digital Alarm Clock Sleep Sounds User Manual](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.