

SHARP
SPC500 LCD DIGITAL
ALARM CLOCK



SHARP SPC500 LCD Digital Alarm Clock User Manual

[Home](#) » [Sharp](#) » SHARP SPC500 LCD Digital Alarm Clock User Manual 

Contents

- 1 SHARP SPC500 LCD Digital Alarm Clock User Manual
- 2 Controls
- 3 Power Supply
- 4 Setting the Time
- 5 Setting the Alarm
- 6 Using the Alarm
- 7 Activating the SNOOZE function
- 8 Backlight Feature
- 9 Care of Your Clock
- 10 FCC Information
- 11 References


SHARP

SHARP SPC500 LCD Digital Alarm Clock User Manual



Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.

Controls

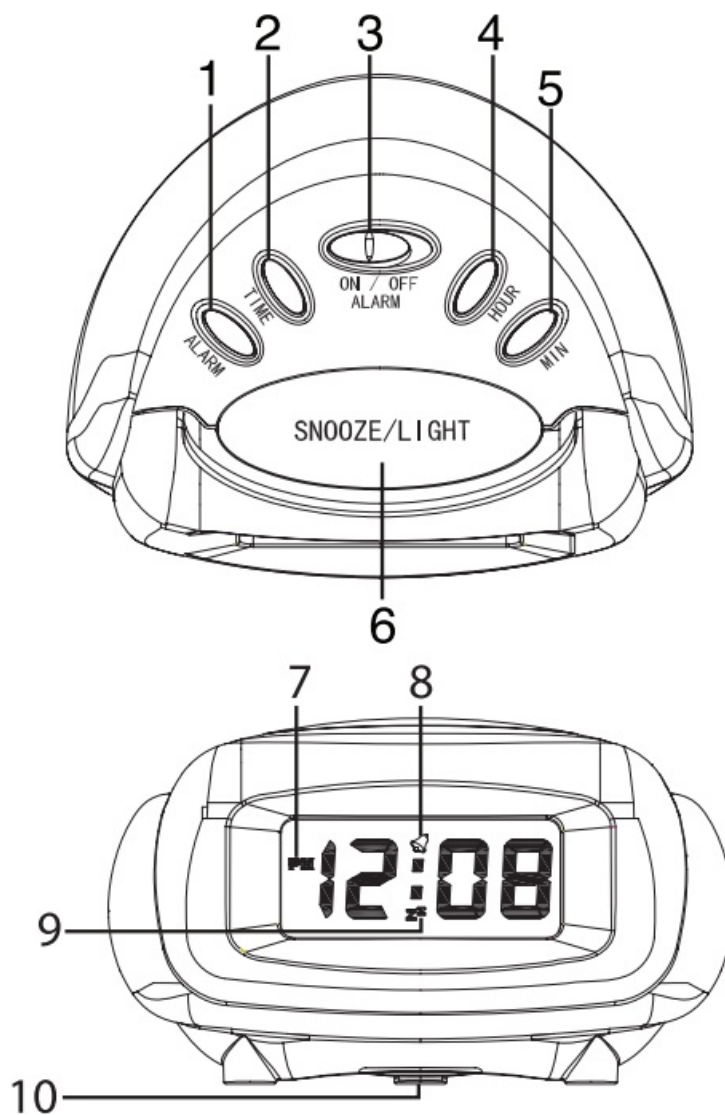

1. ALARM Button

2. TIME Button
3. ALARM ON/OFF Button
4. HOUR Button
5. MINUTE Button
6. SNOOZE Button
7. PM Indicator
8. ALARM Indicator
9. SNOOZE Indicator
10. BATTERY Door

Power Supply

- This clock operates on 2 “AAA” batteries (not included). Remove the BATTERY DOOR and insert 2 new “AAA” batteries in the direction of the polarity symbols.
- Make sure the batteries are new and inserted correctly.

Setting the Time

- Press and hold the TIME button down to activate time setting.
- While holding down the TIME button, press the HOUR button to advance to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- While holding down the TIME button, press the MINUTE button to advance to the correct minute.
- Release the TIME button when the correct time is shown on the display.
- Be careful setting the time. The PM indicator dot will appear in the upper left corner of the display when the time is past 11:59 AM.

Setting the Alarm

- Press and hold the ALARM button down to activate time setting.
- While holding down the ALARM button, press the HOUR button to advance to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- Hold down the ALARM button and then press MINUTE button to set the correct minute.
- Release the ALARM button when the correct alarm time is shown on the display.
- Be careful setting the time. The PM indicator dot will appear in the upper left corner of the display when the time is past 11:59 AM.

Using the Alarm

- Slide the ALARM ON/OFF switch to the ON position. On the front of the clock the ALARM INDICATOR will be lit.



- Slide the ALARM ON/OFF switch to the OFF position to deactivate the alarm. The ALARM INDICATOR dot will no longer be visible.



Activating the SNOOZE function

Pressing the SNOOZE/LIGHT after the wake-up alarm sounds will cause the alarm to stop and the alarm will sound again in 5 minutes. This will repeat each time the SNOOZE/LIGHT button is pressed. The snooze indicator "Zz" will flash to confirm function is activated.

Backlight Feature

Press the SNOOZE/LIGHT button to illuminate display backlight five seconds for your night viewing.

Care of Your Clock

- Replace the back up battery annually, or store the clock without a battery.
- When not in use. A soft cloth or a paper towel may be used to clean your clock.
- Do not use any corrosive cleanser or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

Battery Warning

- Clean the battery contacts and also those of the device prior to battery installation.
- Follow the polarity (+) & (-) to place battery.
- Don't mix old and new batteries.
- Don't mix Alkaline, Standard (Carbon-Zinc), or Rechargeable (Nickel-Cadmium) batteries.
- Incorrect battery placement will damage the clock movement and battery may leak.
- Exhausted battery is to be removed from the product.
- Remove batteries from equipment which is not to be used for an extended period of time
- Don't dispose of batteries in fire. Batteries may explode or leak.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Download PDF: [SHARP SPC500 LCD Digital Alarm Clock User Manual](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.