

**SHARP**

SHARP SPC844 QUARTZ  
ANALOG ALARM  
CLOCK



## SHARP SPC844 Quartz Analog Alarm Clock User Manual

[Home](#) » [Sharp](#) » SHARP SPC844 Quartz Analog Alarm Clock User Manual 

### Contents

- [1 SHARP SPC844 Quartz Analog Alarm Clock User Manual](#)
- [2 Controls](#)
- [3 Installing or Replacing the Battery](#)
- [4 Setting The Time](#)
- [5 Setting The Alarm Time](#)
- [6 Turning Alarm ON/OFF](#)
- [7 Activating The SNOOZE Function](#)
- [8 Backlight On Demand](#)
- [9 Care Of Your Clock](#)
- [10 FCC Information](#)
- [11 References](#)


**SHARP**

SHARP SPC844 Quartz Analog Alarm Clock User Manual



Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.

## Controls

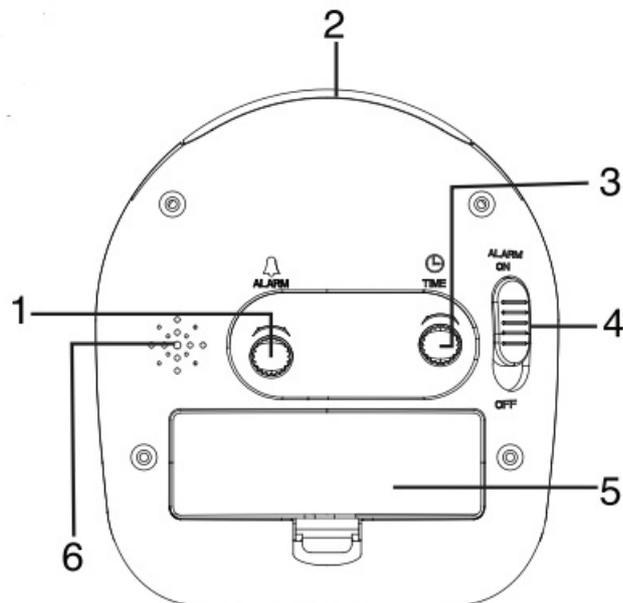

1. ALARM SET DIAL
2. SNOOZE/ LIGHT
3. TIME SET DIAL
4. ALARM ON/OFF
5. BATTERY COMPARTMENT
6. SPEAKER

## Installing or Replacing the Battery

- Begin by opening the BATTERY COMPARTMENT cover at the back of the clock.
- Insert 1 " AA" battery (not included) into the BATTERY COMPARTMENT. Make sure the polarity is correct by following the (+ or -) symbols engraved inside.
- Replace the BATTERY COMPARTMENT cover by snapping it back into place on the back of the clock.
- If the clock does not operate, steadily loses time, or if the alarm sounds weak, this indicates that the battery is low and should be replaced.

## **Setting The Time**

Turn the TIME SETTING knob counter clockwise to set the HOUR and MINUTE hands to the desired time.

## **Setting The Alarm Time**

Turn the ALARM SETTING knob counter clockwise to set the HOUR and MINUTE hands to the desired time.

## **Turning Alarm ON/OFF**

- To activate the alarm, push the ALARM ON/OFF switch to the up position.
- To deactivate the alarm, push the ALARM ON/OFF switch to the down position.

## **Activating The SNOOZE Function**

- The alarm sound can be stopped and repeated four (4) minutes later when the SNOOZE/LIGHT button is pushed.

## **Backlight On Demand**

- The dial can be illuminated at any time by pressing and holding down the SNOOZE/ LIGHT button.
- The light will only stay on when the SNOOZE/ LIGHT button is pressed.

## **Care Of Your Clock**

- Replace the back up battery annually, or store the clock without a battery when not in use. Do not open the back case of the clock as you may damage the clock movement. A soft cloth or a paper towel may be used to clean your clock.
- Do not use any corrosive cleanser or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

## **Battery Warning**

- Clean the battery contacts and also those of the device prior to battery installation.
- Follow the polarity (+) & (-) to place battery.
- Don't mix old and new batteries.
- Don't mix Alkaline, Standard (Carbon-Zinc), or Rechargeable (Nickel-Cadmium) batteries.
- Incorrect battery placement will damage the clock movement and battery may leak.

- Exhausted battery is to be removed from the product.
- Remove batteries from equipment which is not to be used for an extended period of time.
- Don't dispose of batteries in fire. Batteries may explode or leak.

## FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

### Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

**Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Download PDF:** [SHARP SPC844 Quartz Analog Alarm Clock User Manual](#)

## References

- [User Manual](#)

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.