



## SHARP SJ-BA10DMXBE-EU No Frost System Bottom Freezer User Manual

[Home](#) » [Sharp](#) » SHARP SJ-BA10DMXBE-EU No Frost System Bottom Freezer User Manual 

## Contents

- 1 SHARP SJ-BA10DMXBE-EU No Frost System Bottom Freezer
- 2 Installation Information
  - 2.1 Before using your fridge freezer
  - 2.2 Information about new generation cooling technology
- 3 YOWUR FRIDGE FREEZER
  - 3.1 Fresh Food Compartment Fridge
  - 3.2 Freezer Compartment Freezer
- 4 USING YOUR FRIDGE FREEZER
  - 4.1 Display and Control Panel Using the Control Panel.
  - 4.2 Operating your Fridge Freezer Lighting If available
- 5 Freezer Temperature Settings
  - 5.1 Cooler Temperature Settings
  - 5.2 Super Freeze Mode
  - 5.3 During Super Freeze Mode
- 6 Recommended Settings for the Freezer and Cooler Compartment Temperature
  - 6.1 Door open alarm function
  - 6.2 Important installation instructions
- 7 Temperature indicator
- 8 Accessories
  - 8.1 Freezer box
  - 8.2 Freezer boxes
  - 8.3 Removing the Chill Drawer
  - 8.4 Humidity Controller
- 9 Adapti Lift Door Shelf (In some models)
  - 9.1 To change the position of Adapti-Lift
  - 9.2 Adapti-Shelf In some models
- 10 Make sure that your fridge is unplugged while cleaning
  - 10.1 Defrosting
  - 10.2 Replacing LED Lighting
- 11 FOOD STORAGE GUIDANCE
  - 11.1 Refrigerator compartment
  - 11.2 Freezer compartment
- 12 DOOR REVERSAL
  - 12.1 Repositioning the door
- 13 TROUBLESHOOTING
  - 13.1 If your fridge is not operating
  - 13.2 If your fridge is not cooling enough
  - 13.3 If the food in your refrigerator compartment is over cooled
  - 13.4 If your fridge is operating too loudly
  - 13.5 If the noises persist;
  - 13.6 Normal Noises
  - 13.7 If humidity builds up inside the fridge;
  - 13.8 If the doors are not opened and closed properly
  - 13.9 If the edges of fridge cabinet that the door joint contact are warm
- 14 TIPS FOR SAVING ENERGY
- 15 TECHNICAL DATA
- 16 Documents / Resources
  - 16.1 References
- 17 Related Posts

The SHARP logo is displayed in a bold, red, sans-serif font. The letters are thick and closely spaced, with a slight shadow effect behind them.



## GENERAL WARNINGS

- Keep the ventilation openings of the Fridge clear from obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process.
- Do not use other electrical appliances inside the Fridge.
- Do not damage the refrigerant circuit.
- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- To avoid personal injury or damage this appliance must be installed in accordance with the manufacturer instructions.
- The small quantity of refrigerant used in this fridge is ecofriendly R600a (an isobutene) and is flammable and explosive if ignited in enclosed conditions.
- While carrying and positioning the fridge, do not damage the cooler gas circuit.
- Do not store any containers with flammable materials, such as spray cans or fire extinguisher refill cartridges in the vicinity of the fridge.
- This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments which can be equated with ordinary household farm houses and by clients in hotels, motels and other residential type environments which can be equated with ordinary household bed and breakfast type environments which can be equated with ordinary household catering and similar non-retail applications which can be equated with ordinary household
- Your fridge requires a 220-240V, 50Hz mains supply.

- Do not use any other supply. Before connecting your fridge, ensure that the information on the data plate voltage and connected load matches the mains electricity supply.
- If in doubt, consult a qualified electrician.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazard involved. Children shall not play with the appliance.
- Cleaning and user maintenance, shall not be made by children without supervision.
- Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
- Children are not expected to perform cleaning or user maintenance of the appliance, very young children 0-3 years old are not expected to use appliances, young children 3-8 years old are not expected to use appliances safely unless continuous supervision is given, older children 8-14 years old and vulnerable people can use appliances safely after they have been given appropriate supervision or instruction concerning use of the appliance.
- Very vulnerable people are not expected to use appliances safely unless continuous supervision is given.
- A damaged power cord /plug can cause fire or give you an electric shock.
- When damaged it must be replaced, this should only be done by qualified personnel.
- This appliance is not intended for use at altitudes exceeding 2000 m.

To avoid contamination of food, please respect the following instructions

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre frozen food, storing or making ice cream and making ice cubes.
- One, two- and three-star compartments are not suitable for the freezing of fresh food.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

### **Disposal**

All packaging and materials used are environmentally friendly and recyclable. Please dispose of any packaging in an environmentally friendly manner. Consult your local council for further details. When the appliance is ready to be scrapped, cut off the electrical supply cable and destroy the plug and cable. Disable the door catch in order to prevent children getting trapped inside. A cut-off plug inserted into a 16 amp socket is a serious safety shock hazard. Please ensure the cut-off plug is disposed of safely.

### **For Denmark products**

The appliance is equipped with a plug approved in the EU Schuko Plug and can be used in Finland, Norway and Sweden. In Denmark, the appliance is only approved for use with a wall outlet type E or type CEE7 // 7-S with a ground leg. If there is only wall outlet type K at the connection point, Replacing EU-Schuko plug with the Danish plug must be performed by only an authorized service personnel. Alternatively, connect a suitable and approved power adapter to transition between Schuko plug and Danish earth system. This adapter (min. 10 amps and up to max. 13 amps) can be ordered via a well assorted whitegoods dealer or authorized electrician. Only with one of

these methods it can be ensured that the appliance is the correct safety ground. In the absence of earthing installation, an authorised electrician should carry out an earthing installation. In the case of use without earthing installed, we will not be responsible for any loss of use that may occur.


### **Disposal of your old appliance**

This symbol on the product or package shows that the product should not be treated as domestic waste. Instead, it should be taken to applicable waste collection sites that recycle electrical and electronic equipment. Recycling materials will help preserve our natural resources. For more detailed information regarding recycling this product, please contact your local authority, domestic waste disposal service, or the shop where you purchased the product. Please ask your local authority about the disposal of WEEE for reuse, recycle and recovery purposes.

### **Safety warnings**

Do not use an extension cord to connect your fridge freezer to the mains electricity supply. Do not use plug adapter. A damaged power cord / plug can cause fire or give you an electric shock. If damaged it must be replaced; this should only be done by qualified personnel. Never kink the power cord. Never touch the power cord / plug with wet hands as this could cause electric shock. Do not place glass bottles or beverage cans in the freezer compartment. Bottles or cans may explode. When removing ice made in the freezer compartment, do not touch it because it may cause frostbite and/or cuts due to ice formed with sharp edge. Do not remove items from the freezer if your hands are damp or wet. This could cause skin abrasions or frostbite. Do not refreeze food once it has thawed.

### **Installation Information**

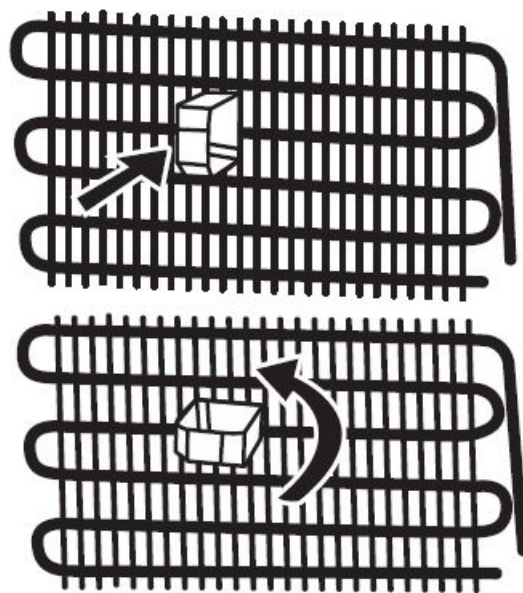

Before unpacking and manoeuvring your fridge freezer please take some time to familiarise yourself with the following points.

- Position your fridge freezer out of direct sunlight and away from any heat source such as a radiator.
- Your appliance should be at least 50 cm away from stoves, gas ovens and heater cores, and should be at least 5 cm away from electrical ovens.
- Do not expose your fridge freezer to moisture or rain.
- Your fridge freezer should be positioned at least 20mm away from another freezer.
- Clearance of at least 150 mm is required at the top of your appliance. Do not place anything on top of your appliance.
- For safe operation, it is important that your fridge freezer is seated securely and balanced. The adjustable feet

are used to level your fridge freezer.


- Make sure that your appliance is level before placing any foodstuffs inside it.
- We recommend that you wipe all shelving and trays with a cloth soaked in warm water mixed with a teaspoon of bicarbonate of soda before use.
- After cleaning, rinse with warm water and dry.
- Install using the plastic distance guides, which can be found at the rear of the appliance.
- Turn 90 degrees (as shown in the diagram). This will keep the condenser from touching the wall.
- Refrigerator should be placed against a wall with a free distance not exceeding 75 mm.

#### **Before using your fridge freezer**



Before setting up your fridge freezer, check for any visible damage. Do not install or use your fridge freezer if it is damaged. When using your fridge freezer for the first time, keep it in an upright position for at least 3 hours before plugging into the mains. This will allow efficient operation and prevent damage to the compressor. You may notice a light odour when using your fridge freezer for the first time. This is perfectly normal and will fade away as the fridge starts to cool.

#### **Information about new generation cooling technology**

Fridge freezers with new-generation cooling technology have a different working system than static fridge freezers. In normal fridge freezers, humid air entering the freezer and the water vapour emanating from the foods, turns into frost in the freezer compartment. In order to melt this frost, in other words defrost, the fridge has to be unplugged. In order to keep foods cold during the defrosting period, the user must store the food elsewhere and the user must clear the remaining ice and accumulated frost. The situation is completely different in freezer compartments equipped with new-generation cooling technology. With the aid of fan, cold and dry air is blown throughout the freezer compartment. As a result of the cold air that is blown easily throughout the compartment even in the spaces between shelves foods are frozen equally and properly. And there will be no frost. The configuration in the refrigerator compartment will be nearly same as the freezer compartment. Air emitted by the fan located at the top of refrigerator compartment is cooled while passing through the gap behind the air duct. At the same time, air is blown out through the holes on the air duct so that cooling process is successfully completed in the refrigerator compartment. Holes on the air duct are designed for even air distribution throughout the compartment. Since no air passes between the freezer and refrigerator compartment, odours will not mix. As a result, your fridge with new-generation cooling technology is easy to use and it offers you an access to a huge volume and aesthetic appearance.

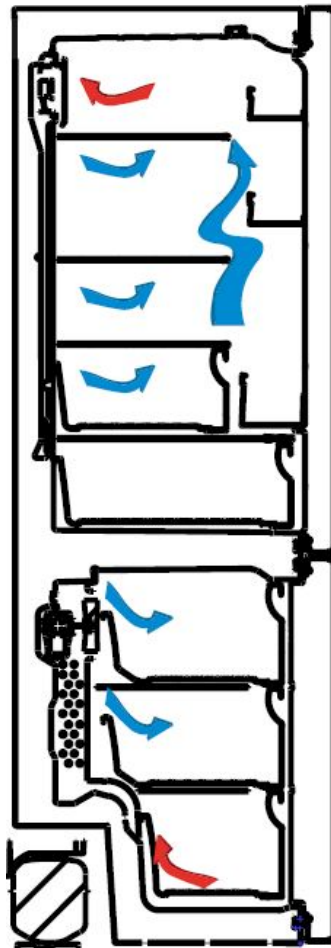

## YOWUR FRIDGE FREEZER

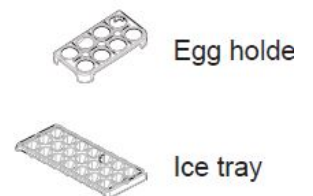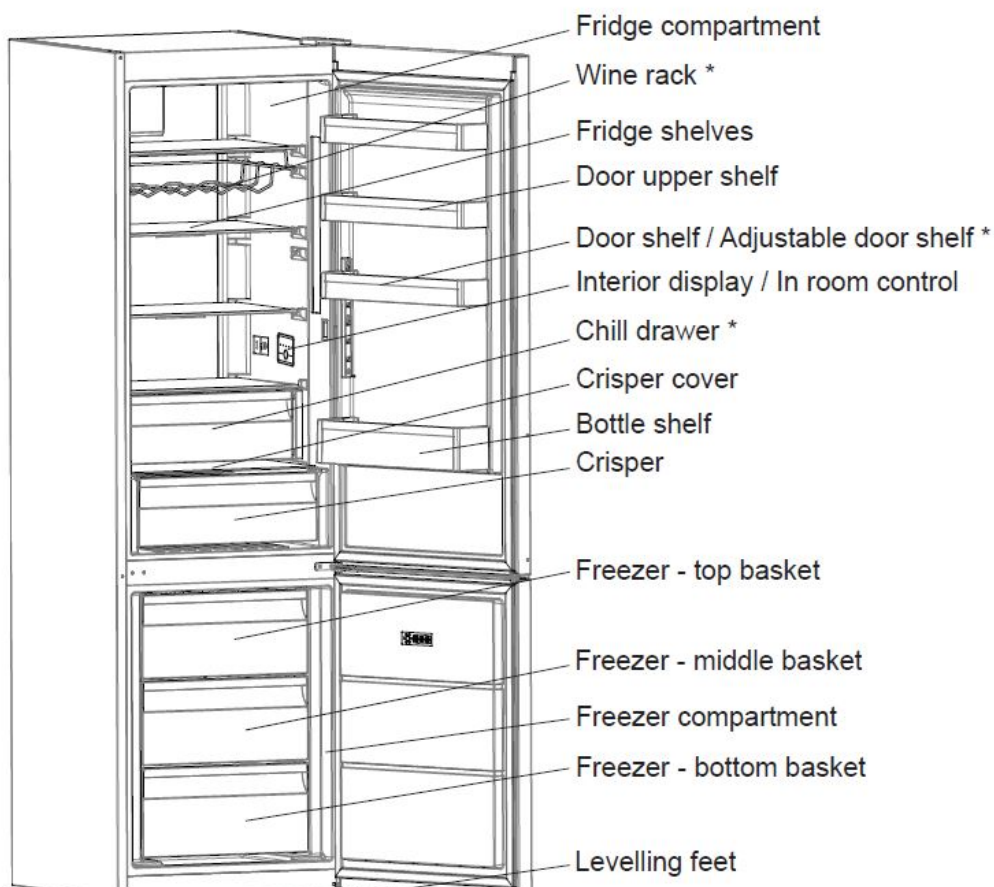

Egg holde

Ice tray

This figure has been drawn for informational purposes to show the various parts and accessories in the appliance. Parts may vary according to the appliance model. This appliance is not intended to be used as a built in

appliance.

## General notes

### Fresh Food Compartment Fridge

Most efficient use of energy is ensured in the configuration with the drawers in the bottom part of the appliance, and shelves evenly distributed, position of door bins does not affect energy consumption.


### Freezer Compartment Freezer

Most Efficient use of energy is ensured in the configuration with the drawers and bins are on stock position.

## USING YOUR FRIDGE FREEZER

### Display and Control Panel Using the Control Panel.

1. Enables the setting of the freezer.
2. Enables the setting of the cooler.
3. Freezer set value screen.
4. Cooler set value screen.
5. Economy mode symbol.
6. Super freeze symbol.
7. Alarm symbol.

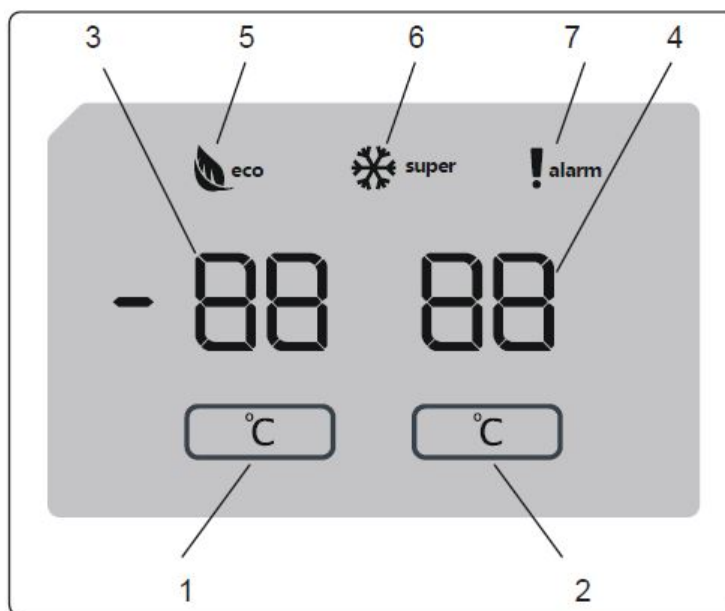

### Operating your Fridge Freezer Lighting If available

When the product is plugged in for the first time, the interior lights may turn on 1 minute late due to opening tests. Once you have plugged in the product, all symbols will be displayed for 2 seconds and the initial values will be shown as -18 °C on the freezer adjustment indicator, and +4 °C on the fridge adjustment indicator.

## Freezer Temperature Settings



The initial temperature value for the freezer setting indicator is -18 °C. Press the freezer set button once. When you first press the button, the previous value will blink on the screen. Whenever you press the same button, a lower temperature will be set (-16 °C, -18 °C, -20 °C, -22 °C or -24 °C. If you continue to press the button, it will restart from -16 °C.

#### **NOTE**

Eco mode gets activated automatically when the temperature of the freezer compartment is set to -18°C.

#### **Cooler Temperature Settings**

The initial temperature value for the cooler setting indicator is +4 °C. Press the cooler button once. Whenever you press the button, a lower temperature will be set +8 °C, +6 °C, +5 °C, +4°C, or +2 °C. If you continue to press the button, it will restart from +8 °C.

#### **Super Freeze Mode**

##### **Purpose**

- To freeze a large quantity of food that cannot fit on the fast freeze shelf.
- To freeze prepared foods.
- To freeze fresh food quickly to retain freshness.
- How to use
  - To enable the super freeze mode, press and hold the freezer temperature setting button for 3 seconds.
  - Once the super freeze mode has been set, the super freeze symbol on the indicator will be lit and the machine will beep to confirm the mode has been switched on.

##### **During Super Freeze Mode**

The temperature of the Cooler may be adjusted. In this case, Super Freeze mode will continue. Economy mode cannot be selected. Super Freeze mode can be cancelled in the same way it is selected.

#### **Notes**

The maximum amount of fresh food (in kilograms) that can be frozen within 24 hours is shown on the appliance label. For optimal appliance performance in maximum freezer capacity, activate super freeze mode 3 hours before you put fresh food into the freezer. Super freeze mode will automatically cancel after 24 hours or when the freezer sensor temperature drops below -32 °C.

#### **Recommended Settings for the Freezer and Cooler Compartment Temperature**

Freezer Compartment	Cooler Compartment	Remarks
-18 °C	4 °C	For regular use and best performance.
-20 °C, -22 °C or -24 °C	4 °C	Recommended when environmental temperature exceeds 30 °C.
Super Freeze mode	4 °C	Must be used when you wish to freeze food in a short period of time.
-18 °C, -20 °C, -22 °C or -24 °C	2 °C	These temperature settings must be used when the environmental temperature is high or if you think the refrigerator compartment is not cool enough because the door is being opened frequently.

#### Door open alarm function

If cooler or freezer door is opened more than 2 minutes appliance sounds beep beep.

#### Warnings About Temperature Adjustments

- It is not recommended that you operate your fridge in environments colder than 10°C.
- Temperature adjustments should be made according to the frequency of door openings, the quantity of food kept inside the fridge and ambient temperature of the placement of your fridge.
- Your fridge should be operated up to 24 hours according to the ambient temperature without interruption after being plugged in, this is so it is completely cooled. Do not open the doors of your fridge and do not place food inside it during this period.
- A 5 minute delay function is applied to prevent damage to the compressor of your fridge, when you take the plug out and then plug it back in again after an energy breakdown has occurred. Your fridge will start to operate normally after 5 minutes.

- Your fridge is designed to operate in the ambient temperature intervals stated in the standards, according to the climate class stated in the information label. We do not recommend operating your fridge out of the stated temperatures value limits in terms of cooling effectiveness.
- This appliance is designed for use at an ambient temperature within the 10°C – 43°C range.
- Climate class and meaning:
  - T (tropical): This refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C.
  - ST (subtropical): This refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C.
  - N (temperate): This refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C.
  - SN (extended temperate): This refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C.

### **Important installation instructions**

This appliance is designed to work in difficult climate conditions up to 43 degrees C or 110 degrees F and is powered with 'Freezer Shield' technology which ensures that the frozen food in the freezer will not defrost even if the ambient temperature falls as low as -15 °C. So you may then install your appliance in an unheated room without having to worry about frozen food in the freezer being spoilt. When the ambient temperature returns to normal, you may continue using the appliance as usual.


### **Temperature indicator**

In order to help you better set your refrigerator, we have equipped it with a temperature indicator located in the coldest area. To better store the food in your refrigerator, especially in the coldest area, make sure the message OK appears on the temperature indicator. If « OK » does not appear, this means temperature has not been set properly. It may be difficult to see the indicator, make sure it is properly lit. Each time the temperature setting device is changed, wait for the stabilisation of the temperature inside the appliance before proceeding, if necessary, with a new temperature setting. Please change the position of the temperature setting device progressively and wait at least 12 hours before starting a new check and potential change.

### **NOTE**

Following repeated openings (or prolonged opening) of the door or after putting fresh food into the appliance it is normal for the indication "OK" not to appear in the temperature setting indicator. If there is an abnormal build up of ice crystals on the bottom wall of the appliance or the refrigerator compartment, evaporator overloaded appliance, high room temperature, frequent door openings, put the temperature setting device on a lower position until compressor off periods are obtained again. Store food in the coldest area of the refrigerator.

Your foods will be better stored if you put them in the most appropriate cooling area. The coldest area is just above the crisper. The following symbol indicates the coldest area of your refrigerator. To be sure to have a low temperature in this area, make sure the shelf is located at the level of this symbol, as shown in the illustration. The upper limit of the coldest area is indicated by the lower side of the sticker head of the arrow. The coldest area upper shelf must be at the same level with the arrow head. The coldest area is below this level.

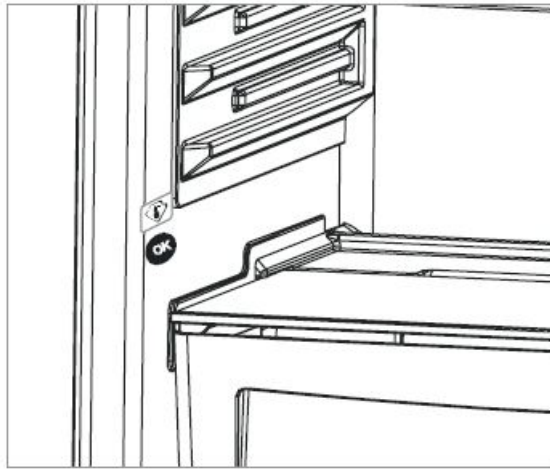

As these shelves are removable, make sure they are always at the same level with these zone limits described on the stickers, in order to guarantee temperatures in this area.


## Accessories

### Freezer box

The freezer box is for foods that need to be accessed more easily. Removing The freezer box. Pull the box out as far as possible. Pull the front of box up and out. Make the inverse of the same operation for the resetting the sliding compartment.

### Note

Always hold the handle of box while moving in or out.

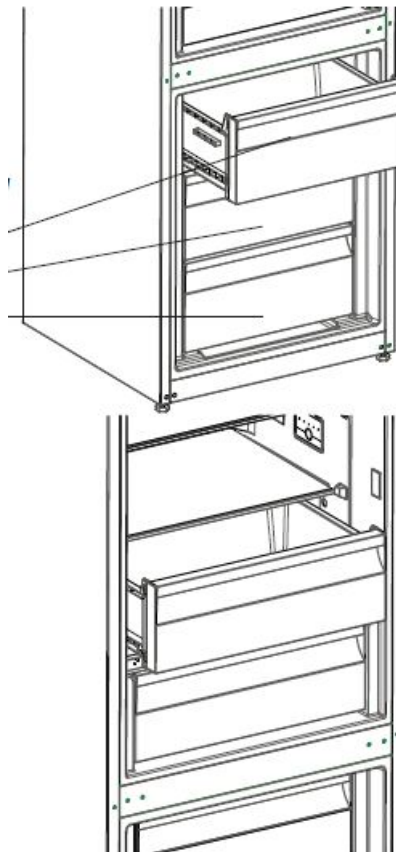

### Freezer boxes


Zero Degree Zone In some models

Keeping food in the chill drawer instead of the freezer or refrigerator compartment allows food retain freshness and flavour longer while preserving its fresh appearance. If the chill drawer tray becomes dirty, remove it and wash with water. Water freezes at 0 °C, but foods containing salt or sugar require lowered temperatures to freeze. Normally people use the chill drawer for raw fish, rice, etc. Do not put foods you want to freeze or ice trays in order to make ice.

### **Removing the Chill Drawer**

Pull the chill drawer out toward you by sliding it on rails. Pull the chill drawer up from the rail to remove. After the chill drawer has been removed, it can support a maximum 20 kg load.

### **Humidity Controller**

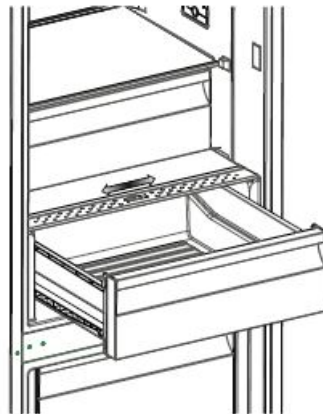


When the humidity controller is in the closed position, it allows fresh fruit and vegetables to be stored for a longer time. In the event the crisper is full, the fresh dial that is located in front of the crisper, should be opened. By means of this, the air in the crisper and humidity rate will be controlled and the shelf life will be extended. If you see any condensation on the glass shelf, the humidity control should be placed into the open positions.


### **Adapti Lift Door Shelf (In some models)**

Six different height adjustments can be made to provide storage areas that you need by Adapti-Lift.

#### **To change the position of Adapti-Lift**

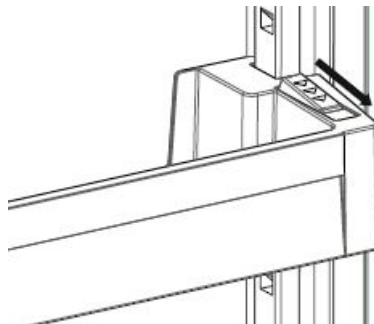

Hold the bottom of the shelf and pull the buttons on the side of the door shelf direction of arrow. Position door shelf the height you need by moving up and down. After you get the position that you want the door shelf, release the buttons on the side of the door shelf. Before releasing the door shelf, move up down and make sure the door shelf is fixed

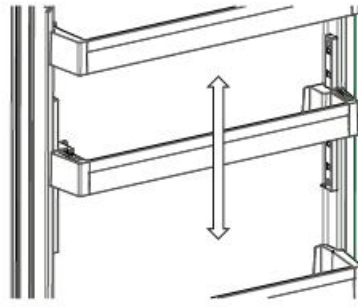


### **Note**

Before moving door shelf is loaded, you must hold the shelf by supporting the bottom. Otherwise, door shelf could fall off the rails due to the weight. So damage may occur on the door shelf or rails.

### **Adapti-Shelf In some models**

Adapti-shelf mechanism provides higher storage spaces with a simple movement.

To cover the glass shelf, push it.

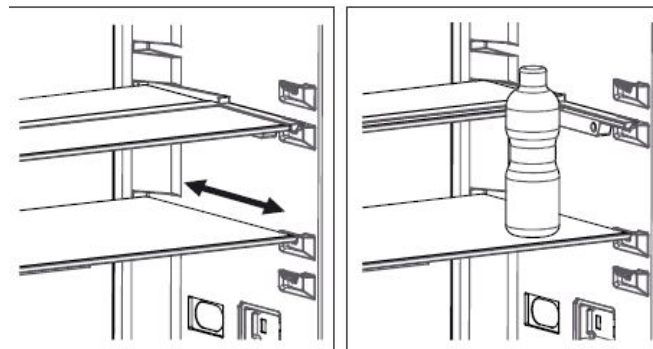


You can place your food as you want in the resulting extra space. To bring the shelf to its original position, pull it toward you. Visual and text descriptions on the accessories section may vary according which model you have. Make sure to unplug the fridge before starting to clean it. Do not wash your fridge by pouring water. You can wipe the inner and outer sides with a soft cloth or a sponge using warm and soapy water. Remove the parts individually and clean with soapy water. Do not wash in washing machine. Never use flammable, explosive or corrosive material like thinner, gas, acid for cleaning You should clean the condenser with broom at least once a year in order to provide energy saving and increase the productivity.

### **Make sure that your fridge is unplugged while cleaning**

### **Defrosting**

Your refrigerator automatically defrosts. The water formed as a result of defrosting passes through the water collection spout, flows into the vaporization container behind your refrigerator and evaporates by itself in there.

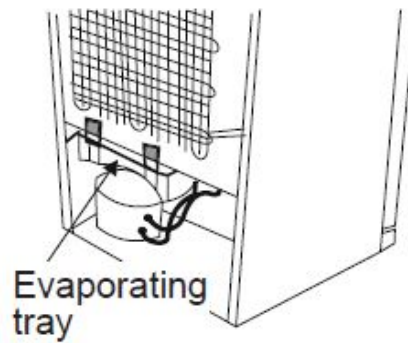

### **Replacing LED Lighting**

If your fridge freezer has LED lighting contact the Sharp help desk as this should be changed by authorized personnel only.

## **FOOD STORAGE GUIDANCE**

### **Refrigerator compartment**

To reduce the humidity and consequently increase frost, never place liquids in unsealed containers in the refrigerator. Frost tends to concentrate in the coldest parts of the evaporator and, in time, will require more frequent defrosting. Never place warm food in the refrigerator. Warm food should be allowed to cool at room temperature and should be arranged to ensure adequate air circulation in the refrigerator compartment. Nothing should touch the back wall as this will cause frost and the packages may stick to the back wall. Do not open the refrigerator door too frequently. Arrange the meat and cleaned fish wrapped in packages or sheets of plastic which you will use in 1-2 days, in the bottom section of the refrigerator compartment that is above the crisper as this is the coldest section and will ensure the best storing conditions. You can put fruits and vegetables into the crisper without packing.

### **Freezer compartment**

Please use the deep freeze compartment of your refrigerator for storing frozen food for a long time and for producing ice. To get maximum capacity for the freezer compartment, please just use glass shelves for upper and middle section. For the bottom section, please use lower basket. For optimum appliance performance to reach maximum freezing capacity, Set the refrigerator at 4 °C for 24 hours before placing fresh food into the freezer. After placing fresh food into the freezer, change the setting to 2 °C for 24 hours is generally sufficient. After 24 hours, you can reduce the setting if required. Please do not place the food you that needs to be frozen next to the already frozen food. You should freeze the food to be frozen (meat, minced meat, fish, etc.) by dividing it into portions in such a way that they can be consumed once. Please do not refreeze the frozen food once it has already thawed. It may pose a danger to your health as it may cause food poisoning. Do not place the hot meals in your deep freeze before they become cold. You would cause the other food frozen beforehand in the deep freeze to become putrefied. When you buy frozen food, makes sure that they were frozen under appropriate conditions and that the package is not torn. While storing frozen food, the storage conditions on the package should certainly be observed. If there is no additional information, the food must be consumed within the shortest time possible. If the frozen food package was subject to humidity and has a foul smell, it might have been previously stored under unsuitable conditions and gone rotten. Do not purchase this type of food! The storage durations of frozen food change depending on the ambient temperature, the frequency of the opening and closing of the doors, thermostat settings, food type and the time elapsed from the purchase time of the food to the time it is placed into the freezer. Always follow the instructions on the package and never exceed the indicated storage duration. During long lasting power failures, do not open the door of the deep freeze compartment. During longer power failures, do not refreeze your food and consume it as soon as possible. Please note: if you want to open the freezer door immediately after closing it, it will not open easily. This is a normal occurrence. After reaching equilibrium condition, the door will open easily.

### **Important note**

- Frozen foods, when thawed, should be cooked just as fresh foods. If they are not cooked after being thawed they must NEVER be re-frozen.
- The taste of some spices found in cooked dishes anise, basil, watercress, vinegar, assorted spices, ginger, garlic, onion, mustard, thyme, marjoram, black pepper, etc changes and they assume a stronger taste when they are stored for a long period. Therefore, just a small amount of the spice should be added or the desired spice should be added after the food has been thawed.
- The food storage period is dependent on the oil used. Suitable oils include: margarine, half fat, olive oil and butter and the unsuitable oils include: peanut oil and lard.
- The food in liquid form should be frozen in plastic cups and other food should be frozen in plastic folios or bags.
- For normal working conditions, it will be sufficient to adjust the temperature setting of your refrigerator to +4 °C.
- The temperature of the fridge compartment should be in the range of 0-8 °C, fresh foods below 0 °C are iced and rotted, bacterial load increases above 8 °C, and spoils.
- Do not put hot food in the refrigerator immediately, wait for the temperature to pass outside.
- Hot foods increase the degree of your refrigerator and cause food poisoning and unnecessary spoiling of the food.
- Meat, fish, etc. should be stored in the chiller compartment of the food, and the vegetable compartment is preferred for vegetables.
- To prevent cross contamination, meat products and fruit vegetables are not stored together.
- Foods should be placed in the refrigerator in closed containers or covered to prevent moisture and odors.

## **DOOR REVERSAL**

### **Repositioning the door**

It depends on which fridge freezer you have as to whether it is possible to reverse the doors. It is not possible where handles are attached at the front of the appliance. If your model does not have handles it is possible to reverse the doors, but this needs to be completed by authorised personnel. Please call Sharp service.

## **TROUBLESHOOTING**

### **Check Warnings**

Your fridge warns you if the temperatures for cooler and freezer are in improper levels or when a problem occurs in the appliance. Warning codes are displayed in the Freezer and Cooler Indicators.



ERROR TYPE	MEANING	WHY	WHAT TO DO
E01	Sensor warning		Contact the Sharp help desk as soon as possible.
E02	Sensor warning		Contact the Sharp help desk as soon as possible.
<b>E03</b>	Sensor warning		Contact the Sharp help desk as soon as possible.
E06	Sensor warning		Contact the Sharp help desk as soon as possible.
E07	Sensor warning		Contact the Sharp help desk as soon as possible.
E08	Low Voltage Warning	Power supply to the device has dropped to below 170 W.	<p>– This is not a device failure, this error helps to prevent damages to the compressor.</p> <p>– The voltage needs to be increased back to required levels</p> <p>If this warning continues, contact the Sharp help desk as soon as possible.</p>
E09	Freezer compartment is not cold enough	Likely to occur after long term power failure.	<p>Set the freezer temperature to a colder value or set Super Freeze. This should remove the error code once the required temperature has been reached. Keep doors closed to improve time taken to reach the correct temperature.</p> <p>Remove any products which have thawed/defrosted during this error. They can be used within a short period of time.</p> <p>Do not add any fresh produce to the freezer compartment until the correct temperature has been reached and the error is no longer.</p> <p>If this warning continues, contact the Sharp help desk as soon as possible.</p>

ERROR TYPE	MEANING	WHY	WHAT TO DO
E10	Fridge compartment is not cold enough	<p>Likely to occur after</p> <p>Long term power failure.</p> <p>Hot food has been left in the fridge.</p>	<p>Set the fridge temperature to a colder value or set Super Cool. This should remove the error code once the required temperature has been reached. Keep doors closed to improve time taken to reach the correct temperature.</p> <p>Please empty the location at the front area of air duct channel holes and avoid putting food close to the sensor.</p> <p>If this warning continues, contact the Sharp help desk as soon as possible.</p>
E11	Fridge compartment is too cold	Various	<p>Check if Super Cool mode is activated</p> <p>Reduce the fridge compartment temperature</p> <p>Check to see if vents are clear and not clogged</p> <p>If this warning continues, contact the Sharp help desk as soon as possible.</p>

#### If your fridge is not operating

- Is there a power failure?
- Is the plug connected to the socket correctly?
- Is the fuse of the socket to which the plug is connected or the main fuse blown?
- Is there any failure at the socket? To check this, plug your refrigerator into a known working socket.

#### If your fridge is not cooling enough

- Is the temperature adjustment right?
- Is the door of your fridge opened frequently and left open for a long while?
- Is the door of fridge closed properly?
- Did you put a dish or food on your fridge so that it contacts the rear wall of your fridge so as to prevent the air circulation?
- Is your fridge filled excessively?
- Is there adequate distance between your fridge and the rear and side walls?
- Is the ambient temperature within the range of values specified.

**If the food in your refrigerator compartment is over cooled**

- Is the temperature adjustment right?
- Are there many food recently put inside the freezer compartment? If so, your fridge may over cool the food inside the refrigerator compartment as it will operate longer to cool these food.

**If your fridge is operating too loudly**

To maintain the set cooling level, compressor may be activated from time to time. Noises from your fridge at this time are normal and due to its function. When the required cooling level is reached, noises will be decreased automatically.

**If the noises persist;**

- Is your appliance stable? Are the legs adjusted?
- Is there anything behind your fridge?
- Are the shelves or dishes on the shelves vibrating? Re-place the shelves and/or dishes if this is the case.
- Are the items placed on your fridge vibrating?

**Normal Noises****Cracking (Ice cracking) Noise**

During automatic defrosting. When the appliance is cooled or warmed (due to expansion of appliance material).

**Short cracking**

Heard when the thermostat switches the compressor on/off.

**Compressor noise (Normal motor noise)**

This noise means that the compressor operates normally Compressor may cause more noise for a short time when it is activated.

**Bubbling noise and splash**

This noise is caused by the flow of the refrigerant in the tubes of the system.

**Water flow noise**

Normal flow noise of water flowing to the evaporation container during defrosting. This noise can be heard during defrosting.

**Air Blowing Noise (Normal fan noise)**

This noise can be heard in No-Frost fridge during normal operation of the system due to the circulation of air.

**If humidity builds up inside the fridge;**

Has the food been properly packaged? Have the containers been well dried before they were put into the refrigerator? Are the doors of the refrigerator opened very frequently? When the door is opened, the humidity found in the air in the room enters the refrigerator. Especially if the humidity rate in the room is too high, the more frequently the door is opened the faster will be the humidification.

**If the doors are not opened and closed properly**

- If the edges of fridge cabinet that the door joint contact are warm**

## IMPORTANT NOTES




## TIPS FOR SAVING ENERGY

- ## TECHNICAL DATA

## Documents / Resources

[illegible]

## References

-  [sharphomeappliances.com](https://www.sharphomeappliances.com)
-  [sharphomeappliances.com](https://www.sharphomeappliances.com)
-  [APPLiA Europe | The new Energy Label | Belgium](#)

Manuals+.