



SHARPER IMAGE 207907 Mailbox Wreath User Guide

[Home](#) » [Sharper Image](#) » SHARPER IMAGE 207907 Mailbox Wreath User Guide 

SHARPER IMAGE®

MAILBOX WREATH

Item No. 207907 (Green) / 207908 (Flocked)

User Guide

Contents

- [1 207907 Mailbox Wreath](#)
- [2 FEATURES](#)
- [3 ASSEMBLY AND OPERATION](#)
- [4 BATTERY BOX INSTRUCTIONS](#)
- [5 REMOTE CONTROL INSTRUCTIONS](#)
- [6 ATTACHING THE WREATH TO YOUR MAILBOX](#)
- [7 IF LIGHTS DO NOT WORK](#)
- [8 BATTERY DISPOSAL](#)
- [9 MAINTENANCE AND CARE](#)
- [10 SPECIFICATIONS](#)
- [11 WARRANTY / CUSTOMER SERVICE](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)

207907 Mailbox Wreath

Thank you for purchasing the Sharper Image Mailbox Wreath. Please read this guide carefully and store it for future reference.


FEATURES

- 35 warm white LED Lights

- 36" length
- 3 settings: ON / Timer / OFF
- Built-in timer: The Mailbox Wreath will turn on for 6 hours, and then shut off for 18 hours, and repeat the same cycle every day
- 8 Lighting modes with dimmer
- For indoor and outdoor use
- Remote control (with CR2025 button cell battery)
- 120 realistic branch tips
- Pre-decorated with 6 round pinecones and 6 red berries

ASSEMBLY AND OPERATION

1. Carefully remove the Mailbox Wreath from the packing box and place it on a flat surface.
2. Open the battery box and insert 4 AA batteries (not included) with the proper polarity (+ and -) as shown in the diagram.

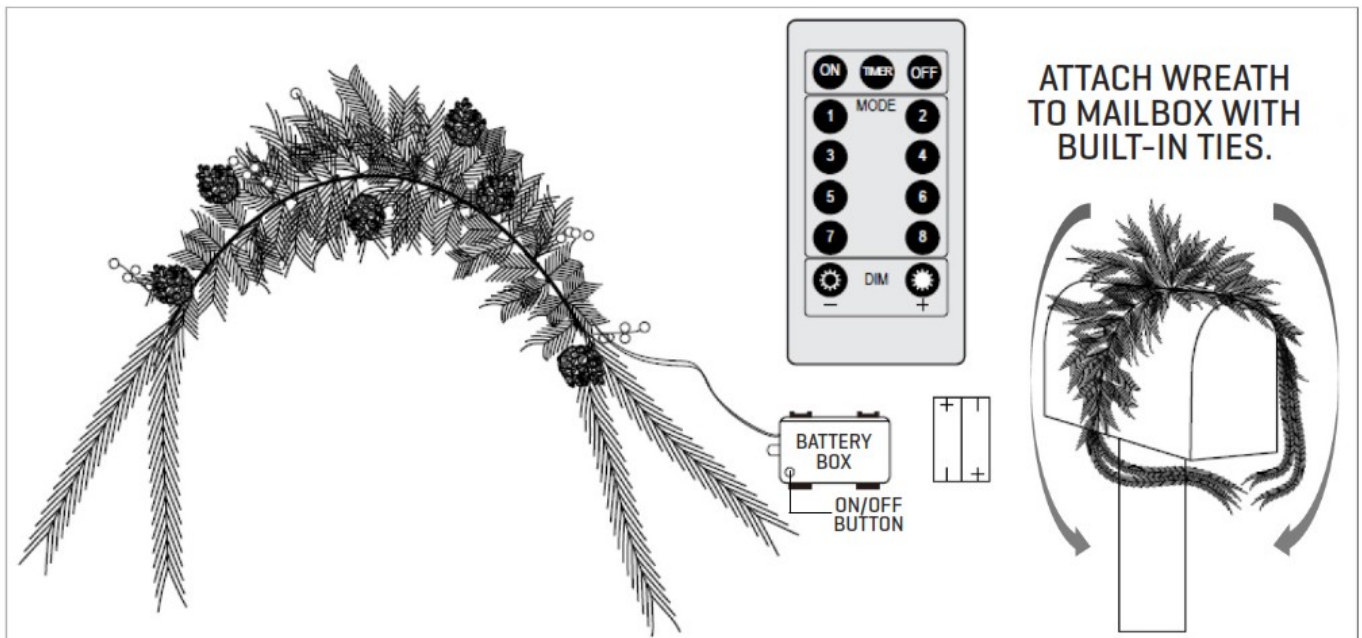

BATTERY BOX INSTRUCTIONS

The Mailbox Wreath has 8 functions and Off listed on the battery box. Press the button on the top left corner of the battery box to change lighting modes or turn off the lights.

REMOTE CONTROL INSTRUCTIONS

1. "ON" is the default mode and will cycle through all 8 lighting modes in order.
2. "Timer" mode sets the automatic timer. The Mailbox Wreath will turn on for 6 hours, and then shut off for 18 hours, and repeat the same cycle every day.
3. "OFF" Mode: Mailbox Wreath will turn off.
4. "8 Modes": Lights will illuminate according to the selected functions listed in below:
 1. Combination
 2. In waves

3. Sequential
4. Slow glow
5. Chasing/flash
6. Slow fade
7. Twinkle/flash
8. Steady on

ATTACHING THE WREATH TO YOUR MAILBOX

There are four ties (two on each side of the Mailbox Wreath). You may use these ties to secure your wreath to the mailbox.

IF LIGHTS DO NOT WORK

- Please check for loose wires.
- Ensure that you have inserted the 4 AA batteries with the proper polarity (+ and -) as shown in the diagram.

NOTE: Always start with a pair of fresh batteries. Do not mix old and new batteries.

WARNING

- This is an electric product not a toy! To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or placed where small children can reach it.
- Do not use this product for anything other than its intended use.
- Do not use or attach any additional electric lights or light strings to this decoration.
- This seasonal-use product is not intended for permanent installation or use.
- Do not mount or place this decoration near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- If the wires appear frayed or damaged, do not use this product. Contact Sharper Image Customer Service immediately.

CAUTION

- This product is suitable for indoor and outdoor use.
- The lights are non-replaceable.
- Keep away from any source of flame or heat.
- This is a holiday decoration. This is not a toy. Keep out of reach of small children.
- Do not connect this decoration to another electric decoration or light string.

BATTERY DISPOSAL

- Dispose of used batteries responsibly.
- Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authorities for recycling advice.

MAINTENANCE AND CARE

- Before use or reuse, inspect the Mailbox Wreath carefully. Discard the Mailbox Wreath if it has cut, damaged, or frayed wire insulation on cords, cracks on the bulb holders or enclosures, loose connections, or exposed copper wire.
- When not in use, store the Mailbox Wreath neatly in a cool, dry location protected from sunlight.
- Remove the batteries when not using the product for an extended period of time.

SPECIFICATIONS

Battery specification: Battery rating – 1.5 V (requires 4 AA batteries)

WARRANTY / CUSTOMER SERVICE


Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) Reorient or relocate the receiving antenna. 2) Increase the separation between the equipment and receiver. 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. 4) Consult the dealer or an experienced radio/TV technician for help.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.
©Sharper Image. All Rights Reserved.

Documents / Resources

	<p>SHARPER IMAGE 207907 Mailbox Wreath [pdf] User Guide 207907 Mailbox Wreath, 207907, Mailbox Wreath, Wreath</p>
---	---

References

-  [The Sharper Image - Official Site @ SharperImage.com](#)