

SHARPER IMAGE 207945 AXE Throwing Game User Guide

Home » Sharper Image » SHARPER IMAGE 207945 AXE Throwing Game User Guide 🖔



SHARPER IMAGE®

AXE THROWING GAME Item No. 207945 **User Guide**



Thank you for purchasing the Sharper Image Axe Throwing Game. Please take a moment to read this guide and store it for future reference.

Contents

- 1 INTRODUCTION
- **2 FEATURES**
- 3 SET UP
- **4 WARRANTY / CUSTOMER**

SERVICE

- **5 Documents / Resources**
- **6 Related Posts**

INTRODUCTION

The Axe Throwing Game is an indoor/outdoor target game for 1 or more players. It's ideal for parties or solo practice. Players take turns throwing the blunt-edged axes or throwing stars into the target. The one closest to the bullseye wins.

FEATURES

- Indoor/outdoor use
- · Sets up easily
- Includes 16" plastic bristle target
- Includes 3 axes
- Includes 3 throwing stars

SET UP

1. Insert the silver tubes into the black connectors as shown (Fig. 1).



2. Clip the target onto the top of the stand as shown (Fig. 2).



3. Take turns throwing the axes and/or stars. The player closest to the bullseye wins.

WARNINGS

- Place this target in a clear, clutter-free area, away from breakable objects, TVs, windows, etc.
- DO NOT use this device for anything other than its intended purpose.
- DO NOT throw axes or stars at people or animals, as injury may occur.
- Adult supervision may be required for young children.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.

Documents / Resources



SHARPER IMAGE 207945 AXE Throwing Game [pdf] User Guide 207945, 207945 AXE Throwing Game, AXE Throwing Game, Throwing Game, Game