

SHARPER IMAGE
**210469 Windproof
Torch Lighter**



Sharper Image 210469 Windproof Torch Lighter User Guide

[Home](#) » [Sharper Image](#) » Sharper Image 210469 Windproof Torch Lighter User Guide 

Contents

- [1 Sharper Image 210469 Windproof Torch Lighter](#)
- [2 Specifications](#)
- [3 Inflation](#)
- [4 Precautions for Refueling](#)
- [5 Gas Usage](#)
- [6 Warranty and Customer Service](#)
- [7 FAQs](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

SHARPER IMAGE

Sharper Image 210469 Windproof Torch Lighter



Specifications

- Product Name: Windproof Torch Lighter
- Item No.: 210469
- Manufacturer: SharperImage.com
- Warranty: 1-year limited replacement warranty

Thank you for purchasing the Windproof Torch Lighter. Please read this manual thoroughly before operating this device.

Inflation

- Shake the gas bottle gently and evenly distribute the gas inside the cylinder. T
- Then, invert the lighter, align the outlet of the gas tank with the gas injection port of the lighter, press moderately, and inflate vertically.
- If you notice gas overflow, it indicates that the lighter is full. Typically, it takes only 2-3 seconds to fill.

Using Gas Specifically for Lighters

Using poor-quality gas may damage the lighter's performance or render it unusable. Always use gas specifically designed for lighters.

Precautions for Refueling

- Refill gas in a well-ventilated area away from open flames. Use only authentic butane gas pressurized between 3.6 to 4.2 atmospheres.
- Before refueling, adjust the gas regulating wheel towards the (-) direction.

Flame Adjustment

- Use a suitable screwdriver to rotate the adjusting rod at the bottom of the lighter to modify the flame height. Rotate towards the (+) direction to increase the flame; rotate towards the (-) direction to decrease it.
- Adjust the flame to an appropriate height: 1.5-2.0 cm for a windproof lighter, 2.0-2.5 cm for a direct flame lighter, 2.5-3.0 cm for an open flame lighter, and 3.0 cm for a spray gun flame.



Safety Notices

- Keep the lighter away from your face, clothing, and others while in use.
- Store the lighter properly and avoid prolonged exposure to direct sunlight or temperatures above 45°C.
- Do not strike or place the lighter in a fire. Always ensure the lighter is off after use.

WARNING: KEEP OUT OF REACH OF CHILDREN.

- Ignite lighter away from face and clothing.
- When filled, the lighter contains flammable fluid.
- Never exposed to heat above 122°F (50°C) or prolonged sunlight.
- Never puncture or place in fire.
- Ensure the flame is extinguished after use.
- This lighter does not self-extinguish—close the cover to extinguish the flame.
- Fuel is a skin irritant; do not overfill.

THIS LIGHTER IS NOT CHILD-RESISTANT WARRANTY / CUSTOMER SERVICE

This item from [SharperImage.com](https://www.sharperimage.com) includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210- 3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m.

Gas Usage

Using Gas Specifically for Lighters is crucial to maintain the performance of the Windproof Torch Lighter. Avoid using poor-quality gas as it may damage the lighter or make it unusable. Always use gas specifically designed for

lighters.

Safety Warning

Keep the Windproof Torch Lighter out of reach of children as it is not child-resistant.

Warranty and Customer Service

This product comes with a 1-year limited replacement warranty from [SharperImage.com](https://www.sharperimage.com). For any queries or assistance not covered in the manual, contact Customer Service at 1 (877) 2103449. Customer Service is available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

FAQs

Q: What type of gas should I use for the Windproof Torch Lighter?

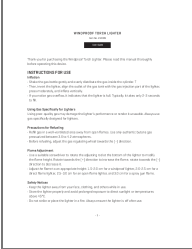
A: It is recommended to use gas specifically designed for lighters to ensure optimal performance and longevity of the Windproof Torch Lighter.

Q: Is the Windproof Torch Lighter child-resistant?

A: No, the Windproof Torch Lighter is not child-resistant. Please keep it out of reach of children for safety purposes.

The SHARPER IMAGE® name and logo are registered trademarks.
Sharper Image. All Rights Reserved.

Documents / Resources

	<p>Sharper Image 210469 Windproof Torch Lighter [pdf] User Guide 210469 Windproof Torch Lighter, 210469, Windproof Torch Lighter, Torch Lighter</p>
---	---

References

-  [Sharper Image - Official Site @ SharperImage.com](https://www.sharperimage.com)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.