

# SHARPER IMAGE 502066-15 Cordless Recliner Reader Lamp Instruction Manual


[Home](#) » [Sharper Image](#) » SHARPER IMAGE 502066-15 Cordless Recliner Reader Lamp Instruction Manual 

## Contents

- [1 SHARPER IMAGE 502066-15 Cordless Recliner Reader Lamp](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 ASSEMBLY INSTRUCTIONS](#)
- [4 CHARGING LAMP](#)
- [5 BATTERY REPLACEMENT](#)
- [6 MAINTENANCE](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

# SHARP

**SHARPER IMAGE 502066-15 Cordless Recliner Reader Lamp**

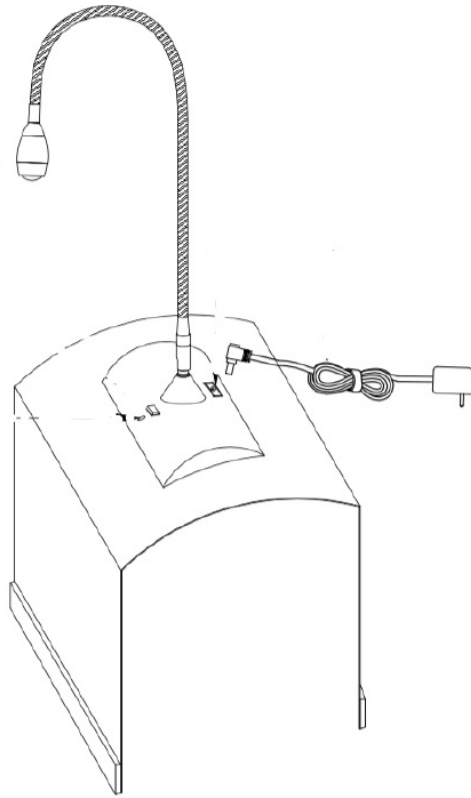

## **IMPORTANT SAFETY INSTRUCTIONS**

### **INSTRUCTIONS PERTAINING TO THE RISK OF INJURY TO PERSONS**


#### **To reduce the risk of INJURY TO PERSONS:**

1. Turn off/unplug and allow to cool before cleaning/maintenance.
2. Do not look directly at lighted bulb.
3. Keep lamp away from materials that may burn.
4. Do not remain in light if skin feels warm.
5. This lamp is operated by Lithium in the base. Please note:
  - **a.** DO NOT disassemble this lamp base.
  - **b.** DO NOT use this lamp near a fire or flame.

#### **CAUTION:**

1. Adjust shade (A), position and angle by touching only the gooseneck.
2. Works best with chair back 6 inches or greater.
3. Fabric ends contain heavy weights. Do not swing fabric or allow children to play with it.

## ASSEMBLY INSTRUCTIONS

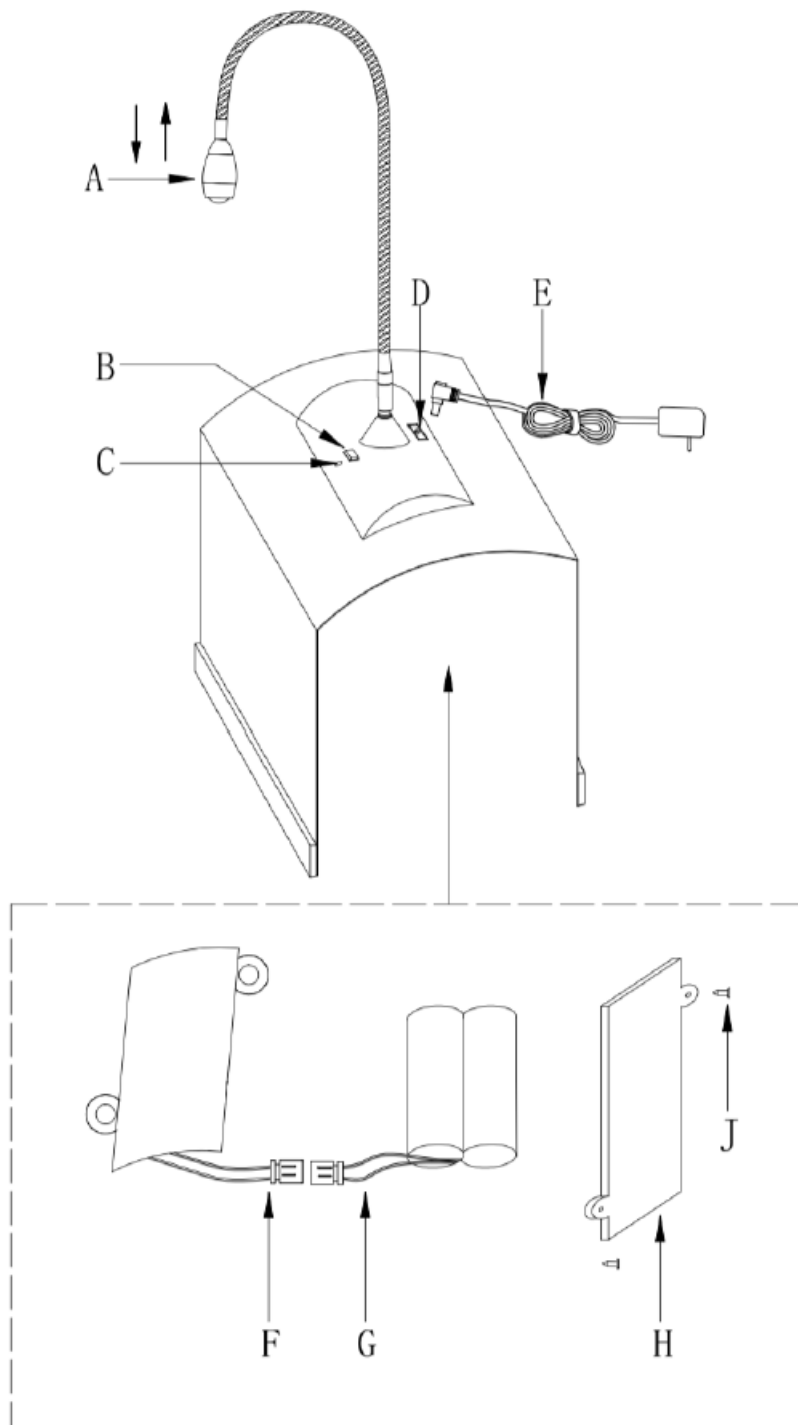

1. Lay out all parts on a smooth surface as shown in illustration (page 2).
2. Place lamp on chair back making sure fabric ends fall on either side.
3. Insert the adapter plug (E) into the jack at the back of the lamp (D). Warning: Use only the adapter supplied with this lamp.
4. Plug AC adapter into outlet or remove after charging.
5. Adjust the lamp shade to desired position using the flexible gooseneck.
6. Use the push 3-way switch (B) on the base to enjoy.

## CHARGING LAMP

1. Use only the adapter supplied with your lamp.
2. Lamp needs charging when it cannot turn on or automatically turns off.

3. Insert the adapter plug (E) into the jack of the lamp (D).
4. Plug the adapter into an outlet.
5. The LED indicator light (C) on the base is red while lamp is charging.
6. The LED indicator light (C) on the base is green when lamp is fully charged.
7. Charge time is about 8 hours. Battery life is 6-8 hours after a full charge.
8. For added convenience, the adapter can remain plugged in while in use.

## BATTERY REPLACEMENT

1. If new lithium batteries are needed, contact Daylight24, Inc to purchase.
2. Unscrew 2 pcs. screws (J) on the battery box cover (H) and take out the old battery by detaching at the male/female connection (F-G). Re-connect male/female connection of new batteries and insert in the box.
3. Screw back 2 pcs. screws making sure the battery cover is firm.

## MAINTENANCE

1. To clean, use a soft cloth.
2. Do not use any chemical or abrasive cleaners.

### NOTE:

This lamp uses specially formulated LEDs that simulate the characteristics of the sun. The light will appear brighter and whiter compared to a normal incandescent bulb and will provide many of the benefits of natural sunlight. In addition, these LEDs are energy efficient and eco-friendly. They are not replaceable.

**Manufacturer Info:** [info@daylight24.com](mailto:info@daylight24.com)/978-494-6324

## Documents / Resources



[SHARPER IMAGE 502066-15 Cordless Recliner Reader Lamp](#) [pdf] Instruction Manual  
502066-15, Cordless Recliner Reader Lamp, 502066-15 Cordless Recliner Reader Lamp