



## SHARPER IMAGE Bluetooth Gramophone User Guide

[Home](#) » [Sharper Image](#) » SHARPER IMAGE Bluetooth Gramophone User Guide

### Contents [ [hide](#) ]

- [1 SHARPER IMAGE Bluetooth Gramophone](#)
- [2 INTRODUCTION](#)
- [3 FEATURES](#)
- [4 IDENTIFICATION OF PARTS](#)
- [5 GETTING STARTED](#)
  - [5.1 OPERATING THE BLUETOOTH GRAMOPHONE](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)

# SHARPER IMAGE®

SHARPER IMAGE Bluetooth Gramophone



## INTRODUCTION

The Sharper Image Bluetooth Gramophone combines the best of two worlds. It recreates the look and feel of a vintage 1920s gramophone, while playing your favorite songs and playlists from your phone or tablet via Bluetooth. Whether you enjoy modern music or vintage recordings, the Bluetooth Gramophone provides a unique listening experience.

## FEATURES

- Bluetooth Speaker with 1920s-style aluminum gramophone horn
- Bluetooth version 5.0
- 5 W tweeter
- 15 W bass
- Total output 11 Watts
- Onboard track controls (play/pause/forward/back/volume)
- 3.5mm auxiliary line-in jack for non-Bluetooth devices
- Wood veneer base
- Length 9.8"
- Width 6.5"
- Height 25.2"
- Weight 8.2 lbs.
- Plugs into an AC outlet

## IDENTIFICATION OF PARTS

1. Antique style gramophone horn
2. Control button/Volume knob
3. ON/OFF power button
4. 5V DC power cord input
5. Auxiliary line-in jack
6. Foot pads
7. Foot pads
8. Bass speaker
9. Vibrating film
10. Tweeter

## **GETTING STARTED**

1. Connect the power adapter to the device. Then, plug the adapter into an AC outlet.
2. Press the ON/OFF power button. You will hear a beep sound, and the Bluetooth Gramophone will enter Bluetooth mode.
3. Open the Bluetooth settings on your mobile device (smartphone, tablet, etc.). Search for “SIAudio” and press “pair” or “connect” on your mobile device.
4. After a successful pairing, you will hear the welcome tone.

## **OPERATING THE BLUETOOTH GRAMOPHONE**

Once your phone or tablet is paired with the Bluetooth Gramophone, you can use your mobile device or the Bluetooth Gramophone to control your audio tracks.

1. Press the Control button to play and pause tracks.
2. Rapid press the Control button 2 TIMES to advance to the NEXT song.
3. Rapid press the Control button 3 TIMES to go back to the PREVIOUS song.
4. Rotate the Control button/volume knob to adjust the volume

## **AUXILIARY LINE-IN**

The Bluetooth Gramophone can connect to non-Bluetooth sources (such as a CD player or turntable) through the auxiliary line-in jack.

1. Connect your music device to the Bluetooth Gramophone with a 3.5mm audio cable.
2. The Bluetooth Gramophone will automatically enter Auxiliary mode when the cable is inserted.
3. You may now play the music from your non-Bluetooth device.
4. When you unplug the 3.5mm audio cable, the Bluetooth Gramophone will automatically go back to Bluetooth mode.

## **POWERING OFF**

When you wish to turn off the Bluetooth Gramophone, please decrease the volume, then press the ON/OFF power button.

## **WARNINGS**

- Please turn the device OFF when not in use.
- Do not expose this device to direct sunlight. A cool, dry environment is optimal.
- Use this device for its intended purpose only.
- Do not attempt to open or repair this device. There are no user-serviceable parts

## WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

## FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

# SHARPER IMAGE®

## Documents / Resources

	<p><a href="#">SHARPER IMAGE Bluetooth Gramophone</a> [pdf] User Guide SHARPER IMAGE, Gramophone</p>
---	--

## References

-  [The Sharper Image - Official Site @ SharperImage.com](https://www.sharperimage.com)