



Go Hang It Instructions – INSPIRED User Manual

[Home](#) » [Sharper Image](#) » Go Hang It Instructions – INSPIRED User Manual 

USER MANUAL



Go Hang It

Contents

1 GET TO KNOW GO HANG IT! PRO

2 HARDWARE ESSENTIALS INCLUDED

3 SAWTOOTH PICTURE HANGING

3.1 INSERT MAGNEKEYS

3.2 LEVEL & MARK HOLES 2

3.3 INSTALL HARDWARE

3.4 HANG YOUR PICTURE

4 WIRE PICTURE HANGING

4.1 EXTEND & HOOK

4.2 MARK HOLES

4.3 INSTALL HARDWARE

4.4 HANG YOUR PICTURE

5 Questions about your Manual? Post in the comments!










5.1 Related Posts

GET TO KNOW GO HANG IT! PRO



- **A. REMOVABLE LEVEL** – Snaps on and sets on the edge of your frame to perfectly level your pictures.
- **B. REMOVABLE PUSH PIN** – Used to mark nail holes through the HOOKS (See E.) when hanging pictures with wire hangers.
- **C. MAGNEKEYS** – Remove and insert into the notch of our SINGLE-NOTCH PRECISION HANGERS, sawtooth or D-ring hangers to perfectly mark your nail holes.
- **D. CENTER BUTTON** – Telescopes and extends the base of the unit for wire-hanging pictures. Simply push the button and pull.
- **E. BUILT-IN HOOKS** – Used to suspend wire hanger pictures on the wall where desired. Insert the PUSH PIN into the guide holes to mark where your nails go.
- **F. SILICONE LATCH** – Keeps the removable hardware case attached to the unit.

HARDWARE ESSENTIALS INCLUDED

HARDWARE ESSENTIALS INCLUDED			
	12 Single-Notch Precision Hanger		8 Picture Hooks (20 lb)
	24 Self-Tapping Screws		4 Picture Hooks (30 lb)
	10 Picture Hooks (10 lb)		10 Nails 1.7x25 (fits 10 lb Hooks)
			10 Nails 2.0x30
			6 D-Rings
			8 FT Hanging Wire

SAWTOOTH PICTURE HANGING

Follow these steps for D-ring hangers too.

 
INSERT MAGNEKEYS

- Remove the MAGNEKEYS and insert into sawtooth or SINGLE-NOTCH PRECISION HANGERS.



LEVEL & MARK HOLES 2

- Place removable LEVEL on top edge of the frame. Position and level frame on wall then rmly push directly over hangers to mark your nail holes.

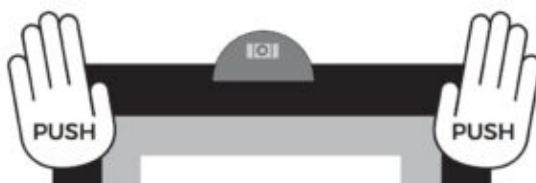

INSTALL HARDWARE

- Locate the marks on the wall made by MAGNEKEYS.
Install nails straight into the wall marks.

 
HANG YOUR PICTURE



WIRE PICTURE HANGING


EXTEND & HOOK

- Press CENTER BUTTON to extend the base. Suspend the frame wire on the BUILT-IN HOOKS, then position and level picture. Use the two, outer HOOKS for heavier frames and the single HOOK for lighter frames.

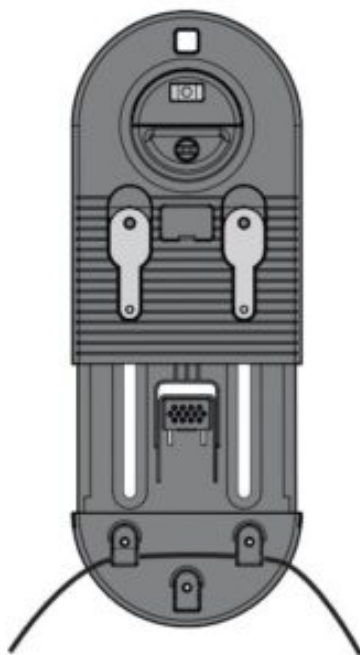

MARK HOLES

 - Pressing firmly against the wall, remove your frame. Locate the removable PUSH PIN (located beneath the LEVEL) and mark nail holes through the hooks.

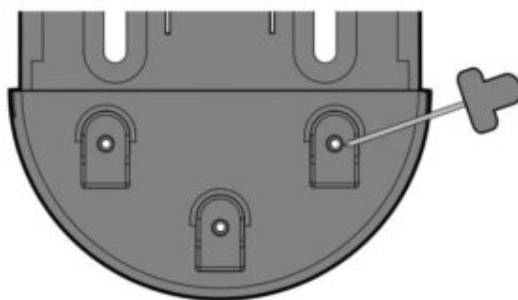

INSTALL HARDWARE

- Locate the marks on the wall made by the PUSH PIN. Install picture hook hardware.

HANG YOUR PICTURE

Works with most picture hanging hardware.

- Suggested weight limits:
- Nails in wood studs – 50 lbs

- Nails in drywall – 10 lbs

Read More About This User Manuals...

[Go-Hang-It-Instructions-INSURED-Manual-Optimized.pdf](#)

[Go-Hang-It-Instructions-INSURED-Manual-Original.pdf](#)

—

Questions about your Manual? Post in the comments!

Manuals+.