



SHARPER IMAGE Powerboost Flex Pivot Percussion Massager User Manual

[Home](#) » [Sharper Image](#) » SHARPER IMAGE Powerboost Flex Pivot Percussion Massager User Manual 

SHARPER IMAGE Powerboost Flex Pivot Percussion Massager User Manual



Contents

- [1 CONGRATULATIONS ON YOUR NEW POWERBOOST FLEX PIVOT PERCUSSION MASSAGER](#)
- [2 CARE INSTRUCTIONS](#)
- [3 WHAT YOU GET](#)
- [4 SAFETY WARNINGS: PLEASE READ BEFORE USE](#)
- [5 RECHARGEABLE BATTERY WARNINGS](#)
- [6 FCC STATEMENT](#)
- [7 THE FUTURE OF RECOVERY](#)
- [8 CHOOSE YOUR ATTACHMENT](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

CONGRATULATIONS ON YOUR NEW POWERBOOST FLEX PIVOT PERCUSSION MASSAGER

 
Please read all instructions and warnings prior to use.
Keep this manual as it contains important information for future reference.

CARE INSTRUCTIONS


- Spot clean only. Unplug and wipe with a damp cloth.
- Air-dry only. Never place in a dryer.
- Allow to dry fully before plugging back in.
- Do not submerge in water.
- Do not use detergent or soap when cleaning.

WHAT YOU GET


- **a.** Power Boost Flex

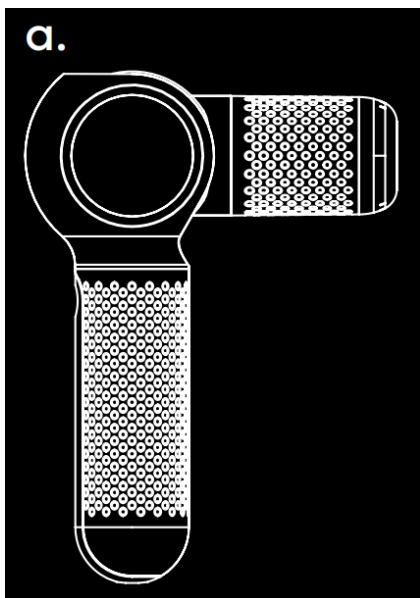

 
- **b.** Interchangeable attachments (x4)

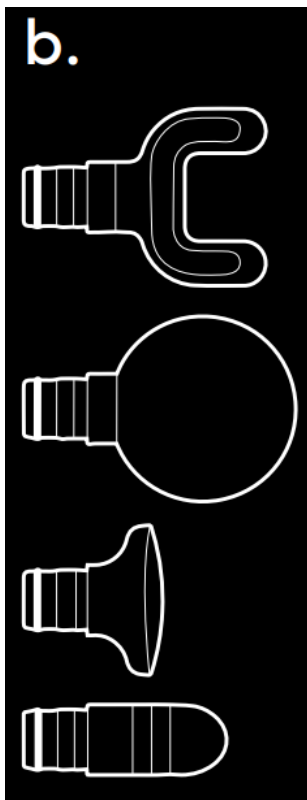


- **c.** Carrying case

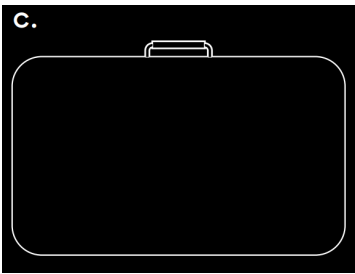 

 - d. USB-C charging cable

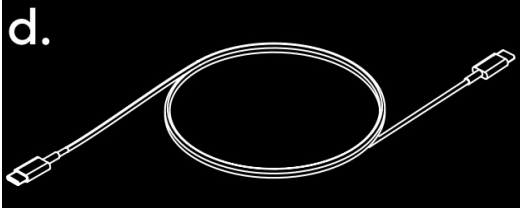

 - e. Adapter

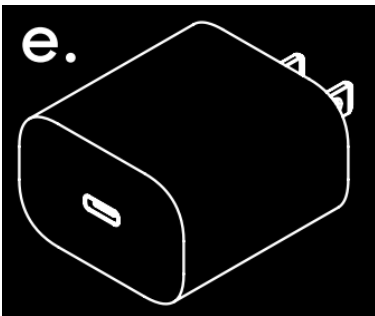

SAFETY WARNINGS: PLEASE READ BEFORE USE

- Not a children's item. Keep out of the reach of children.
 - Always wear a shirt/clothing when using. Do not use on bare skin to avoid possible irritation.
- As with any massage, bruising may occur. Test your comfort level and check targeted areas often. Stop massage immediately if you feel any increase in physical discomfort or pain.
- Do not use attachments of any kind other than those that may be included.
- Do not fall asleep while using.
- Do not leave this item unattended when it is plugged in.
- Always allow item to cool if it becomes too hot.
- Do not expose to extreme temperatures or moisture.
- Keep away from sources of water and heated surfaces.
- Never touch the charging cable or ports with wet hands.
- Do not carry this item by the charging cable or attachments.
- For indoor use only.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.
- This product is not intended to treat, cure, or prevent medical conditions.
- Do not use this item if you are pregnant or have an injury or illness. Consult your physician if you have a medical condition that may prevent safe use of this item.

RECHARGEABLE BATTERY WARNINGS

- This product contains batteries that are non-replaceable.
- There is a risk of re and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from ammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-ammable surface and keep away from ammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives o a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



To reduce the risk of electric shock, always unplug this appliance from the electrical outlet immediately after using and before cleaning.

 
SHARPER IMAGE® NAME AND LOGOS (INCLUDING THE 77 LOGO AND TOMORROW'S TOMORROW) ARE TRADEMARKS OR REGISTERED TRADEMARKS. DISTRIBUTED BY AND © 2022 MERCHSOURCE, LLC. IRVINE, CA 92618. ALL RIGHTS RESERVED.

FOR CUSTOMER SUPPORT, PLEASE CALL 1-800-374-2744.
PRINTED IN CHINA.


THE FUTURE OF RECOVERY

Plug the USB-C charging cable into the charging port on the massager and then plug the other end into the included USB-C adapter

The LED indicators will light up during charging. When the full circle is lit, charging is complete (charging takes approx. 3 hours). Charge completely before use. Do not use the massager while it is charging.

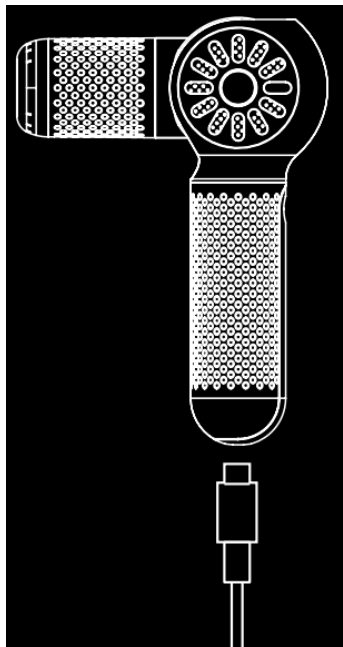

 Select and plug the desired attachment into the front of the massager.
Power off the massager before changing attachments. Twist and pull to remove attachments. (See back page for interchangeable attachment guide.)

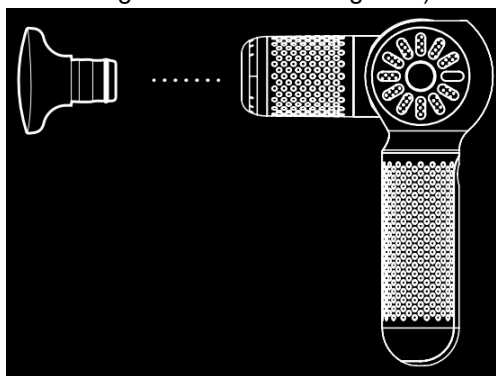


To power on the massager, press and hold the power button for 1 – 2 seconds. The display will light up and the massager will be in standby mode.


Quick press the power button again to toggle through the 6 massage intensity levels.

Press and hold the power button to turn off the massager

 
Note: The Power Boost Flex is equipped with advanced anti-stall technology. To avoid motor stalling, massage speed will automatically increase when extra pressure is applied.

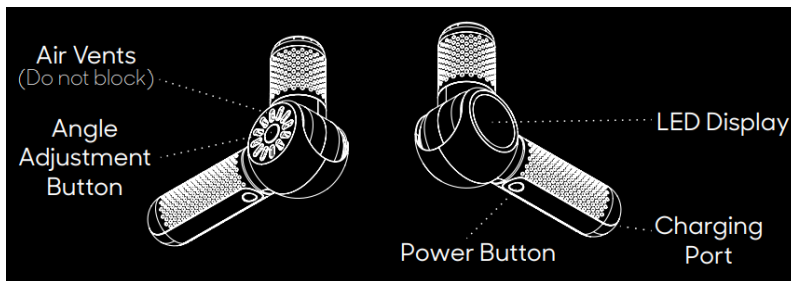


 
To change the massage angle, press and hold the angle adjustment button. While holding the button, adjust the massage arm to the desired angle. Release the button and make sure the massage arm is locked in place. The massage arm can be locked into 5 positions ranging from 0° to 120°.

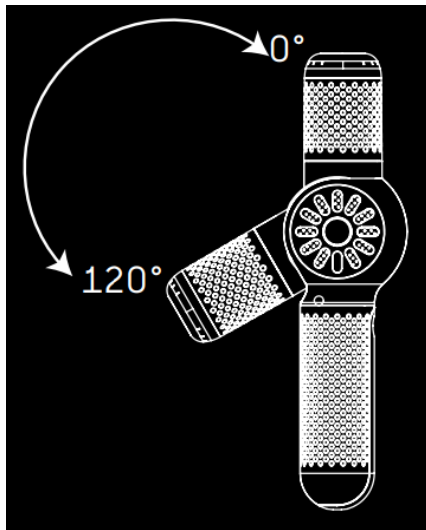

 Use the massager for up to 60 seconds per body area. Enjoy your massage for up to 10 minutes. Do not use on neck, head or any hard or bony areas of the body.

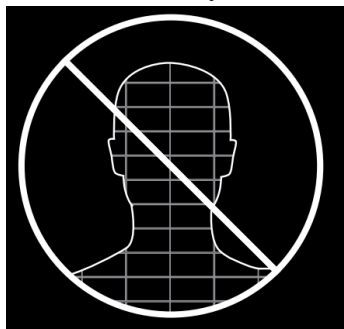

CHOOSE YOUR ATTACHMENT

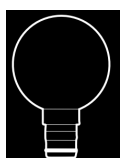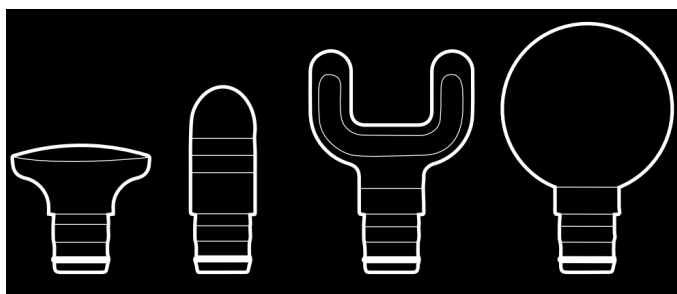  


ROUND

Impact for larger areas and overall comfort.


GOOD FOR

 Glutes, Arms, Thighs, Back

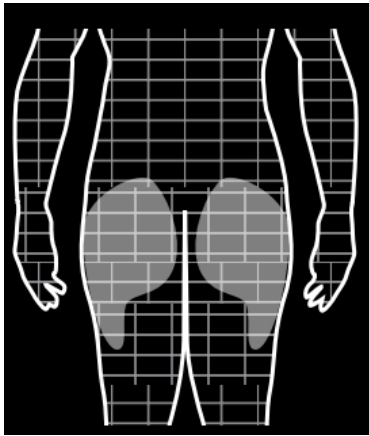

MUSCLE IMPACT

 Low

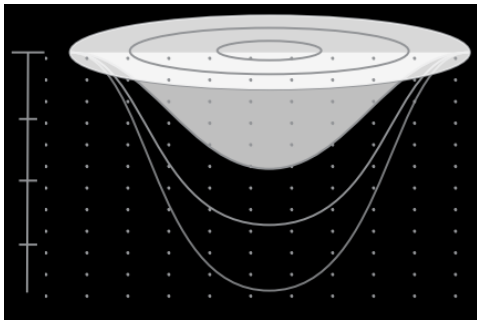


FLAT

Hammer-like impact for deeper recovery.



GOOD FOR

 Chest, Shoulders, Back

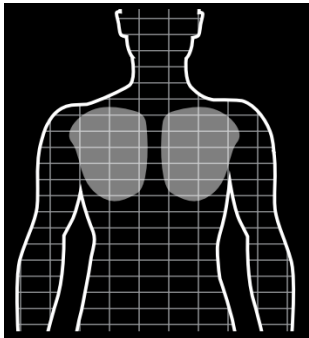

MUSCLE IMPACT

  Medium

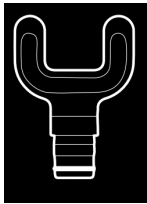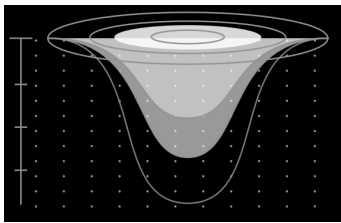


FORK

Dual impact to rock from side to side on muscle knots.



GOOD FOR

 Shoulders, Biceps, Calves, Feet

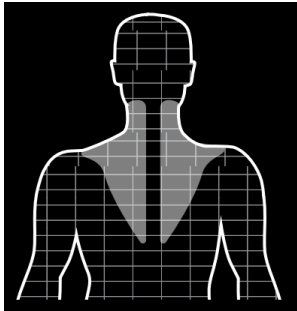

MUSCLE IMPACT

  High

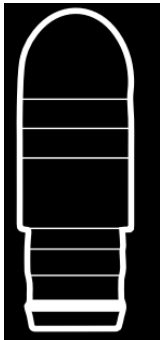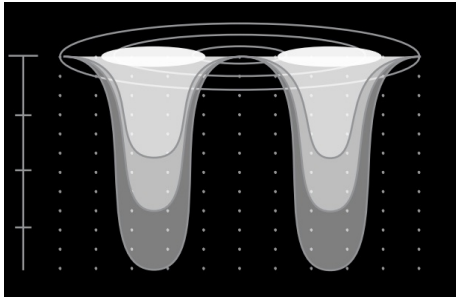


CONE

Pinpoint impact for intense muscle penetration.


GOOD FOR

 Feet, Calves, Trigger Spots

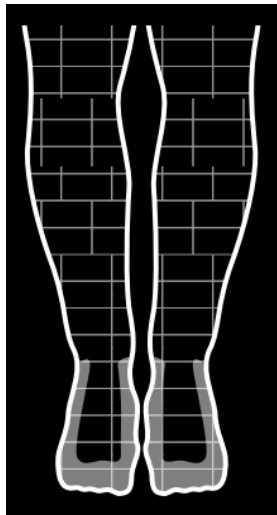

MUSCLE IMPACT

 High

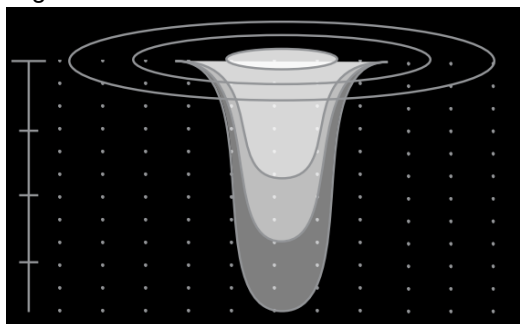

SHARPER IMAGE®

Documents / Resources

	<p>SHARPER IMAGE Powerboost Flex Pivot Percussion Massager [pdf] User Manual Powerboost Flex Pivot Percussion Massager, Powerboost, Flex Pivot Percussion Massager, Percussion Massager</p>
---	---