




SHARPER IMAGE RD-1212009991 RC Stunt Mongoose Instruction Manual

[Home](#) » [Sharper Image](#) » SHARPER IMAGE RD-1212009991 RC Stunt Mongoose Instruction Manual 

SHARPER IMAGE®

 
RC STUNT MONGOOSE
6+
Instruction Manual

Contents


- [1 OPERATING INSTRUCTIONS](#)
- [2 SAFETY PRECAUTIONS](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

OPERATING INSTRUCTIONS

- i. Carefully remove items from package.

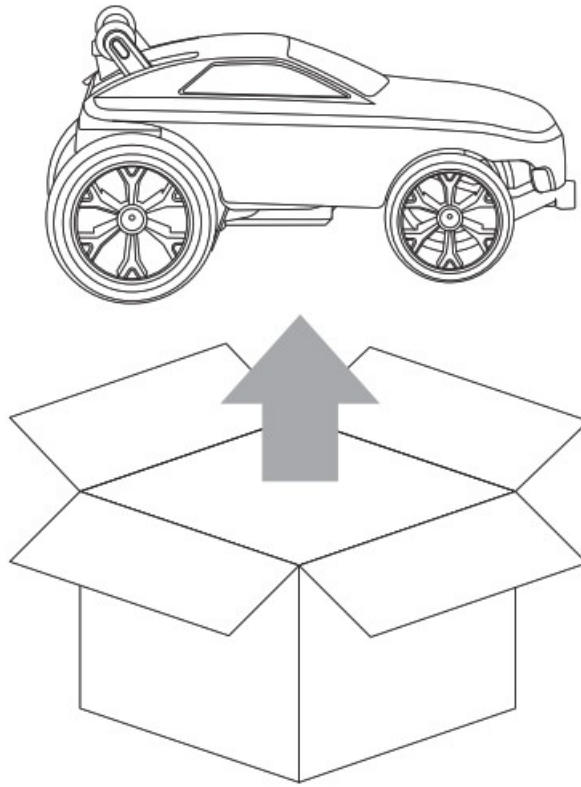


ii. The car requires 6 AA 1.5V batteries (included 3 AA 1.5V batteries for Try Me). The remote control requires 4 AA 1.5V batteries (not included). When changing batteries, adult supervision is required. Use alkaline batteries for the best performance. Locate the battery compartment on the back of each item. Unscrew latch on bottom of car to release battery pack and replace batteries following the correct polarities. Replace the battery compartment door.

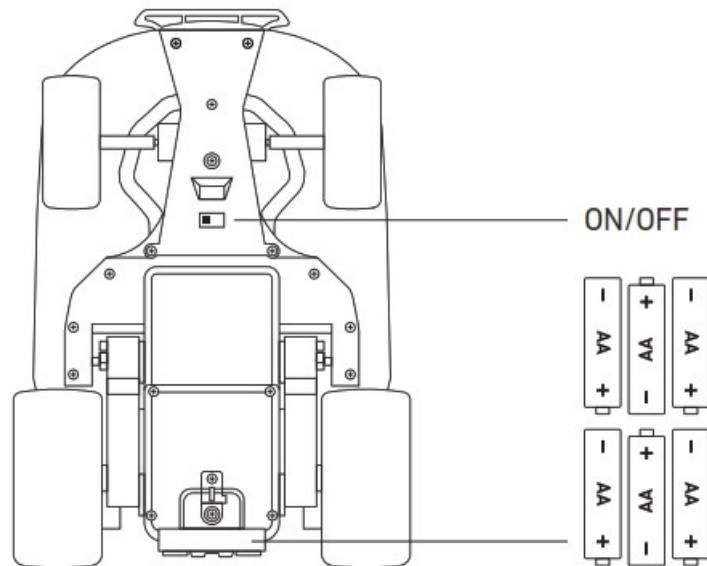 


iii. Switch both car and the remote control “ON”. Use the left joystick to make the left wheel move forward and reverse. Use the right joystick to make the right wheel move forward and reverse. Press the stealth button to turn the LED lights on or off.

 NOTE: YOUR STUNT VEHICLE WORKS BEST IN LARGE, OPEN AREAS.

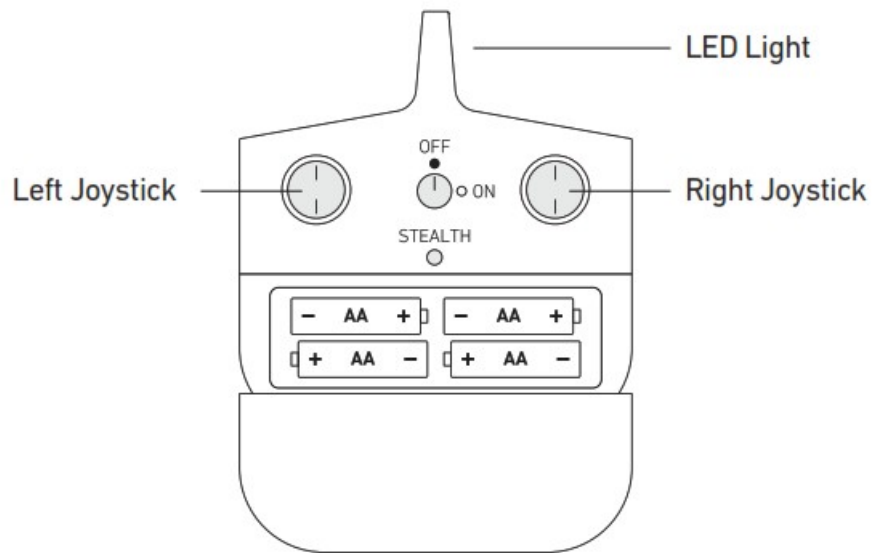


Reverse

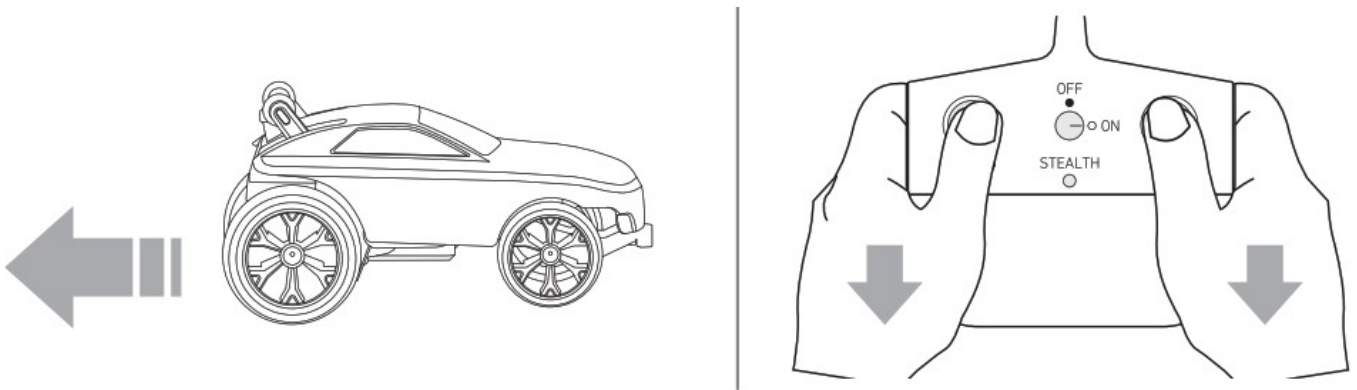 



Wild Wheelie / Forward

 To make a wheelie, run the car and push BOTH joysticks forward. The car will stand up on two wheels. Release slowly the RIGHT or the LEFT joystick to steer.

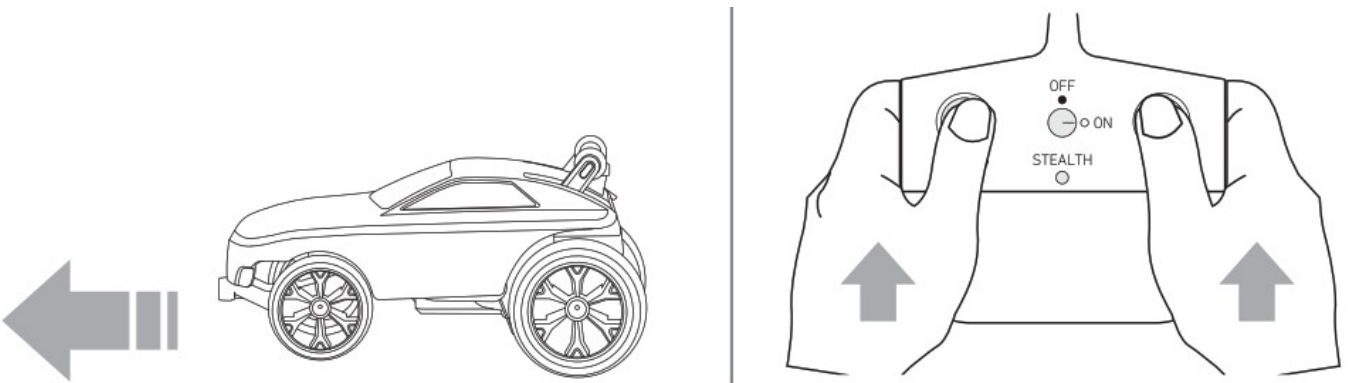



Awesome Cornering

  To take extremely sharp turns or maneuver a 180 or 360 turn, run the car and push up the RIGHT and push down the LEFT joystick then release the RIGHT or the LEFT joystick to steer left or right.

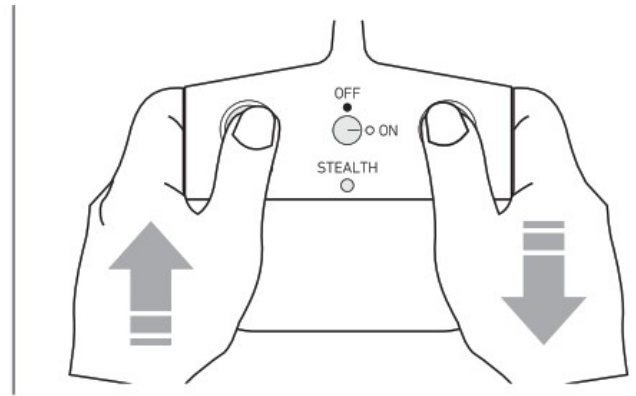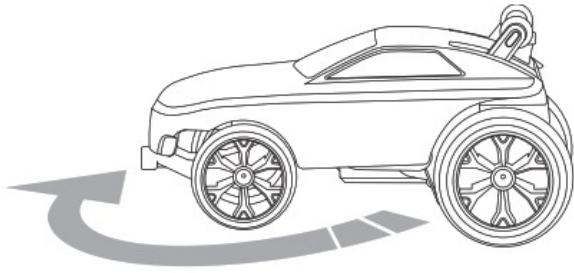



Spectacular Spins

  To spin the Stunt Moongoose, run the car and push up the RIGHT joystick and simultaneously push down the LEFT joystick or push up the LEFT joystick and simultaneously push down the RIGHT joystick depending on the chosen spin direction.

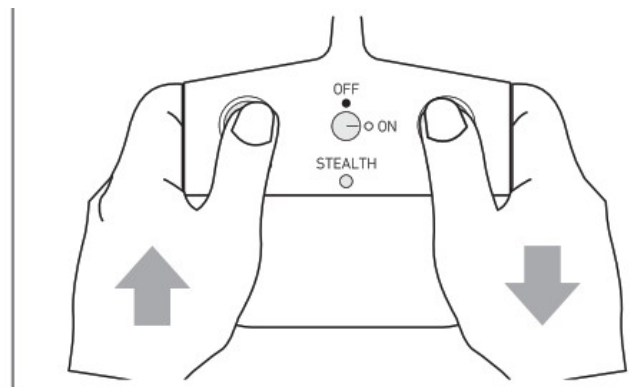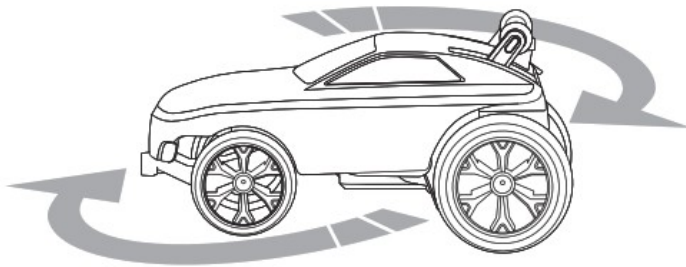

Two Wheel Spins

  To make a two wheel spin, run the car at full speed to make a wheelie and then suddenly release the RIGHT or the LEFT joystick to spin on two wheels.

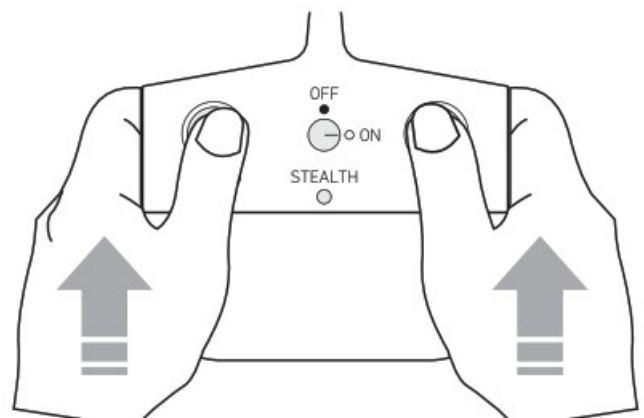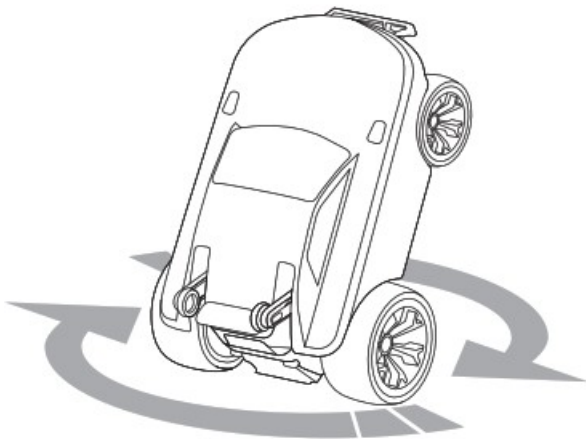

SAFETY PRECAUTIONS

- Do not operate during thunderstorms or rain.
- Avoid water, sand and snow when operating car.
- Do not submerge car or remote control in water.
- Never operate your car on the street or highway.
- Never operate your car in a confined or crowded area, and do not use people or animals as obstacles.

- Do not run your car into furniture, objects or hard surface, as this will cause damage to both the objects and your car.
- Keep fingers, hair and loose clothing away from the tires, gears and motor while the car is switched to “ON”.
- Do not leave car or transmitter near source of heat or under direct sunlight for long periods of time.
- Do not leave car or transmitter outside overnight. Dampness is harmful to interior components.
- Remove all batteries when not in use to avoid accidental operation.
- Adult supervision is recommended when operating this car.

BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Insert batteries using the correct polarity. Do not short-circuit the supply terminal.
- Remove batteries when not in use. Recycle or dispose of exhausted batteries according to federal, state, and local laws. Do not dispose of batteries in a fire – they may leak or explode.
- Only use manufacture specified battery(ies), charger(s) and/or adapter, if applicable, specified by the manufacturer.
- Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Keep these instructions for future reference.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE. Due to continuous product improvements, the pictures on this manual may differ slightly from the actual product.

The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displaced, published or used for any purpose without prior written permission. Altering, removing or reproducing any of the trademark or copyright notices on this package is not permitted.

© 2022 MerchSource, LLC. Irvine, CA 92618. All rights reserved.
Distributed by MerchSource, LLC, Irvine, CA 92618.
Model No.: 1015439

 


WARNING:

CHOKING HAZARD – Small Parts.
Not For Children Under 3 Years.
Printed in China

FOR TECHNICAL SUPPORT, PLEASE CALL
1-800-374-2744

Documents / Resources

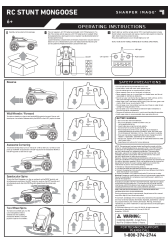

[SHARPER IMAGE RD-1212009991 RC Stunt Mongoose](#) [pdf] Instruction Manual
RD-1212009991 RC Stunt Mongoose, RD-1212009991, RC Stunt Mongoose, Stunt Mongoose,
Mongoose

[Manuals+](#).