


SHARPER IMAGE 1017247 Electric S'mores Maker



# SHARPER IMAGE 1017247 Electric S'mores Maker Instruction Manual

[Home](#) » [Support](#) » SHARPER IMAGE 1017247 Electric S'mores Maker Instruction Manual 

## Contents

- [1 SHARPER IMAGE 1017247 Electric S'mores Maker](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 S'MORES COOKING](#)
- [4 COMPONENTS](#)
- [5 CLEANING](#)
- [6 COOKING WARNINGS](#)
- [7 FREQUENTLY ASKED QUESTIONS](#)
- [8 VIDEO – PRODUCT OVERVIEW](#)
- [9 References](#)
- [10 Related Posts](#)



SHARPER IMAGE 1017247 Electric S'mores Maker



## INTRODUCTION

Congratulations on your purchase of the S'mores Maker. Please read all instructions and warnings prior to use. Keep this sheet as it contains important information for future reference.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse the cord, plugs, or (state-specific part or parts in question) in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors (this item may be omitted if the product is specifically intended for outdoor use).
9. Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.
13. Do not use the appliance for other than intended use.
14. This item has no other user-serviceable components inside. Do not disassemble.

15. Any other servicing should be performed by an authorized service representative.
16. Do not place metallic objects such as knives, forks, spoons, and lids on the Table Stove since they can get hot.


SAVE THESE INSTRUCTIONS.

## S'MORES COOKING

1. Place the stove cover over the stove so that it covers the top completely.
2. Place the stove on top of the food tray.
3. Fill the compartments of the food tray with desired food items, i.e. crackers, marshmallows, chocolate, and peanut butter.
4. Plug in the stove.
5. Turn the switch on the front of the appliance to the "ON" position. On/Off light should illuminate. Please allow for at least 5 to 10 minutes for the appliance to preheat.
6. Prepare a s'more with a chocolate bar atop a cracker.
7. Using the skewers, pick up a marshmallow.
8. Hold the skewer by the handle and hold the marshmallow over the heat. Try not to touch the cover.
9. Rotate frequently until the marshmallow gets a light brown or until desired results are achieved.
10. Once ready, place the marshmallow on the chocolate bar and place another cracker on top, completing your s'more. Enjoy!
11. Once you are done, turn the switch into the "OFF" position and unplug from the outlet.

**Note:** The stove may give off a red glow because of the heat.

## COMPONENTS

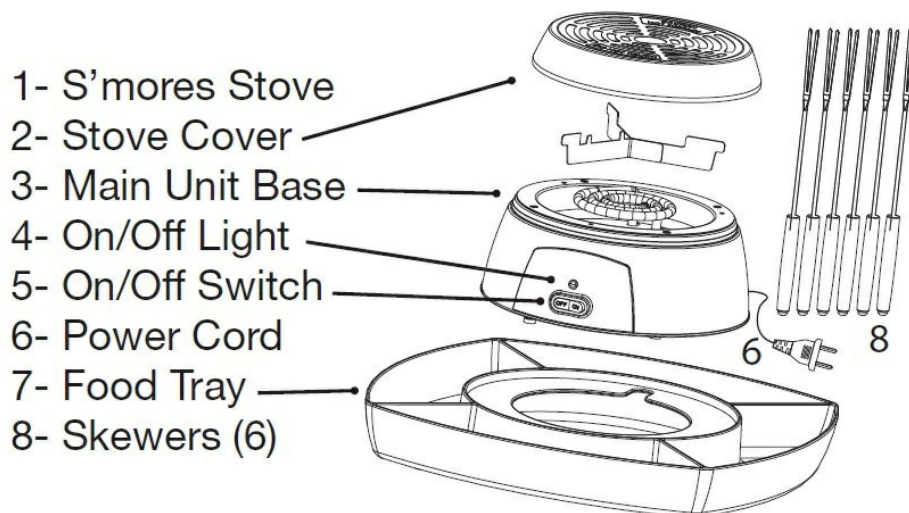

1. S'mores Stove
2. Stove Cover
3. Main Unit Base
4. On/Off Light
5. On/Off Switch
6. Power Cord

7. Food Tray
8. Skewers (6)

## **CLEANING**

1. Make sure the appliance is unplugged and cool before cleaning
2. Remove the top cover from the base
3. The base should only be cleaned by wiping with a damp, non-abrasive cloth
4. Do not submerge the base in any liquid
5. Dry the base thoroughly before storage
6. The skewers and top cover should be hand-washed only. Not dishwasher safe.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

- A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a longer detachable power-supply cord or extension cord is used:
  - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
  - The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
  - If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

## **COOKING WARNINGS**

1. Cooking a marshmallow typically takes approximately 2 minutes. Do not overcook the marshmallow as it may melt and fall onto the heating element.
2. Clean the unit if food falls onto the stove or cover. Allow for at least 20 minutes for the appliance to cool down before cleaning.
3. NEVER touch any of the stainless-steel parts with your hands while the appliance is ON.
4. Keep at least 8" of clearance on all sides and do not place it under a cabinet when in use. A little smoke is normal when you first use the machine.
5. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Sharper Image® name and logos (including the 77 logo and TOMORROW'S TOMORROW) are trademarks or registered trademarks. Distributed by and © 2023 MerchSource, LLC. Irvine, CA 92618. All rights reserved. For customer support, please call 1-800-374-2744. Printed in China.

S'mores Maker is 120Vac 60Hz 345W KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE. Due to continuous product improvements, the picture on the manual may differ slightly from the actual product. FOR HOUSEHOLD USE ONLY.

## **FREQUENTLY ASKED QUESTIONS**

What are the dimensions of the SHARPER IMAGE 1017247 Electric S'mores Maker?

The dimensions of the SHARPER IMAGE 1017247 Electric S'mores Maker are 13.75 x 13.75 x 5.8 inches.

How much does the SHARPER IMAGE 1017247 Electric S'mores Maker weigh?

The SHARPER IMAGE 1017247 Electric S'mores Maker weighs 1.64 pounds.

What is the item model number of the SHARPER IMAGE 1017247 Electric S'mores Maker?

The item model number of the SHARPER IMAGE 1017247 Electric S'mores Maker is 1017247.

Can you make s'mores anywhere with the SHARPER IMAGE 1017247 Electric S'mores Maker?

Yes, the SHARPER IMAGE 1017247 Electric S'mores Maker allows you to make s'mores anywhere.

What components are included with the SHARPER IMAGE 1017247 Electric S'mores Maker?

The SHARPER IMAGE 1017247 Electric S'mores Maker includes an electric range & grill cover with plug & cord, a serving tray with compartments, and 6 roasting skewers/fondue-style forks.

Is the SHARPER IMAGE 1017247 Electric S'mores Maker a safer alternative to gas or wood fires?

Yes, the SHARPER IMAGE 1017247 Electric S'mores Maker is a safer alternative to gas or wood fires.

What materials are used in the construction of the SHARPER IMAGE 1017247 Electric S'mores Maker?

The SHARPER IMAGE 1017247 Electric S'mores Maker combines stainless steel with easy-to-clean plastic for durability and hassle-free maintenance.

How many compartments does the serving tray of the SHARPER IMAGE 1017247 Electric S'mores Maker have?

The serving tray of the SHARPER IMAGE 1017247 Electric S'mores Maker has 4 compartments.

How long does it take for the SHARPER IMAGE 1017247 Electric S'mores Maker to reach optimal heating temperature?

It takes up to 25 minutes for the SHARPER IMAGE 1017247 Electric S'mores Maker to reach optimal heating temperature.

Can the SHARPER IMAGE 1017247 Electric S'mores Maker be used indoors?

Yes, the SHARPER IMAGE 1017247 Electric S'mores Maker can be used inside the house.

How many roasting skewers/fondue-style forks are included with the SHARPER IMAGE 1017247 Electric S'mores Maker?

The SHARPER IMAGE 1017247 Electric S'mores Maker includes 6 roasting skewers/fondue-style forks.

Does the SHARPER IMAGE 1017247 Electric S'mores Maker have an integrated organized serving feature?

Yes, the SHARPER IMAGE 1017247 Electric S'mores Maker features integrated organized serving with a 4-compartment tray.

What is the primary heating source of the SHARPER IMAGE 1017247 Electric S'mores Maker?

The primary heating source of the SHARPER IMAGE 1017247 Electric S'mores Maker is electric.

What is the brand of the Electric S'mores Maker?

The brand of the Electric S'mores Maker is SHARPER IMAGE.

## VIDEO – PRODUCT OVERVIEW



[Download the PDF link SHARPER IMAGE 1017247 Electric S'mores Maker Instruction Manual](#)  
[Electric-Smores-Maker-Instruction-Manual.mp4](#)

## References

- [User Manual](#)

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.