



Sharper Image Binoculars User Manual: Learn How to Use 12X Zoom Digital Camera Binoculars

[Home](#) » [Sharper Image](#) » Sharper Image Binoculars User Manual: Learn How to Use 12X Zoom Digital Camera Binoculars 

The Sharper Image 12X Zoom Digital Camera Binoculars User Manual is a comprehensive guide for users who want to learn how to use these binoculars to capture high-quality photos and videos. These binoculars combine an all-optical binocular system with a high definition digital video camera, making them ideal for hunting, birdwatching, surveillance jobs, sporting events, outdoor adventures, and more. The user manual includes detailed instructions on how to adjust the eye distance, focus the binoculars, and use the camera's various modes and settings. It also provides information on how to install and safely use the included Micro-SD card and how to connect the binoculars to a computer. Additionally, the manual includes important information on cleaning and maintaining the device, as well as its built-in rechargeable Lithium battery. Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty, and customers can contact the Customer Service department for any questions or concerns.

Item No. 207051



 
Thank you for purchasing the Sharper Image 12X Zoom Digital Camera Binoculars. Please take a moment to read this guide and store it for future reference.

INTRODUCTION:


12X Zoom Digital Camera Binoculars combine an all-optical binocular system with a high definition digital video camera. The LCD display gives you quick control over various functions to help you capture the perfect photo or video. Use the 12X magnification, 32 mm aperture binocular system to get a closer look at the subject of your choice. Ideal for hunting, birdwatching, surveillance jobs, sporting events, outdoor adventures and more!

INCLUDED COMPONENTS:

Before using the device, check to make sure that all items listed below have been included with your device.

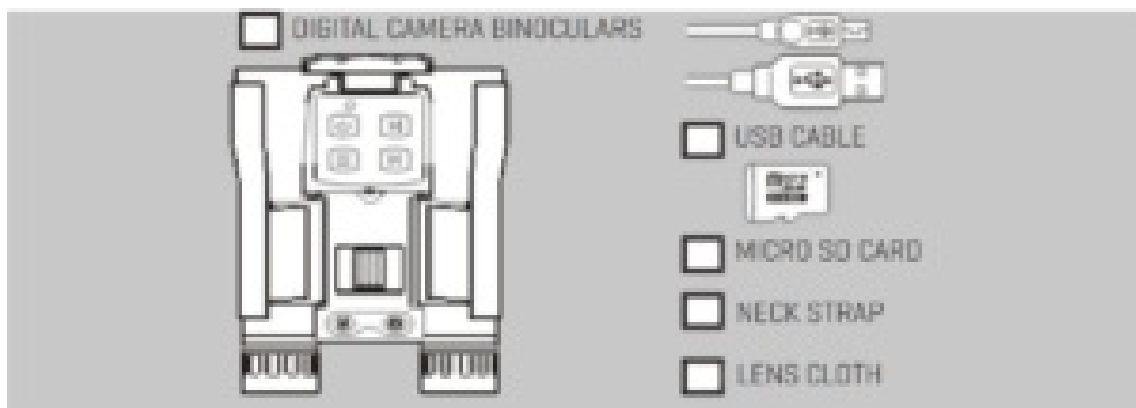

 
1. POWER BUTTON 2. MENU BUTTON 3. UP BUTTON 4. DOWN BUTTON 5. SNAP/OK BUTTON 6. MODE BUTTON 7. RESET 8. LENS CONE 9. BINOCULAR FOCUSING KNOB 10. ADJUSTABLE EYEPIECE 11. MICROPHONE 12. TRIPOD CONNECTOUR 13. BATTERY COVER 14. EYEPIECE 15. OBJECTIVE LENS 16. LCD DISPLAY 17. USB INTERFACE 18. MICRO SD-SOCKET 19. LENS

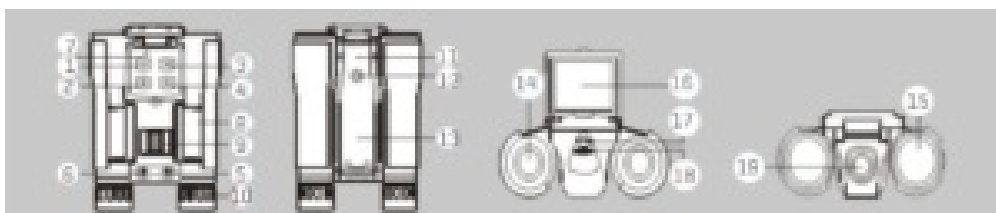

HOW TO USE:


EYE DISTANCE ADJUSTMENT

 Hold the binoculars in a neutral, observational position and rotate the two lens cones (A) and (B) inward or outward until you see a single circle through the lenses. Make sure to adjust this every time you use the device.

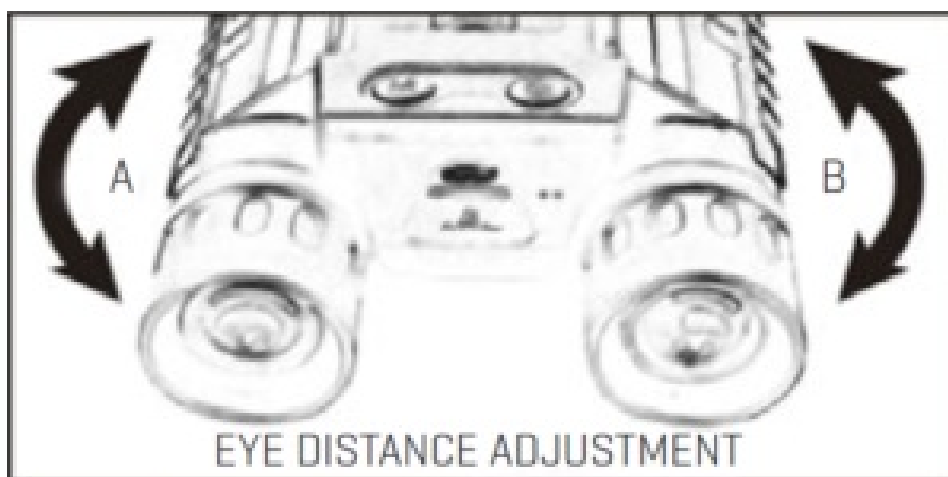


FOCUSING

 Close your right eye and observe with your left eye. Rotate the central focusing knob (A) until the image is clear. Next, close your left eye and observe with your right eye. Rotate the right adjustable eyepiece (B) until the image becomes clear. At this point the focal lengths on both sides have been adjusted, so you only need to rotate the central focusing knob to focus on targets.

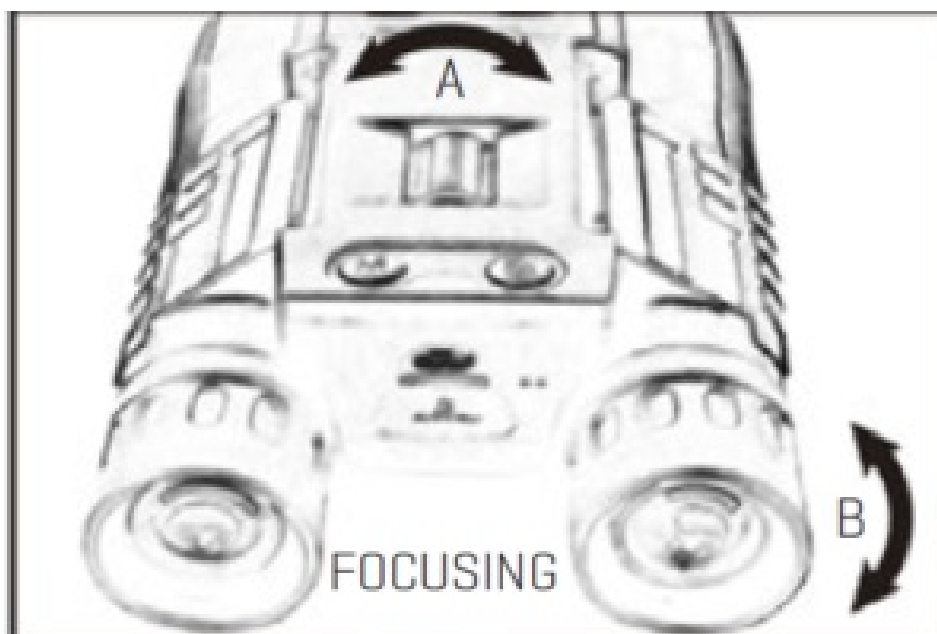

USERS WITH GLASSES

 If you wear glasses, simply fold down the rubber eye flaps (A) and (B), and move your eyes closer to the eyepieces in order to establish a proper field of view.

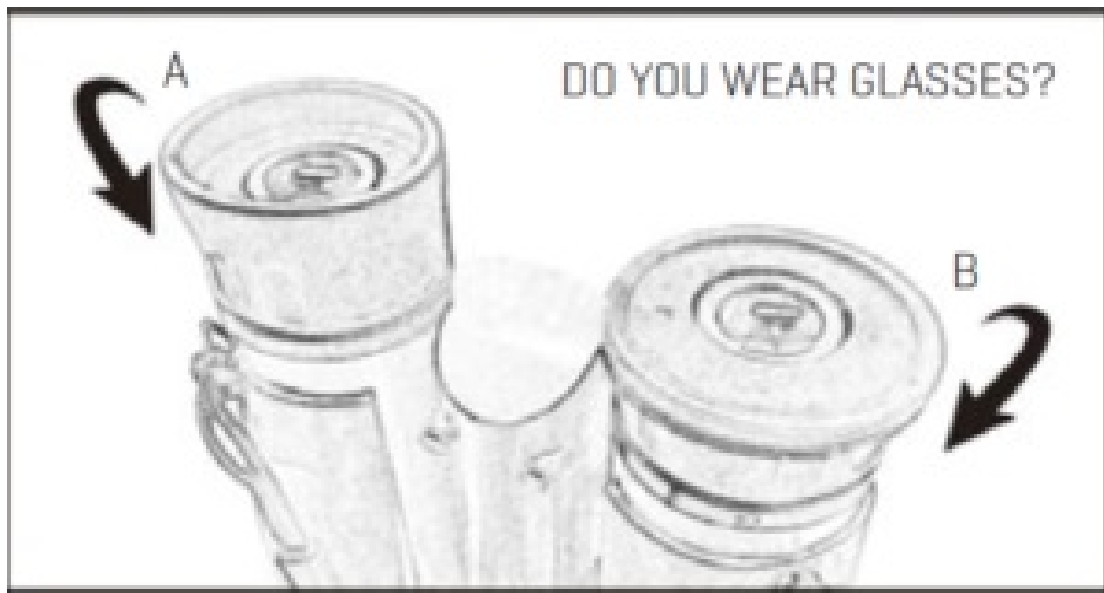

CLEANING & MAINTENANCE:

- To remove dust or fingerprints on the lenses, use a clean microfiber cloth
- Only use liquid cleaning products recommended for prescription lenses
- Do not attempt to clean the inside of the device
- Keep your binoculars in a dry, ventilated place when not in use
- Staring at the sun may cause damage to your eyes

BATTERY:

This item has a built-in rechargeable Lithium battery that automatically charges the camera every time you connect it to a computer via USB cable. When the battery is low, the LCD display shows "Battery Low" accompanied by a red indicator light. After recharging the battery, the indicator light will turn off.

 
INSTALLING MICRO-SD CARD:

The power must be OFF when installing the included Micro-SD card. Make sure the Micro-SD card (A) is inserted into the correct slot (B) with the printed side facing down and the gold contact pins facing in. Insert the card until you hear a click.

To remove the Micro-SD card you must turn the camera OFF. Once it is OFF, simply push the card inwards to disengage the locking mechanism (the card will pop out).

It is recommended that you use Class 4 or above SD cards with a minimum of 4GB storage. Low speed cards do not support 1080p recording, so this could result in lower quality video.

To safely use your Micro-SD card, do not remove it or turn off the power of your device when the card is being read. Always format a new card before using it.

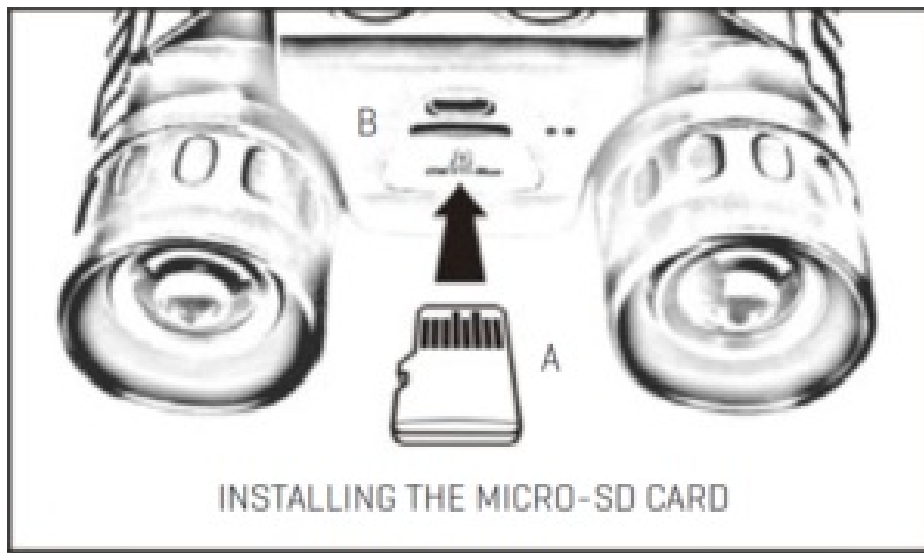

CAMERA: MODE OPTIONS

With the camera turned ON, press the Mode button to select the mode you want to use: Photo Mode, Replay Mode or Video Mode.


 



PHOTO MODE

 The camera automatically stays in Photo Mode when it is turned ON. You can either take a photo when looking through the binocular lenses, or with the LCD screen opened (Snap/Ok button).



VIDEO MODE

 Press the Mode button to switch to video mode, then press the Snap/Ok button to start recording video. Press Snap/Ok again to play videos or review photos.



REPLAY MODE

Press the Mode button to switch to Replay Mode, then press the Up and Down buttons to select photos or videos. Press Snap/Ok to play videos or review photos.



To use the digital zoom feature, press the Up and Down buttons when in Photo or Video Mode to select your digital zoom range. For best results, hold the binoculars tightly or use a tripod to prevent movement and/or shaking.



PHOTO/VIDEO/REPLAY SETTINGS:

CHANGING PHOTO SETTINGS Select Photo Mode

- Press the Menu button to access the photo menu settings
- Press the Up and Down buttons to navigate the menu options and to select the setting you want to change
- Press the Snap/Ok button to access setting submenu options
- Press Snap/Ok to confirm

PHOTO MENU	SUB MENU	PHOTO MENU	SUB MENU
SHOOTING MENU	SINGLE SHOOT	COLOR	COLOR
	2 SECONDS TIMING		BLACK AND WHITE
	5 SECONDS TIMING		SEPIA
RESOLUTION	5M- 2592 X 1944	ISO	AUTOMATIC
	3M- 2048 X 1536		100
	2M- 1920 X 1080		200
CONTINUOUS CAPTURE MODE	1.3M- 1280 X 960	IMAGE STABILIZER	OFF
	VGA- 640 X 480		ON
	ON	EXPOSURE	+2.0
PHOTO QUALITY	OFF		+5/3
	HIGH QUALITY		+4/3
	STANDARD		+1.0
SHARPNESS	ECONOMIC		+2/3
	STRONG		+1/3
	STANDARD		+0
WHITE BALANCE	ECONOMIC		-1/3
	AUTOMATIC		-2/3
	SUNLIGHT		-1.0
	CLOUDY	DATE	-4/3
	TUNGSTEN LAMP		-5/3
	FLUORESCENT LAMP		-2.0

CHANGING VIDEO SETTINGS

- Select Video Mode. Press the Menu button to access video menu settings
- Press the Up and Down buttons to navigate the menu options
- Press the Snap/Ok button to access setting submenu options
- Press Snap/Ok to confirm

VIDEO MENU	SUB MENU	VIDEO MENU	SUB MENU
RESOLUTION	1080HD - 1920 X 1080	EXPOSURE	+2.0
	1080P - 1440 X 1080		+5/3
	720P - 1280 X 720		+4/3
VOICE RECORDING	WVGA - 848 X 480		+1.0
	VGA - 640 X 480		+2/3
	ON		+1/3
DATE	OFF		+0
	ON		-1/3
	OFF		-2/3
	ON		-1.0
	OFF		-4/3
	ON		-5/3
	OFF		-2.0

CHANGING REPLAY SETTINGS

- Select Replay mode
- Press the Menu button to access the video menu settings
- Press the Up and Down buttons to navigate the menu options
- Press the Snap/Ok button to access setting submenu options

- Press Snap/Ok to confirm

REPLAY MENU	SUB MENU	REPLAY MENU	SUB MENU
DELETE	DELETE SELECTED VIDEO DELETE ALL VIDEOS	PROTECTION	LOCK SELECTED FILE UNLOCK SELECTED FILE LOCK ALL FILES UNLOCK ALL FILES
SLIDE SHOW	2 SECONDS 5 SECONDS 8 SECONDS		

SYSTEM SETTINGS: CHANGING SYSTEM SETTINGS

- In Photo or Video Mode, press the Menu button twice to access System Settings
- Press the Up and Down buttons to navigate the menu options
- Press the Snap/Ok button to access setting submenu options
- Press Snap/Ok to confirm

SYSTEM MENU	SUB MENU	PHOTO MENU	SUB MENU
DATE & TIME	YEAR MONTH DAY HOUR MINUTE SECOND	SCREEN PROTECTION	OFF 1 MINUTE 3 MINUTES 5 MINUTES
AUTO POWER-OFF	OFF 1 MINUTE 3 MINUTES 5 MINUTES	SOUND VOLUME	0 1 2 3 4 5 6 7 8
KEY SOUND	ON OFF		
LANGUAGE	SIMPLIFIED CHINESE TRADITIONAL CHINESE RUSSIAN KOREAN ENGLISH FRENCH JAPANESE ITALIAN GERMAN SPANISH	LIGHT SOURCE FREQUENCY	50 HZ 60 HZ
		FORMAT	FORMATTING THE MEMORY WILL DELETE ALL DATA
		DEFAULT VERSION	RESTORE DEFAULTS
		VERSION	VIEW VERSION

SPECIFICATIONS:

BINOCULAR SPECIFICATION	12 X 32	LCD DISPLAY	2" LTPS 4:3
		PHOTO FORMAT	JPEG
MAGNIFICATION	12X	VIDEO DISPLAY	AVI
100M VISUAL FIELD	96M	VIDEO REC FUNCTION	SUPPORT
EXIT PUPIL DIAMETER	3.8MM	LANGUAGE	SIMPLIFIED CHINESE TRADITIONAL CHINESE RUSSIAN KOREAN ENGLISH FRENCH JAPANESE ITALIAN GERMAN SPANISH
DISTANCE OF EXIT PUPIL DIAMETER	8MM		
MINIMUM FOCUS DISTANCE	8M		
PHOTO MODE RESOLUTION/PIXELS	5M - 2592 X 1944 3M - 2048 X 1536 2M - 1920 X 1080 1.3M - 1280 X 960 VGA - 640 X 480		
		REMOVABLE DISK	SUPPORT
		WEB CAMERA	SUPPORT
		MEMORY CARD	MAXIMUM 32GB
VIDEO MODE RESOLUTION/PIXELS	1080HD - 1920 X 1080 1080P - 1440 X 1080 720P - 1280 X 720 WVGA - 848 X 480 VGA - 640 X 480	USB INTERFACE	2.0
		BATTERY TYPE	BUILT-IN LITHIUM BATTERY NOTE: SUPPORT EXTERNAL MOBILE POWER SUPPLY (5V 1A)

PC & MAC CONNECTION: HOW TO CONNECT THE 12X ZOOM DIGITAL CAMERA BINOCULARS TO YOUR COMPUTER

- Connect the USB to the camera while the device is turned OFF. Turn the camera ON and the LCD screen will show two options: Storage and Camera
- To upload your saved photos and videos to your computer, select the Storage option and press the Snap/Ok button. Your computer will recognize the device
- To use the camera as a webcam, select the Camera option and press the Snap/Ok button. Your computer will recognize the camera as a webcam to be used with specific programs like Skype, Facebook, etc. This option only works with the following operating systems: Windows 2000/XP/Vista/Windows 7, MAC OS X 10.3.6 and above

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

12x Zoom Digital Camera Binoculars [Manual Original](#)

12x Zoom Digital Camera Binoculars [Manual Optimized](#)

Contents

- 1**
SPECIFICATION
- 2** **FAQS**
- 3** **Related Posts**

SPECIFICATION

Product Specifications	Description
Item No.	207051
Magnification	12X
Objective Lens Diameter	32mm
Camera Resolution	1080p
Storage	Micro-SD card (minimum 4GB, Class 4 or above)
Battery	Built-in rechargeable Lithium battery
PC & Mac Connection	USB interface
Operating Systems	Windows 2000/XP/Vista/Windows 7, MAC OS X 10.3.6 and above
Warranty	1-year limited replacement warranty
Customer Service	1 (877) 210-3449, Monday through Friday, 9:00 a.m. to 6:00 p.m. ET

FAQS

What is the warranty for Sharper Image branded items?

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

How do I connect my binoculars to my computer?

Connect the USB to the camera while the device is turned OFF. Turn the camera ON and the LCD screen will show two options: Storage and Camera. To upload your saved photos and videos to your computer, select the Storage option and press the Snap/Ok button. Your computer will recognize the device. To use the camera as a webcam, select the Camera option and press the Snap/Ok button. Your computer will recognize the camera as a webcam to be used with specific programs like Skype, Facebook, etc.

How do I change the settings for photo, video, and replay modes?

In Photo or Video Mode, press the Menu button to access the photo or video menu settings. Press the Up and Down buttons to navigate the menu options and to select the setting you want to change. Press the Snap/Ok

button to access setting submenu options, and press Snap/Ok to confirm.

How do I use the camera?

With the camera turned ON, press the Mode button to select the mode you want to use: Photo Mode, Replay Mode or Video Mode. To take a photo, either look through the binocular lenses or use the LCD screen. To record video, press the Snap/Ok button. Press Snap/Ok again to play videos or review photos.

What type of SD card should I use?

It is recommended that you use Class 4 or above SD cards with a minimum of 4GB storage. Low speed cards do not support 1080p recording, so this could result in lower quality video.

How do I install the Micro-SD card?

The power must be OFF when installing the included Micro-SD card. Make sure the Micro-SD card is inserted into the correct slot with the printed side facing down and the gold contact pins facing in. Insert the card until you hear a click. To remove the Micro-SD card, turn the camera OFF and push the card inwards to disengage the locking mechanism.

How does the battery work?

This item has a built-in rechargeable Lithium battery that automatically charges the camera every time you connect it to a computer via USB cable. When the battery is low, the LCD display shows "Battery Low" accompanied by a red indicator light. After recharging the battery, the indicator light will turn off.

How do I clean and maintain my binoculars?

To remove dust or fingerprints on the lenses, use a clean microfiber cloth. Only use liquid cleaning products recommended for prescription lenses. Do not attempt to clean the inside of the device. Keep your binoculars in a dry, ventilated place when not in use. Staring at the sun may cause damage to your eyes.

Can I use these binoculars if I wear glasses?

Yes, simply fold down the rubber eye flaps and move your eyes closer to the eyepieces to establish a proper field of view.

How do I focus the binoculars?

Close your right eye and observe with your left eye. Rotate the central focusing knob until the image is clear. Next, close your left eye and observe with your right eye. Rotate the right adjustable eyepiece until the image becomes clear. At this point, the focal lengths on both sides have been adjusted, so you only need to rotate the central focusing knob to focus on targets.

How do I adjust the eye distance on the binoculars?

Hold the binoculars in a neutral position and rotate the two lens cones inward or outward until you see a single circle through the lenses. Adjust this every time you use the device.

What is included with the Sharper Image 12X Zoom Digital Camera Binoculars?

The Sharper Image 12X Zoom Digital Camera Binoculars come with a power button, menu button, up button, down button, snap/ok button, mode button, reset, lens cone, binocular focusing knob, adjustable eyepiece, microphone, tripod connector, battery cover, eyepiece, objective lens, LCD display, USB interface, Micro SD-socket, and lens.