



Sharper Image 3D Snowflake Aromatherapy Diffuser Cleaning and Instruction Manual

[Home](#) » [Sharper Image](#) » Sharper Image 3D Snowflake Aromatherapy Diffuser Cleaning and Instruction Manual



Contents

1 SHARPER IMAGE®

1.1 HOLIDAY SNOWFLAKE 3D ROTATING AROMATHERAPY DIFFUSERItem No. 207015

2 Related Posts

SHARPER IMAGE®


HOLIDAY SNOWFLAKE 3D ROTATING AROMATHERAPY DIFFUSER Item No. 207015



Thank you for purchasing the Sharper Image Holiday Snowflake 3D Rotating Aromatherapy Diffuser. Please take a moment to read this guide and store it for future reference.

IDENTIFICATION OF PARTS

1. Cover
2. Water Tank Cover
3. Water Tank
4. Rotation Base
5. On/Off
6. Rotation Switch
7. LED Night Switch
8. Bottom
9. AC Adapter

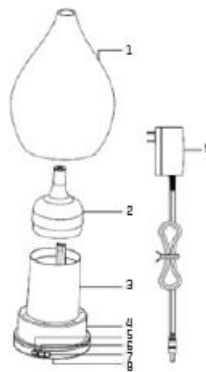

HOW TO USE

1. Place the diffuser in a stable horizontal position. Connect the AC adapter to the DC port at the bottom of the unit.
2. Remove the outer cover and the water tank cover.
3. Add purified water into the water tank (Maximum 8.4 oz.)
4. Add 2-4 drops of essential oils to the water. (Recommended 2-4 drops per 3.4 oz. of water).
5. Replace the water tank cover and outer cover.
6. Connect the adapter to the AC power source. You will hear a BEEP when the diffuser is in standby mode.

MISTING SETTING

1. Press the “Power Button” button once for continuous misting. You will hear a BEEP sound when the LED light and rotation function turn on together.
2. Long press the “Power Button” button a second time for intermittent misting. You will hear a BEEP-BEEP sound when the function starts.
3. Press the “Power Button” button a third time to turn the misting off. You will hear a BEEP sound when the function is off.

ROTATION FUNCTION

Press the “Undo” to turn the rotation function ON/OFF. You will hear a BEEP sound when the function is turned ON/OFF.

ATMOSPHERE LIGHT

1. Press the “Light Button” button to turn the LED atmosphere light on. The colors will cycle from white to color.
2. Press it again to select a single color. The colors will show in this order: Purple, Purple/Yellow, Yellow/Blue, Blue/Green, Green/Azure Blue, Azure Blue/White, White, then loop again from White to color.
3. Long press the “Light Button” for 3 seconds to turn off the atmosphere light function.

MAINTENANCE

After using 5-6 times or 3-4 days, clean the product as follows:

1. Unplug the unit from its main power supply and remove the cover.
2. Pour out any remaining water from the tank.
3. Add a small amount of dish soap and water into the tank and wipe gently with a dry towel to clean. Note: Avoid getting water into the air outlet.
4. Do not use other acids or aggressive detergents, as this may give off poisonous gas or cause malfunction.
5. Change the water in the water tank every day and clean the diffuser regularly.
6. Pour the water out of the diffuser when it's not in use. Water accumulated over long periods may create bacteria and mildew.
7. Never immerse the unit in water or let water enter the air outlet or any other entrance.

TROUBLESHOOTING

PROBLEM	REASON	SOLUTION
Diffuser won't turn on	The connector is not plugged in or not connected properly.	Check to see if the plug is properly connected.
	The main power supply is not connected properly.	Check the main power supply.
	The product is damaged.	Contact customer service.
The mist is low, or no mist comes out at all	The water tank is overfilled past the max line.	Check the water tank line to see if the water has been overfilled.
	More water needs to be added into the water tank.	Add water.
	The air inlet is blocked.	Check the air outlet and see if the fan is working properly.
	PCB damaged.	Contact customer service.
	The outer cover or water cover is blocked by water film or other foreign objects.	Clean the outer cover and water cover with a towel regularly.

SPECIFICATIONS

PRODUCT NAME	HOLIDAY SNOWFLAKE 3D ROTATING AROMATHERAPY DIFFUSER
INPUT VOLTAGE	AC 100-240V
OUTPUT VOLTAGE	DC24V
CAPACITY	8.4OZ
POWER	10W
LED NIGHT LIGHT	7 COLOR LIGHTS
HUMIDIFICATION	25 ML/H
MATERIAL	PP
HUMIDITY CONTROL	MANUAL
WORKS IN ROOMS FROM:	215-269 SQ. FT.
ULTRASONIC RATE	1.7MHZ AROMA DIFFUSER

WARRANTY/CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.

[Sharper-Image-3D-Snowflake-Aromatherapy-Diffuser-Cleaning-and-Instruction-Manual-Optimized](#)

[Sharper-Image-3D-Snowflake-Aromatherapy-Diffuser-Cleaning-and-Instruction-Manual-Original](#)

Manuals+.